

 
Part Number: 46L3183

# ThinkPad 570 User's Reference Supplement

This supplement includes updated information for the *User's Reference* (part number 27L8798). Use this information instead of the corresponding information in the *User's Reference*.

#### Fn key function

Contrary to what is stated in the *User's Reference*, the **Fn+F11** combination does not change the processor speed. Instead, the key combination switches between power modes as follows:



## **Setting for the TrackPoint**

The *User's Reference* in the "Disabling the TrackPoint" section describes how to set **Auto-Disable** if you are using certain mouse types, but actually the TrackPoint is set to **Auto-Disable** as the default. With this setting, the TrackPoint is disabled automatically if a mouse is connected to the external-input-device connector if any of the following is true:

- The system is starting.
- The system is resuming from suspend mode.
- Your computer is attached to the ThinkPad Port Replicator with Advanced EtherJet Feature.

If no external mouse is connected, the TrackPoint remains enabled.

A mouse that is compatible with the IBM PS/2 Miniature Mouse can work simultaneously with the TrackPoint if the TrackPoint is set to **Enable**. To enable the TrackPoint, do as follows:

- 1 Start the ThinkPad Configuration program.
- 2 Click the TrackPoint ( ) button.
- 3 Click Enable for the TrackPoint.

Copyright IBM Corp. 1999

**Note:** If you are using a mouse connected to the serial connector or the USB connector, you should not use the TrackPoint at the same time. Select **Disable** rather than **Enable** or **Auto-Disable**.

## Solving computer problems

Suspend or hibernation problem

For this troubleshooting, disable the Ethernet port in the Windows NT environment as follows, rather than using the procedure in the *User's Reference*:

Problem	Cause and action
If you are using the port replicator, resuming normal operation from hibernation or suspend mode takes a long time.	This is not a problem. If you have not connected the network cable, the computer queries the Ethernet until the timeout timer is reached. Connect the network cable if you want to use the Ethernet. If you are not using the network, disable the Ethernet port as follows:
	For Windows 98:
	<ol> <li>Double-click a System icon in the Control Panel.</li> <li>Click the Device Manager tab.</li> <li>Double-click Network Adapter.</li> <li>Double-click Intel EtherExpress PRO PCI Adapter.</li> <li>Select the Disable in this hardware profile check box.</li> <li>Click OK.</li> <li>Close all windows.</li> <li>Restart the computer.</li> </ol>
	For Windows NT:
	<ol> <li>Double-click the Devices icon in the Control Panel.</li> <li>Select Intel EtherExpress PRO Adapter and click Stop.</li> <li>Click Startup and select Disabled.</li> <li>Click OK.</li> <li>Click Close.</li> <li>Close all windows.</li> <li>Restart the computer by powering it off and on again.</li> </ol>

## Specification update

The dimensions of the ThinkPad 570 computer are as follows:

- Width: 300 mm (11.8 in.)
- Depth: 240 mm (9.4 in.)
- Height:
  - 12.1-inch LCD model: 26.65 mm (1.0 in.)
  - 13.3-inch LCD model: 27.95 mm (1.1 in.)

## Additional trademark

PC-Doctor is a trademark of Watergate Software, Inc., in the United States and/or other countries.

## **AC** Adapter information update

The AC Adapter complies with the Electrical Appliance and Material Control Law of Japan.

Rating: Input ac 100 V 50/60 Hz

Output dc 16 V

Certificate numbers ( $\overline{\mathbb{V}}$ ): 91-53393

91-56271