

NNCLI Reference



Alteon OS™ 21.0

Layer 2-3 GbE Switch Module
for IBM BladeCenter

Version 1.2

Part Number: 24R9739, January 2006

NORTEL
NETWORKS™

4655 Great America Parkway
Santa Clara, CA 95054
www.nortelnetworks.com
Reference: 321694A

Copyright © 2006 Nortel Networks, Inc., 4655 Great America Parkway, Santa Clara, California, 95054, USA. All rights reserved. Part Number: 24R9739.

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this document may be reproduced in any form by any means without prior written authorization of Nortel Networks, Inc. Documentation is provided “as is” without warranty of any kind, either express or implied, including any kind of implied or express warranty of non-infringement or the implied warranties of merchantability or fitness for a particular purpose.

U.S. Government End Users: This document is provided with a “commercial item” as defined by FAR 2.101 (Oct. 1995) and contains “commercial technical data” and “commercial software documentation” as those terms are used in FAR 12.211-12.212 (Oct. 1995). Government End Users are authorized to use this documentation only in accordance with those rights and restrictions set forth herein, consistent with FAR 12.211- 12.212 (Oct. 1995), DFARS 227.7202 (JUN 1995) and DFARS 252.227-7015 (Nov. 1995).

Nortel Networks, Inc. reserves the right to change any products described herein at any time, and without notice. Nortel Networks, Inc. assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by Nortel Networks, Inc. The use and purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of Nortel Networks, Inc.

Originated in the USA.

Alteon OS, and Alteon are trademarks of Nortel Networks, Inc. in the United States and certain other countries. Cisco® and EtherChannel® are registered trademarks of Cisco Systems, Inc. in the United States and certain other countries. Any other trademarks appearing in this manual are owned by their respective companies.



Contents

Preface 11

- Who Should Use This Book 11
- How This Book Is Organized 11
- Typographic Conventions 12
- How to Get Help 14

Chapter 1: NNCLI Basics 15

- Accessing the NNCLI 15
- NNCLI command modes 16
- Global Commands 19
- Command Line Interface Shortcuts 20
 - Command Abbreviation 20
 - Tab Completion 20
- User Access Levels 21
- Idle Timeout 22

Chapter 2: Information Commands 23

- System Commands 24
 - SNMPv3 System Commands 25
 - SNMPv3 USM User Table Information 26
 - SNMPv3 View Table Information 27
 - SNMPv3 Access Table Information 28
 - SNMPv3 Group Table Information 29
 - SNMPv3 Community Table Information 30
 - SNMPv3 Target Address Table Information 30
 - SNMPv3 Target Parameters Table Information 31
 - SNMPv3 Notify Table Information 32
 - SNMPv3 Dump Information 33
 - General System Information 34
 - Show Recent Syslog Messages 35

User Status	36
Layer 2 Commands	37
FDB Information Commands	38
Show All FDB Information	40
Clearing Entries from the Forwarding Database	40
Link Aggregation Control Protocol Commands	41
Link Aggregation Control Protocol	41
802.1p Information	42
802.1x Information	44
Spanning Tree Information	46
RSTP/MSTP Information	49
Common Internal Spanning Tree Information	52
Trunk Group Information	54
VLAN Information	55
Failover Information	56
Layer 3 Commands	57
IP Routing Information	57
Show All IP Route Information	59
ARP Information	60
Show All ARP Entry Information	61
ARP Address List Information	62
BGP Information Commands	63
BGP Peer information	63
BGP Summary information	64
Dump BGP Information	64
OSPF Information Commands	65
OSPF General Information	66
OSPF Interface Information	67
OSPF Database Information Commands	67
OSPF Information Route Codes	69
Routing Information Protocol Commands	70
RIP Routes Information	70
RIP User Configuration	71
IP Information	71
IGMP Multicast Group Information Commands	72
IGMP Multicast Router Port Information	73
VRRP Information	73
Link Status Information	75

Port Information	76
Logical Port to GEA Port Mapping	77
Fiber Port SFP Status	78
Information Dump	78

Chapter 3: Statistics Commands 79

Port Statistics Commands	80
802.1x Authenticator Statistics	81
802.1x Authenticator Diagnostics	82
Bridging Statistics	84
Ethernet Statistics	86
Interface Statistics	89
Interface Protocol Statistics	91
Link Statistics	92
Layer 2 Statistics Commands	92
FDB Statistics	92
LACP Statistics	93
Layer 3 Statistics Commands	94
IP Statistics	96
Route Statistics	98
ARP statistics	99
ICMP Statistics	100
TCP Statistics	102
UDP Statistics	103
IGMP Statistics	104
Interface Statistics	105
VRRP Statistics	107
Routing Information Protocol Statistics	108
Management Processor Statistics	109
MP Packet Statistics	109
TCP Statistics	110
UDP Statistics	111
CPU Statistics	111
Access Control List Statistics	112
ACL Statistics	112
ACL Meter Statistics	113
SNMP Statistics	113
NTP Statistics	118

Statistics Dump 119

Chapter 4: Configuration Commands 121

Viewing and Saving Changes 121

 Saving the Configuration 122

System Configuration Commands 122

 System Host Log Configuration 123

 SSH Server Configuration Commands 124

 RADIUS Server Configuration Commands 126

 TACACS+ Server Configuration Commands 127

 NTP Server Configuration Commands 129

 System SNMP Configuration Commands 130

 SNMPv3 Configuration Commands 131

 User Security Model Configuration Commands 133

 SNMPv3 View Configuration Commands 134

 View-based Access Control Model Configuration Commands 135

 SNMPv3 Group Configuration Commands 137

 SNMPv3 Community Table Configuration Commands 137

 SNMPv3 Target Address Table Configuration Commands 138

 SNMPv3 Target Parameters Table Configuration Commands 139

 SNMPv3 Notify Table Configuration Commands 141

System Access Commands 142

 Management Network Commands 143

 User Access Control Configuration Commands 143

 System User ID Configuration Commands 144

 HTTPS Access Configuration Commands 145

Port Configuration Commands 146

 Port Link Configuration Commands 147

 Temporarily Disabling a Port 148

 ACL Port Commands 149

 ACL Port Metering Commands 149

 Re-Mark Commands 150

 Re-Marking In-Profile Commands 151

 Update User Priority Commands 152

 Re-Marking Out-of-Profile Commands 152

Layer 2 Commands 153

 802.1x Configuration Commands 153

 802.1x Global Configuration 154

802.1x Port Configuration	156
Rapid Spanning Tree Protocol/Multiple Spanning Tree Protocol Configuration Commands	158
Common Internal Spanning Tree Configuration Commands	159
CIST Bridge Configuration Commands	160
CIST Port Configuration Commands	161
Spanning Tree Configuration Commands	162
Bridge Spanning Tree Configuration Commands	163
Spanning Tree Port Configuration Commands	165
Trunk Configuration Commands	167
IP Trunk Hash Commands	168
Layer 2 IP Trunk Hash Commands	168
Link Aggregation Control Protocol Commands	169
LACP Port Commands	170
Failover Commands	171
Failover Trigger Configuration	172
Auto Monitor Configuration	172
VLAN Configuration Commands	173
Layer 3 Commands	175
IP Interface Configuration Commands	176
Default Gateway Configuration Commands	177
Default Gateway Metrics	178
IP Static Route Configuration Commands	178
ARP Configuration Commands	178
ARP Static Configuration Commands	179
IP Forwarding Configuration Commands	180
Network Filter Configuration Commands	180
Routing Map Configuration Commands	181
IP Access List Configuration Commands	183
Autonomous System Filter Path Commands	184
Routing Information Protocol Configuration	185
Routing Information Protocol Interface Configuration Commands	185
Open Shortest Path First Configuration Commands	188
Area Index Configuration Commands	189
OSPF Summary Range Configuration Commands	190
OSPF Interface Configuration Commands	191
OSPF Virtual Link Configuration Commands	193
OSPF Host Entry Configuration Commands	194

OSPF Route Redistribution Configuration Commands	195
OSPF MD5 Key Configuration Commands	195
Border Gateway Protocol Configuration Commands	196
BGP Peer Configuration Commands	197
BGP Redistribution Configuration Commands	199
BGP Aggregation Configuration Commands	200
IGMP Configuration	201
IGMP Snooping Configuration	201
IGMP Static Multicast Router Configuration	202
IGMP Filtering Configuration	203
IGMP Filter Definition	204
IGMP Filtering Port Configuration	205
Domain Name System Configuration	205
Bootstrap Protocol Relay Configuration	206
VRRP Configuration	207
Virtual Router Configuration	207
Virtual Router Priority Tracking Configuration Commands	209
Virtual Router Group Configuration Commands	210
Virtual Router Group Priority Tracking Configuration Commands	212
VRRP Interface Configuration Commands	213
VRRP Tracking Configuration Commands	215
Quality of Service Commands	216
802.1p Commands	216
DSCP Commands	217
Access Control Commands	218
Access Control List Commands	219
Ethernet Filtering Commands	220
IP version 4 Filtering Commands	221
TCP/UDP Filtering Commands	222
Packet Format Filtering Commands	223
ACL Block Commands	223
ACL Group Commands	224
Port Mirroring Commands	224
Port-Mirroring Commands	226
Configuration Dump	226
Saving the Active Switch Configuration	227
Restoring the Active Switch Configuration	227

Chapter 5: Operations Commands 229

- Operations-Level Port Options 230
- Operations-Level Port 802.1x Options 231
- Operations-Level VRRP Options 231
- Operations-Level BGP Options 232

Chapter 6: Boot Options 233

- Scheduled Reboot of the Switch 233
 - Scheduled Reboot Commands 234
- Updating the Switch Software Image 234
 - Loading New Software to Your Switch 234
 - Selecting a Software Image to Run 236
 - Uploading a Software Image from Your Switch 237
- Selecting a Configuration Block 238
- Resetting the Switch 239
 - Accessing the Alteon OS CLI 239

Chapter 7: Maintenance Commands 241

- System Maintenance Commands 242
- Forwarding Database Commands 242
- Debugging Commands 243
- ARP Cache Commands 245
- IP Route Manipulation Commands 246
- IGMP Group Information 247
- Uuencode Flash Dump 247
- TFTP or FTP System Dump Put 248
- Clearing Dump Information 249
- Panic Command 249
- Unscheduled System Dumps 250

Index 251



Preface

The Alteon OS 21.0 NNCLI Reference describes how to configure and use the software with your GbE Switch Module. The guide lists each command, together with the complete syntax and a functional description, from the Nortel Networks Command Line Interface (NNCLI).

For documentation on installing the switches physically, see the *Installation Guide* for your GbE Switch Module.

Who Should Use This Book

This *NNCLI Reference* is intended for network installers and system administrators engaged in configuring and maintaining a network. The administrator should be familiar with Ethernet concepts, IP addressing, the IEEE 802.1d Spanning Tree Protocol, and SNMP configuration parameters.

How This Book Is Organized

Chapter 1 “NNCLI Basics,” describes how to connect to the switch and access the information and configuration commands.

Chapter 3 “NNCLI Basics,” provides an overview of the command syntax, including command modes, global commands, and shortcuts.

Chapter 2 “Information Commands,” shows how to view switch configuration parameters.

Chapter 3 “Statistics Commands,” shows how to view switch performance statistics.

Chapter 4 “Configuration Commands,” shows how to configure switch system parameters, ports, VLANs, Spanning Tree Protocol, SNMP, Port Mirroring, IP Routing, Port Trunking, and more.

Chapter 5 “Operations Commands,” shows how to use commands which affect switch performance immediately, but do not alter permanent switch configurations (such as temporarily disabling ports). The commands describe how to activate or deactivate optional software features.

Chapter 6 “Boot Options,” describes the use of the primary and alternate switch images, how to load a new software image, and how to reset the software to factory defaults.

Chapter 7 “Maintenance Commands,” shows how to generate and access a dump of critical switch state information, how to clear it, and how to clear part or all of the forwarding database.

“Index” includes pointers to the description of the key words used throughout the book.

Typographic Conventions

The following table describes the typographic styles used in this book.

Table 1 Typographic Conventions

Typeface or Symbol	Meaning
angle brackets < >	Indicate a variable to enter based on the description inside the brackets. Do not type the brackets when entering the command. Example: If the command syntax is <code>ping <ip-address></code> you enter ping 192.32.10.12
bold body text	Indicates objects such as window names, dialog box names, and icons, as well as user interface objects such as buttons, and tabs.
bold Courier text	Indicates command names, options, and text that you must enter. Example: Use the show ip arp command.
braces { }	Indicate required elements in syntax descriptions where there is more than one option. You must choose only one of the options. Do not type the braces when entering the command. Example: If the command syntax is show mlt {<1-13> hash information} you must enter: show mlt <1-13> or show mlt hash or show mlt information

Table 1 Typographic Conventions

Typeface or Symbol	Meaning
brackets []	Indicate optional elements in syntax descriptions. Do not type the brackets when entering the command. Example: If the command syntax is show ip ospf interface [<i><interface-instance></i>] you can enter show ip ospf interface or show ip ospf interface <i><1-128></i>
italic text	Indicates variables in command syntax descriptions. Also indicates new terms and book titles. Where a variable is two or more words, the words are connected by an underscore. Example: If the command syntax is show spanning-tree stp <i><stg-identifier></i> <i>stg-identifier</i> represents a number between 1-32.
plain Courier text	Indicates command syntax and system output, for example, prompts and system messages. Example: <code>configure terminal</code>
vertical line	Separates choices for command keywords and arguments. Enter only one of the choices. Do not type the vertical line when entering the command. Example: If the command syntax is Example: If the command syntax is show mlt { <i><1-13></i> hash information } you must enter: show mlt <i><1-13></i> or show mlt hash or show mlt information

How to Get Help

If you need help, service, or technical assistance, see the “Getting help and technical assistance” appendix in the Nortel Networks *Layer 2-3 GbE Switch Module for IBM BladeCenter Installation Guide* on the *IBM BladeCenter Documentation CD*.



CHAPTER 1

NNCLI Basics

Your GbE Switch Module (GbESM) is ready to perform basic switching functions right out of the box. Some of the more advanced features, however, require some administrative configuration before they can be used effectively.

This guide describes the individual NNCLI commands available for the GbESM.

The NNCLI provides a direct method for collecting switch information and performing switch configuration. Using a basic terminal, the NNCLI allows you to view information and statistics about the switch, and to perform any necessary configuration.

This chapter explains how to access the Nortel Networks Command Line Interface (NNCLI) for the switch.

Accessing the NNCLI

The first time you start the GbESM, it boots into Alteon OS CLI. To access the NNCLI, enter the following command and reset the GbESM:

```
Main# boot/mode nncli
```

To access the Alteon OS CLI, enter the following command from the NNCLI and reload the GbESM:

```
Router(config)# boot cli-mode aos
```

The switch retains your CLI selection, even when you reset the configuration to factory defaults. The CLI boot mode is not part of the configuration settings.

If you downgrade the switch software to version 1.1 or an earlier release, it will boot into Alteon OS CLI. However, the switch retains the CLI boot mode, and will restore your CLI choice once the software is upgraded to version 1.2 or higher.

NNCLI command modes

The NNCLI has three major command modes listed in order of increasing privileges, as follows:

- User EXEC mode
This is the initial mode of access. By default, password checking is disabled for this mode.
- Privileged EXEC mode
This mode is accessed from User EXEC mode. A password is required to enter Privileged EXEC mode. The default password is **enable**.
- Global Configuration mode
This mode allows you to make changes to the running configuration. If you save the configuration, the settings survive a reload of the GbESM. Several sub-modes can be accessed from the Global Configuration mode. For more details, see [Table 1-1 on page 17](#).

Each mode provides a specific set of commands. The command set of a higher-privilege mode is a superset of a lower-privilege mode. That is, all lower-privilege mode commands are accessible when using a higher-privilege mode.

Table 1-1 lists the NNCLI command modes.

Table 1-1 NNCLI Command Modes

Command Mode/Prompt	Command used to enter or exit
User EXEC Router>	Default mode, entered automatically Exit: exit or logout
Privileged EXEC Router#	Enter Privileged EXEC mode, from User EXEC mode: enable Exit to User EXEC mode: disable Quit NNCLI: exit or logout
Global Configuration Router (config) #	Enter Global Configuration mode, from Privileged EXEC mode: configure terminal Exit to Privileged EXEC: end or exit
Interface IP Configuration Router (config-ip-if) #	Enter Interface IP Configuration mode, from Global Configuration mode: interface ip <if-number> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
Port Configuration Router (config-if) #	Enter Port Configuration mode, from Global Configuration mode: interface port <port-number> Exit to Privileged EXEC mode: exit Exit to Global Configuration mode: end
VLAN Configuration Router (config-vlan) #	Enter VLAN Configuration mode, from Global Configuration mode: vlan <1-4095> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
OSPF Configuration Router (config-router-ospf) #	Enter OSPF Configuration mode, from Global Configuration mode: router ospf Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
BGP Configuration Router (config-router-bgp) #	Enter BGP Configuration mode, from Global Configuration mode: router bgp Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
RIP Configuration Router (config-router-rip) #	Enter RIP Configuration mode, from Global Configuration mode: router rip Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end

Table 1-1 NNCLI Command Modes

Command Mode/Prompt	Command used to enter or exit
Route Map Configuration Router (config-route-map) #	Enter Route Map Configuration mode, from Global Configuration mode: route-map <1-32> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
VRRP Configuration Router (config-vrrp) #	Enter VRRP Configuration mode, from Global Configuration mode: router vrrp Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end

Global Commands

Some basic commands are recognized throughout the NNCLI command modes. These commands are useful for obtaining online help, navigating through the interface, and for saving configuration changes.

For help on a specific command, type the command, followed by `help`.

Table 1-2 Description of Global Commands

Command	Action
<code>?</code>	Provides more information about a specific command or lists commands available at the current level.
<code>exit</code>	Go up one level in the command mode structure.
<code>copy running-config startup-config</code>	Write configuration changes to non-volatile flash memory.
<code>exit</code> or <code>quit</code>	Exit from the command line interface and log out.
<code>ping</code>	<p>Use this command to verify station-to-station connectivity across the network. The format is as follows:</p> <pre>ping <host name> <IP address> [tries (1-32)] [msec delay]]</pre> <p>Where <i>IP address</i> is the hostname or IP address of the device, <i>tries</i> (optional) is the number of attempts (1-32), <i>msec delay</i> (optional) is the number of milliseconds between attempts. The DNS parameters must be configured if specifying hostnames.</p>
<code>tracert</code>	<p>Use this command to identify the route used for station-to-station connectivity across the network. The format is as follows:</p> <pre>tracert <host name> <IP address> [<max-hops (1-32)> [msec delay]]</pre> <p>Where <i>IP address</i> is the hostname or IP address of the target station, <i>max-hops</i> (optional) is the maximum distance to trace (1-16 devices), and <i>delay</i> (optional) is the number of milliseconds for wait for the response. The DNS parameters must be configured if specifying hostnames.</p>
<code>telnet</code>	<p>This command is used to telnet out of the switch. The format is as follows:</p> <pre>telnet <hostname> <IP address> [port]</pre> <p>Where <i>IP address</i> is the hostname or IP address of the device.</p>
<code>show history</code>	This command brings up the history of the last 10 commands.
<code>console-log</code>	Enables or disables console logging for the current session.

Command Line Interface Shortcuts

Command Abbreviation

Most commands can be abbreviated by entering the first characters which distinguish the command from the others in the same mode. For example, consider the following full command and a valid abbreviation:

```
Router(config)# spanning-tree stp 2 bridge hello 2
```

or

```
Router(config)# sp stp 2 br h 2
```

Tab Completion

By entering the first letter of a command at any prompt and hitting <Tab>, the NNCLI will display all available commands or options that begin with that letter. Entering additional letters will further refine the list of commands or options displayed. If only one command fits the input text when <Tab> is pressed, that command will be supplied on the command line, waiting to be entered.

User Access Levels

To enable better switch management and user accountability, three levels or *classes* of user access have been implemented on the GbE Switch Module. Levels of access to CLI, Web management functions, and screens increase as needed to perform various switch management tasks. Conceptually, access classes are defined as follows:

- **user:** Interaction with the switch is completely passive—nothing can be changed on the GbE Switch Module. Users may display information that has no security or privacy implications, such as switch statistics and current operational state information.
- **oper:** Operators can only effect temporary changes on the GbE Switch Module. These changes will be lost when the switch is reloaded/reset. Operators have access to the switch management features used for daily switch operations. Because any changes an operator makes are undone by a reset of the switch, operators cannot severely impact switch operation.
- **admin:** Administrators are the only ones that may make permanent changes to the switch configuration—changes that are persistent across a reboot/reset of the switch. Administrators can access switch functions to configure and troubleshoot problems on the GbE Switch Module. Because administrators can also make temporary (operator-level) changes as well, they must be aware of the interactions between temporary and permanent changes.

Access to switch functions is controlled through the use of unique surnames and passwords. Once you are connected to the switch via local Telnet, remote Telnet, or SSH, you are prompted to enter a password. The default user names/password for each access level are listed in the following table.

NOTE – It is recommended that you change default switch passwords after initial configuration and as regularly as required under your network security policies.

Table 1-3 User Access Levels

User Account	Description and Tasks Performed	Password
User	The User has no direct responsibility for switch management. He or she can view all switch status information and statistics, but cannot make any configuration changes to the switch.	user
Operator	The Operator manages all functions of the switch. The Operator can reset ports or the entire switch.	oper

Table 1-3 User Access Levels

User Account	Description and Tasks Performed	Password
Administrator	The superuser Administrator has complete access to all command modes, information, and configuration commands on the GbE Switch Module, including the ability to change both the user and administrator passwords.	admin

NOTE – With the exception of the “admin” user, access to each user level can be disabled by setting the password to an empty value.

Idle Timeout

By default, the switch will disconnect your Telnet session after five minutes of inactivity. This function is controlled by the idle timeout parameter, which can be set from 1 to 60 minutes.

CHAPTER 2

Information Commands

You can view configuration information for the switch in both the user and administrator command modes. This chapter discusses how to use the command line interface to display switch information.

Table 2-1 General Information Commands

Command Syntax and Usage

show interface link

Displays configuration information about each port, including:

- Port alias
- Port speed (10, 100, 10/100, or 1000)
- Duplex mode (half, full, or auto)
- Flow control for transmit and receive (no, yes, or auto)
- Link status (up or down)

Command mode: Any

For details, see [page 75](#).

show interface information

Displays port status information, including:

- Port alias
- Whether the port uses VLAN Tagging or not
- Port VLAN ID (PVID)
- Port name
- VLAN membership

Command mode: Any

For details, see [page 76](#).

show geaport

Displays the GbESM port mapping between the two Gigabit Ethernet Aggregators (GEA).

Command mode: Any

For details, see [page 77](#).

Table 2-1 General Information Commands

Command Syntax and Usage

show sfp

Displays the status of the Small Form Pluggable (SFP) module on each Fiber External Port.

Command mode: Any

For details, see [page 78](#).

show information-dump

Dumps all switch information available (10K or more, depending on your configuration).

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

Command mode: Any

System Commands

The information provided by each command option is briefly described in [Table 2-2 on page 24](#), with pointers to where detailed information can be found.

Table 2-2 System Command Options

Command Syntax and Usage

show sys-info

Displays system information, including:

- System date and time
- Switch model name and number
- Switch name and location
- Time of last boot
- MAC address of the switch management processor
- IP address of IP interface #1
- Hardware version and part number
- Software image file and version number
- Configuration name
- Log-in banner, if one is configured

Command mode: Any

For details, see [page 34](#).

show logging messages

Displays 64 most recent syslog messages.

Command mode: Any

For details, see [page 35](#).

Table 2-2 System Command Options

Command Syntax and Usage

show access user

Displays configured user names and their status.

Command mode: All except User EXEC

SNMPv3 System Commands

SNMP version 3 (SNMPv3) is an extensible SNMP Framework that supplements the SNMPv2 Framework by supporting the following:

- a new SNMP message format
- security for messages
- access control
- remote configuration of SNMP parameters

For more details on the SNMPv3 architecture please refer to RFC2271 to RFC2276.

Table 2-3 SNMPv3 Command Options

Command Syntax and Usage

show snmp-server user information

Displays User Security Model (USM) table information.

Command mode: AnyTo view the table, see [page 26](#).

show snmp-server view information

Displays information about view, sub trees, mask and type of view.

Command mode: AnyTo view a sample, see [page 27](#).

show snmp-server access information

Displays View-based Access Control information.

Command mode: AnyTo view a sample, see [page 28](#).

show snmp-server group information

Displays information about the group that includes, the security model, user name, and group name.

Command mode: AnyTo view a sample, see [page 29](#).

Table 2-3 SNMPv3 Command Options

Command Syntax and Usage

show snmp-server community information

Displays information about the community table information.

Command mode: AnyTo view a sample, see [page 30](#).

show snmp-server target-address information

Displays the Target Address table information.

Command mode: AnyTo view a sample, see [page 30](#).

show snmp-server target-parameters information

Displays the Target parameters table information.

Command mode: AnyTo view a sample, see [page 31](#).

show snmp-server notify information

Displays the Notify table information.

Command mode: AnyTo view a sample, see [page 32](#).

show snmp-server information

Displays all the SNMPv3 information.

Command mode: AnyTo view a sample, see [page 33](#).

SNMPv3 USM User Table Information

The User-based Security Model (USM) in SNMPv3 provides security services such as authentication and privacy of messages. This security model makes use of a defined set of user identities displayed in the USM user table. The following command displays SNMPv3 user information:

show snmp-server user information**Command mode:** Any

The USM user table contains information like:

- the user name
- a security name in the form of a string whose format is independent of the Security Model

- an authentication protocol, which is an indication that the messages sent on behalf of the user can be authenticated
- the privacy protocol.

usmUser Table:	
User Name	Protocol

admin	NO AUTH, NO PRIVACY
adminmd5	HMAC_MD5, DES PRIVACY
adminsha	HMAC_SHA, DES PRIVACY
v1v2only	NO AUTH, NO PRIVACY

Table 2-4 USM User Table Information Parameters

Field	Description
User Name	This is a string that represents the name of the user that you can use to access the switch.
Protocol	This indicates whether messages sent on behalf of this user are protected from disclosure using a privacy protocol. Alteon OS 21.0 supports DES algorithm for privacy. The software also supports two authentication algorithms: MD5 and HMAC-SHA.

SNMPv3 View Table Information

The user can control and restrict the access allowed to a group to only a subset of the management information in the management domain that the group can access within each context by specifying the group's rights in terms of a particular MIB view for security reasons.

The following command displays the SNMPv3 View Table:

```
show snmp-server view information
```

Command mode: Any

View Name	Subtree	Mask	Type

org	1.3		included
v1v2only	1.3		included
v1v2only	1.3.6.1.6.3.15		excluded
v1v2only	1.3.6.1.6.3.16		excluded
v1v2only	1.3.6.1.6.3.18		excluded

Table 2-5 SNMPv3 View Table Information Parameters

Field	Description
View Name	Displays the name of the view.
Subtree	Displays the MIB subtree as an OID string. A view subtree is the set of all MIB object instances which have a common Object Identifier prefix to their names.
Mask	Displays the bit mask.
Type	Displays whether a family of view subtrees is included or excluded from the MIB view.

SNMPv3 Access Table Information

The access control sub system provides authorization services.

The `vacmAccessTable` maps a group name, security information, a context, and a message type, which could be the read or write type of operation or notification into a MIB view.

The View-based Access Control Model defines a set of services that an application can use for checking access rights of a group. This group's access rights are determined by a read-view, a write-view and a notify-view. The read-view represents the set of object instances authorized for the group while reading the objects. The write-view represents the set of object instances authorized for the group when writing objects. The notify-view represents the set of object instances authorized for the group when sending a notification.

The following command displays SNMPv3 access information:

```
show snmp-server access information
```

Command mode: Any

Group Name	Prefix	Model	Level	Match	ReadV	WriteV	NotifyV
admin		usm	noAuthNoPriv	exact	org	org	org
v1v2grp		snmpv1	noAuthNoPriv	exact	org	org	v1v2only
admingrp		usm	authPriv	exact	org	org	org

Table 2-6 SNMPv3 Access Table Information

Field	Description
Group Name	Displays the name of group.
Prefix	Displays the prefix that is configured to match the values.
Model	Displays the security model used, for example, SNMPv1, or SNMPv2 or USM.
Level	Displays the minimum level of security required to gain rights of access. For example, noAuthNoPriv, authNoPriv, or authPriv.
Match	Displays the match for the contextName. The options are: exact and prefix.
ReadV	Displays the MIB view to which this entry authorizes the read access.
WriteV	Displays the MIB view to which this entry authorizes the write access.
NotifyV	Displays the Notify view to which this entry authorizes the notify access.

SNMPv3 Group Table Information

A group is a combination of security model and security name that defines the access rights assigned to all the security names belonging to that group. The group is identified by a group name.

The following command displays SNMPv3 group information:

```
show snmp-server group information
```

Command mode: Any

Sec Model	User Name	Group Name
-----	-----	-----
snmpv1	v1v2only	v1v2grp
usm	admin	admin
usm	adminmd5	admingrp
usm	adminsha	admingrp

Table 2-7 SNMPv3 Group Table Information Parameters

Field	Description
Sec Model	Displays the security model used, which is any one of: USM, SNMPv1, SNMPv2, and SNMPv3.
User Name	Displays the name for the group.
Group Name	Displays the access name of the group.

SNMPv3 Community Table Information

This command displays the community table information stored in the SNMP engine.

The following command displays SNMPv3 community information:

```
show snmp-server community information
```

Command mode: Any

Index	Name	User Name	Tag
-----	-----	-----	-----
trap1	public	v1v2only	v1v2trap

Table 2-8 SNMPv3 Community Table Parameters

Field	Description
Index	Displays the unique index value of a row in this table
Name	Displays the community string, which represents the configuration.
User Name	Displays the User Security Model (USM) user name.
Tag	Displays the community tag. This tag specifies a set of transport endpoints from which a command responder application accepts management requests and to which a command responder application sends an SNMP trap.

SNMPv3 Target Address Table Information

The following command displays SNMPv3 target address information:

```
show snmp-server target-address information
```

Command mode: Any

This command displays the SNMPv3 target address table information, which is stored in the SNMP engine.

Name	Transport Addr	Port	Taglist	Params
trap1	47.81.25.66	162	v1v2trap	v1v2param

Table 2-9 SNMPv3 Target Address Table Information Parameters

Field	Description
Name	Displays the locally arbitrary, but unique identifier associated with this <code>snmpTargetAddrEntry</code> .
Transport Addr	Displays the transport addresses.
Port	Displays the SNMP UDP port number.
Taglist	This column contains a list of tag values which are used to select target addresses for a particular SNMP message.
Params	The value of this object identifies an entry in the <code>snmpTargetParamsTable</code> . The identified entry contains SNMP parameters to be used when generating messages to be sent to this transport address.

SNMPv3 Target Parameters Table Information

The following command displays SNMPv3 target parameters information:

```
show snmp-server target-parameters information
```

Command mode: Any

Name	MP Model	User Name	Sec Model	Sec Level
v1v2param	snmpv2c	v1v2only	snmpv1	noAuthNoPriv

Table 2-10 SNMPv3 Target Parameters Table Information

Field	Description
Name	Displays the locally arbitrary, but unique identifier associated with this <code>snmpTargetParamsEntry</code> .
MP Model	Displays the Message Processing Model used when generating SNMP messages using this entry.
User Name	Displays the <code>securityName</code> , which identifies the entry on whose behalf SNMP messages will be generated using this entry.
Sec Model	Displays the security model used when generating SNMP messages using this entry. The system may choose to return an <code>inconsistentValue</code> error if an attempt is made to set this variable to a value for a security model which the system does not support.
Sec Level	Displays the level of security used when generating SNMP messages using this entry.

SNMPv3 Notify Table Information

The following command displays the SNMPv3 Notify Table:

```
show snmp-server notify information
```

Command mode: Any

Name	Tag
-----	-----
v1v2trap	v1v2trap

Table 2-11 SNMPv3 Notify Table Information

Field	Description
Name	The locally arbitrary, but unique identifier associated with this <code>snmpNotifyEntry</code> .
Tag	This represents a single tag value which is used to select entries in the <code>snmpTargetAddrTable</code> . Any entry in the <code>snmpTargetAddrTable</code> that contains a tag value equal to the value of this entry, is selected. If this entry contains a value of zero length, no entries are selected.

SNMPv3 Dump Information

The following command displays SNMPv3 information:

```
show snmp-server information
```

Command mode: Any

```

usmUser Table:
User Name                Protocol
-----
admin                    NO AUTH, NO PRIVACY
adminmd5                 HMAC_MD5, DES PRIVACY
adminsha                 HMAC_SHA, DES PRIVACY
v1v2only                NO AUTH, NO PRIVACY

vacmAccess Table:
Group Name Prefix Model Level Match ReadV WriteV NotifyV
-----
admin          usm      noAuthNoPriv exact  org      org      org
v1v2grp       snmpv1 noAuthNoPriv exact  org      org      v1v2only
admingrp      usm      authPriv     exact  org      org      org

vacmViewTreeFamily Table:
View Name      Subtree      Mask      Type
-----
org            1.3          included
v1v2only      1.3          included
v1v2only      1.3.6.1.6.3.15 excluded
v1v2only      1.3.6.1.6.3.16 excluded
v1v2only      1.3.6.1.6.3.18 excluded

vacmSecurityToGroup Table:
Sec Model  User Name      Group Name
-----
snmpv1    v1v2only      v1v2grp
usm       admin         admin
usm       adminsha      admingrp

snmpCommunity Table:
Index      Name      User Name      Tag
-----

snmpNotify Table:
Name      Tag
-----

snmpTargetAddr Table:
Name      Transport Addr Port Taglist      Params
-----

snmpTargetParams Table:
Name      MP Model User Name      Sec Model Sec Level
-----

```

General System Information

The following command displays system information:

```
show sys-info
```

Command mode: Any

```
System Information at 0:16:42 Thu Dec 1, 2005

Nortel Networks Layer 2-3 GbE Switch Module

Switch is up 5 days, 2 hours, 16 minutes and 42 seconds.
Last boot: 0:00:47 Thu Dec 1, 2005 (power cycle)

MAC address: 00:11:58:ad:a3:00 IP (If 128) address: 10.90.90.97
Software Version 1.2.0 (FLASH image1), factory default configura-
tion.

PCBA Part Number: 317857-A
FAB Number: EL4512011
Serial Number: YJ1WDW47N277
Manufacturing Date:
Hardware Revision: 0
Board Revision: 0
PLD Firmware Version: 1.0

Temperature Sensor 1 (Warning): 30.0 C (Warn at 75.0 C/Recover at
70.0 C)
Temperature Sensor 2 (Shutdown): 30.5 C (Warn at 90.0 C/Recover at
80.0 C)
```

NOTE – The display of temperature will come up only if the temperature of any of the sensors exceeds the temperature threshold. There will be a warning from the software if any of the sensors exceeds this temperature threshold. The switch will shut down if the power supply overheats.

System information includes:

- System date and time
- Switch model
- Switch name and location
- Time of last boot
- MAC address of the switch management processor
- IP address of IP interface #1

- Hardware version and part number
- Software image file and version number
- Configuration name
- Log-in banner, if one is configured

Show Recent Syslog Messages

The following command displays system log messages:

```
show logging messages
```

Command mode: Any

Date	Time	Criticality level	Message
Jul 8	17:25:41	NOTICE	system: link up on port INT1
Jul 8	17:25:41	NOTICE	system: link up on port INT8
Jul 8	17:25:41	NOTICE	system: link up on port INT7
Jul 8	17:25:41	NOTICE	system: link up on port INT2
Jul 8	17:25:41	NOTICE	system: link up on port INT1
Jul 8	17:25:41	NOTICE	system: link up on port INT4
Jul 8	17:25:41	NOTICE	system: link up on port INT3
Jul 8	17:25:41	NOTICE	system: link up on port INT6
Jul 8	17:25:41	NOTICE	system: link up on port INT5
Jul 8	17:25:41	NOTICE	system: link up on port EXT4
Jul 8	17:25:41	NOTICE	system: link up on port EXT1
Jul 8	17:25:41	NOTICE	system: link up on port EXT3
Jul 8	17:25:41	NOTICE	system: link up on port EXT2
Jul 8	17:25:41	NOTICE	system: link up on port INT3
Jul 8	17:25:42	NOTICE	system: link up on port INT2
Jul 8	17:25:42	NOTICE	system: link up on port INT4
Jul 8	17:25:42	NOTICE	system: link up on port INT3
Jul 8	17:25:42	NOTICE	system: link up on port INT6
Jul 8	17:25:42	NOTICE	system: link up on port INT5
Jul 8	17:25:42	NOTICE	system: link up on port INT1
Jul 8	17:25:42	NOTICE	system: link up on port INT6

Each syslog message has a criticality level associated with it, included in text form as a prefix to the log message. One of eight different prefixes is used, depending on the condition that the administrator is being notified of, as shown below.

- EMERG: indicates the system is unusable
- ALERT: Indicates action should be taken immediately
- CRIT: Indicates critical conditions
- ERR: indicates error conditions or errored operations
- WARNING: indicates warning conditions

- NOTICE: indicates a normal but significant condition
- INFO: indicates an information message
- DEBUG: indicates a debug-level message

User Status

The following command displays user status information:

```
show access user
```

Command mode: All except User EXEC

```
Username:  
  user      - enabled  
  oper      - disabled  
  admin     - Always Enabled
```

This command displays the status of the configured usernames.

Layer 2 Commands

Table 2-12 Layer 2 Command Options

Command Syntax and Usage

show qos transmit-queue information

Displays 802.1p Information.

Command mode: Any

For details, see [page 42](#).

show dot1x information

Displays 802.1x Information.

Command mode: Any

For details, see [page 44](#).

show spanning-tree stp <stg-identifier> information

In addition to seeing if STG is enabled or disabled, you can view the following STG bridge information:

- Priority
- Hello interval
- Maximum age value
- Forwarding delay
- Aging time

You can also see the following port-specific STG information:

- Port alias and priority
- Cost
- State

Command mode: Any

For details, see [page 46](#).

show spanning-tree mstp cist information

Displays Common internal Spanning Tree (CIST) bridge information, including the following:

- Priority
- Hello interval
- Maximum age value
- Forwarding delay

You can also view port-specific CIST information, including the following:

- Port number and priority
- Cost
- State

Command mode: Any

For details, see [page 52](#).

Table 2-12 Layer 2 Command Options

Command Syntax and Usage

show mlt information

When trunk groups are configured, you can view the state of each port in the various trunk groups.

Command mode: Any

For details, see [page 54](#).

show vlan information

Displays VLAN configuration information for all configured VLANs, including:

- VLAN Number
- VLAN Name
- Status
- Port membership of the VLAN

Command mode: Any

For details, see [page 55](#).

show failover

Displays Layer 2 Failover information.

Command mode: Any

For details, see [page 56](#).

show layer2 information

Dumps all Layer 2 switch information available (10K or more, depending on your configuration).

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

Command mode: Any

FDB Information Commands

The forwarding database (FDB) contains information that maps the media access control (MAC) address of each known device to the switch port where the device address was learned. The FDB also shows which other ports have seen frames destined for a particular MAC address.

NOTE – The master forwarding database supports up to 16K MAC address entries on the MP per switch.

Table 2-13 FDB Information Command Options

Command Syntax and Usage

show mac-address-table address *<mac-address>*

Displays a single database entry by its MAC address. You are prompted to enter the MAC address of the device. Enter the MAC address using the format, xx:xx:xx:xx:xx:xx. For example, 08:00:20:12:34:56.

You can also enter the MAC address using the format, xxxxxxxxxxxx.
For example, 080020123456.

Command mode: Any

show mac-address-table port *<port-identifier>*

Displays all FDB entries for a particular port.

Command mode: Any

show mac-address-table vlan *<vlan-identifier>*

Displays all FDB entries on a single VLAN.

Command mode: Any

show mac-address-table

Displays all entries in the Forwarding Database.

Command mode: Any

For more information, see [page 40](#).

show mac-address-table state [**flood** | **forward** | **ifmac** | **ignore** | **trunk** | **unknown**]

Displays all FDB entries for a particular state.

Command mode: Any

Show All FDB Information

The following command displays Forwarding Database information:

```
show mac-address-table
```

Command mode: Any

MAC address	VLAN	Port	Trunk	State
00:02:01:00:00:00	300	EXT1		FWD
00:02:01:00:00:01	300	INT1		FWD
00:02:01:00:00:02	300	INT1		FWD
00:02:01:00:00:03	300	INT7		FWD
00:02:01:00:00:04	300	INT3		FWD
00:02:01:00:00:05	300	INT4		FWD
00:02:01:00:00:06	300	INT6		FWD
00:02:01:00:00:07	300	INT2		FWD
00:02:01:00:00:08	300	INT5		FWD
00:02:01:00:00:09	300	INT4		FWD
00:02:01:00:00:0a	300	INT3		FWD
00:02:01:00:00:0b	300	INT2		FWD
00:02:01:00:00:0c	4095	MGT1		FWD

An address that is in the forwarding (FWD) state, means that it has been learned by the switch. When in the trunking (TRK) state, the port field represents the trunk group number. If the state for the port is listed as unknown (UNK), the MAC address has not yet been learned by the switch, but has only been seen as a destination address. When an address is in the unknown state, no outbound port is indicated, although ports which reference the address as a destination will be listed under “Reference ports.”

If the state for the port is listed as an interface (IF), the MAC address is for a standard VRRP virtual router.

Clearing Entries from the Forwarding Database

To delete a MAC address from the forwarding database (FDB) or to clear the entire FDB, refer to [“Forwarding Database Commands” on page 242](#).

Link Aggregation Control Protocol Commands

Use these commands to display LACP status information about each port on a GbE Switch Module.

Table 2-14 Link Aggregation Control Protocol

Command Syntax and Usage

show interface port <port-identifier> lacp aggregator

Displays detailed information about the LACP aggregator used by the selected port.

Command mode: Any

show lacp

Displays the configured global LACP settings.

Command mode: Any

show lacp information

Displays a summary of LACP information.

Command mode: Any

For details, see [page 41](#).

Link Aggregation Control Protocol

The following command displays LACP information:

show lacp information

Command mode: Any

port	lacp	adminkey	operkey	selected	prio	attached	trunk aggr
EXT1	active	30	30	y	128	17	19
EXT2	active	30	30	y	128	17	19
EXT3	off	19	19	n	128	--	--
EXT4	off	20	20	n	128	--	--

LACP dump includes the following information for each external port in the GbESM:

- lacp
Displays the port's LACP mode (active, passive, or off)
- adminkey
Displays the value of the port's *adminkey*.
- operkey
Shows the value of the port's operational key.

- selected
Indicates whether the port has been selected to be part of a Link Aggregation Group.
- prio
Shows the value of the port priority.
- attached aggr
Displays the aggregator associated with each port.
- trunk
This value represents the LACP trunk group number.

802.1p Information

The following command displays 802.1p information:

```
show qos transmit-queue information
```

Command mode: Any

```
Current priority to COS queue information:
```

```
Priority  COSq  Weight
```

```
-----  -
```

```
0         0         1
1         1         2
2         2         3
3         3         4
4         4         5
5         5         7
6         6        15
7         7         0
```

```
Current port priority information:
```

```
Port      Priority  COSq  Weight
```

```
-----  -
```

```
INT1      0         0         1
INT2      0         0         1
...
MGT1      0         0         1
MGT2      0         0         1
EXT1      0         0         1
EXT2      0         0         1
EXT3      0         0         1
EXT4      0         0         1
EXT5      0         0         1
EXT6      0         0         1
```

The following table describes the IEEE 802.1p priority to COS queue information.

Table 2-15 802.1p Priority to COS Queue Parameter Descriptions

Parameter	Description
Priority	Displays the 802.1p Priority level.
COSq	Displays the Class of Service queue.
Weight	Displays the scheduling weight of the COS queue.

The following table describes the IEEE 802.1p port priority information.

Table 2-16 802.1p Port Priority Parameter Descriptions

Parameter	Description
Port	Displays the port alias.
Priority	Displays the 802.1p Priority level.
COSq	Displays the Class of Service queue.
Weight	Displays the scheduling weight.

802.1x Information

The following command displays 802.1x information:

```
show dot1x information
```

Command mode: Any

```
System capability : Authenticator
System status    : disabled
Protocol version : 1
```

Port	Auth Mode	Auth Status	Authenticator PAE State	Backend Auth State
INT1	force-auth	authorized	initialize	initialize
*INT2	force-auth	authorized	initialize	initialize
*INT3	force-auth	authorized	initialize	initialize
*INT4	force-auth	authorized	initialize	initialize
*INT5	force-auth	authorized	initialize	initialize
*INT6	force-auth	authorized	initialize	initialize
*INT7	force-auth	authorized	initialize	initialize
*INT8	force-auth	authorized	initialize	initialize
INT9	force-auth	authorized	initialize	initialize
INT10	force-auth	authorized	initialize	initialize
*INT11	force-auth	authorized	initialize	initialize
*INT12	force-auth	authorized	initialize	initialize
*INT13	force-auth	authorized	initialize	initialize
*INT14	force-auth	authorized	initialize	initialize
*MGT1	force-auth	authorized	initialize	initialize
*MGT2	force-auth	authorized	initialize	initialize
EXT1	force-auth	authorized	initialize	initialize
EXT2	force-auth	authorized	initialize	initialize
*EXT3	force-auth	authorized	initialize	initialize
EXT4	force-auth	authorized	initialize	initialize
EXT5	force-auth	authorized	initialize	initialize
EXT6	force-auth	authorized	initialize	initialize

```
-----
* - Port down or disabled
```

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

The following table describes the IEEE 802.1x parameters.

Table 2-17 802.1x Parameter Descriptions

Parameter	Description
Port	Displays each port's alias.
Auth Mode	Displays the Access Control authorization mode for the port. The Authorization mode can be one of the following: <ul style="list-style-type: none"> ■ force-unauth ■ auto ■ force-auth
Auth Status	Displays the current authorization status of the port, either authorized or unauthorized.
Authenticator PAE State	Displays the Authenticator Port Access Entity State. The PAE state can be one of the following: <ul style="list-style-type: none"> ■ initialize ■ disconnected ■ connecting ■ authenticating ■ authenticated ■ aborting ■ held ■ forceAuth
Backend Auth State	Displays the Backend Authorization State. The Backend Authorization state can be one of the following: <ul style="list-style-type: none"> ■ request ■ response ■ success ■ fail ■ timeout ■ idle

Spanning Tree Information

The following command displays Spanning Tree information:

```
show spanning-tree stp <stg-identifier> information
```

Command mode: Any

```
Spanning Tree Group 1: On (STP/PVST+)
VLANs: 1

Current Root:          Path-Cost  Port Hello MaxAge FwdDel Aging
8000 00:03:42:fa:3b:80      0      0    2    20    15    300

Parameters:  Priority  Hello  MaxAge  FwdDel  Aging
              32768    2      20     15     300
```

Port	Priority	Cost	State	Designated Bridge	Des Port
INT1	128	0	DISABLED		
INT2	128	0	DISABLED		
INT3	128	0	DISABLED		
INT4	128	0	DISABLED		
INT5	128	0	DISABLED		
INT6	128	0	DISABLED		
INT7	128	0	DISABLED		
INT8	128	0	DISABLED		
INT9	128	0	DISABLED		
INT10	128	0	DISABLED		
INT11	128	0	DISABLED		
INT12	128	0	DISABLED		
INT13	128	0	DISABLED		
INT14	128	0	DISABLED		
EXT1	128	5	FORWARDING	8000-00:03:42:fa:3b:80	32769
EXT2	128	5	FORWARDING	8000-00:03:42:fa:3b:80	32770
EXT3	128	0	DISABLED		
EXT4	128	0	DISABLED		
EXT5	128	0	DISABLED		
EXT6	128	0	DISABLED		

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

The switch software uses the IEEE 802.1d Spanning Tree Protocol (STP). In addition to seeing if STG is enabled or disabled, you can view the following STG bridge information:

- Priority
- Hello interval
- Maximum age value
- Forwarding delay
- Aging time

You can also see the following port-specific STG information:

- Slot number
- Port alias and priority
- Cost
- State

The following table describes the STG parameters.

Table 2-18 Spanning Tree Parameter Descriptions

Parameter	Description
Priority (bridge)	The bridge priority parameter controls which bridge on the network will become the STG root bridge.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigure the STG network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from learning state to forwarding state.
Aging	The aging time parameter specifies, in seconds, the amount of time the bridge waits without receiving a packet from a station before removing the station from the Forwarding Database.
priority (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.

Table 2-18 Spanning Tree Parameter Descriptions (Continued)

Parameter	Description
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of 0 indicates that the cost will be set to the appropriate default after the link speed has been auto negotiated.
State	The state field shows the current state of the port. The state field can be either BLOCKING, LISTENING, LEARNING, FORWARDING, or DISABLED.

RSTP/MSTP Information

The following command displays RSTP/MSTP information:

```
show spanning-tree stp <stg-identifier> information
```

Command mode: Any

```
Spanning Tree Group 1: On (MSTP)
VLANs: 1

Current Root:          Path-Cost  Port  Aging
8000 00:11:58:ae:39:00      0 (null)  300

Parameters:  Priority  Aging
              32768    300
```

Port	Prio	Cost	State	Role	Designated Bridge	Des Port
INT1	0	0	DSB	*		
INT2	0	0	DSB	*		
INT3	0	0	FWD	*		
INT4	0	0	DSB	*		
INT5	0	0	DSB	*		
INT6	0	0	DSB	*		
INT7	0	0	DSB	*		
INT8	0	0	DSB	*		
INT9	0	0	DSB	*		
INT10	0	0	DSB	*		
INT11	0	0	DSB	*		
INT12	0	0	DSB	*		
INT13	0	0	DSB	*		
INT14	0	0	DSB	*		
EXT1	128	20000	FWD	DESG	8000-00:11:58:ae:39:00	8011
EXT2	128	20000	DISC	BKUP	8000-00:11:58:ae:39:00	8011
EXT3	128	20000	FWD	DESG	8000-00:11:58:ae:39:00	8013
EXT4	128	20000	DISC	BKUP	8000-00:11:58:ae:39:00	8013
EXT5	128	20000	FWD	DESG	8000-00:11:58:ae:39:00	8015
EXT6	128	20000	DISC	BKUP	8000-00:11:58:ae:39:00	8015

* = STP turned off for this port.

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

The switch software can be set to use the IEEE 802.1w Rapid Spanning Tree Protocol (RSTP) or the IEEE 802.1s Multiple Spanning Tree Protocol (MSTP).

If RSTP/MSTP is turned on, you can view RSTP/MSTP bridge information for the Spanning Tree Group, including the following:

- Priority
- Hello interval
- Maximum age value
- Forwarding delay
- Aging time

You can view port-specific RSTP information, including the following:

- Port number and priority
- Cost
- State

The following table describes the STP parameters in RSTP or MSTP mode.

Table 2-19 Rapid Spanning Tree Parameter Descriptions

Parameter	Description
Current Root	The Current Root shows information about the root bridge for the Spanning Tree. Information includes the priority (hex) and MAC address of the root.
Priority (bridge)	The bridge priority parameter controls which bridge on the network will become the STP root bridge.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from learning state to forwarding state.
Aging	The aging time parameter specifies, in seconds, the amount of time the bridge waits without receiving a packet from a station before removing the station from the Forwarding Database.

Table 2-19 Rapid Spanning Tree Parameter Descriptions (Continued)

Parameter	Description
Prio (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of 0 indicates that the cost will be set to the appropriate default after the link speed has been auto negotiated.
State	The State field shows the current state of the port. The State field in RSTP or MSTP mode can be one of the following: Discarding (DISC), Learning (LRN), Forwarding (FWD), or Disabled (DSB).
Role	The Role field shows the current role of this port in the Spanning Tree. The port role can be one of the following: Designated (DESG), Root (ROOT), Alternate (ALTN), Backup (BKUP), Disabled (DSB), Master (MAST), or Unknown (UNK).
Designated Bridge	The Designated Bridge shows information about the bridge connected to each port, if applicable. Information includes the priority (hex) and MAC address of the Designated Bridge.
Designated Port	The port ID of the port on the Designated Bridge to which this port is connected.
Type	Type of link connected to the port, and whether the port is an edge port. Link type values are AUTO, P2P, or SHARED.

Common Internal Spanning Tree Information

The following command displays CIST information:

```
show spanning-tree mstp cist information
```

Command mode: Any

```
Common Internal Spanning Tree:

VLANs: 2-4094

Current Root:          Path-Cost  Port MaxAge FwdDel
8000 00:11:58:ae:39:00      0      0     20    15

Cist Regional Root:    Path-Cost
8000 00:11:58:ae:39:00      0

Parameters:  Priority  MaxAge  FwdDel  Hops
              32768    20      15     20

Port  Prio  Cost      State  Role Designated Bridge      Des Port Hello Type
-----
INT1   0      0  DSB *
INT2   0      0  DSB *
INT3   0      0  FWD *
INT4   0      0  DSB *
INT5   0      0  DSB *
INT6   0      0  DSB *
INT7   0      0  DSB *
INT8   0      0  DSB *
INT9   0      0  DSB *
INT10  0      0  DSB *
INT11  0      0  DSB *
INT12  0      0  DSB *
INT13  0      0  DSB *
INT14  0      0  DSB *
MGT1   0      0  FWD *
MGT2   0      0  DSB *
EXT1   128    20000  FWD  DESG 8000-00:11:58:ae:39:00  8011  2  P2P
EXT2   128    20000  DISC BKUP 8000-00:11:58:ae:39:00  8011  2  P2P
EXT3   128    20000  FWD  DESG 8000-00:11:58:ae:39:00  8013  2  P2P
EXT4   128    20000  DISC BKUP 8000-00:11:58:ae:39:00  8013  2  P2P
EXT5   128    20000  FWD  DESG 8000-00:11:58:ae:39:00  8015  2  P2P
EXT6   128    20000  DISC BKUP 8000-00:11:58:ae:39:00  8015  2  P2P
* = STP turned off for this port.
```

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

In addition to seeing if Common Internal Spanning Tree (CIST) is enabled or disabled, you can view CIST bridge information, including the following:

- Priority
- Maximum age value
- Forwarding delay

You can view port-specific CIST information, including the following:

- Port number and priority
- Cost
- Link type and Port type

The following table describes the CIST parameters.

Table 2-20 Common Internal Spanning Tree Parameter Descriptions

Parameter	Description
CIST Root	The CIST Root shows information about the root bridge for the Common Internal Spanning Tree (CIST). Values on this row of information refer to the CIST root.
CIST Regional Root	The CIST Regional Root shows information about the root bridge for this MSTP region. Values on this row of information refer to the regional root.
Priority (bridge)	The bridge priority parameter controls which bridge on the network will become the STP root bridge.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigure the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from learning state to forwarding state.
priority (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.

Table 2-20 Common Internal Spanning Tree Parameter Descriptions

Parameter	Description
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of 0 indicates that the cost will be set to the appropriate default after the link speed has been auto negotiated.
State	The state field shows the current state of the port. The state field can be either Discarding (DISC), Learning (LRN), or Forwarding (FWD).
Role	The Role field shows the current role of this port in the Spanning Tree. The port role can be one of the following: Designated (DESG), Root (ROOT), Alternate (ALTN), Backup (BKUP), Disabled (DSB), Master (MAST), or Unknown (UNK).
Designated Bridge	The Designated Bridge shows information about the bridge connected to each port, if applicable. Information includes the priority (hex) and MAC address of the Designated Bridge.
Designated Port	The port ID of the port on the Designated Bridge to which this port is connected.
Type	Type of link connected to the port, and whether the port is an edge port. Link type values are AUTO, P2P, or SHARED.

Trunk Group Information

The following command displays Trunk Group information:

```
show mlt information
```

Command mode: Any

```
Trunk group 1, port state:
  EXT1: STG 1 forwarding
  EXT2: STG 1 forwarding
```

When trunk groups are configured, you can view the state of each port in the various trunk groups.

NOTE – If Spanning Tree Protocol on any port in the trunk group is set to forwarding, the remaining ports in the trunk group will also be set to forwarding.

VLAN Information

The following command displays VLAN information:

```
show vlan information
```

Command mode: Any

VLAN	Name	Status	Ports
1	Default VLAN	ena	EXT1 EXT3
2	pc03p	ena	INT2
7	pc07f	ena	INT7
11	pc04u	ena	INT11
14	8600-14	ena	INT14
15	8600-15	ena	INT5
16	8600-16	ena	INT6
17	8600-17	ena	INT8
18	35k-1	ena	INT9
19	35k-2	ena	INT10
20	35k-3	ena	INT12
21	35k-4	ena	INT13
22	pc07z	ena	INT6
24	redlan	ena	INT7
300	ixiaTraffic	ena	EXT1 INT12 INT13
4000	bpsports	ena	INT3-INT6
4095	Mgmt VLAN	ena	MGT1 MGT2

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

This information display includes all configured VLANs and all member ports that have an active link state. Port membership is represented in slot/port format.

VLAN information includes:

- VLAN Number
- VLAN Name
- Status
- Port membership of the VLAN

Failover Information

The following command displays Layer 2 Failover information.

```
show failover
```

Command mode: Any

```
Current global Failover setting: OFF
Current global VLAN Monitor settings: OFF

Current Trigger 1 setting: disabled
limit 0
Auto Monitor settings:

Current Trigger 2 setting: disabled
limit 0
Auto Monitor settings:

Current Trigger 3 setting: disabled
limit 0
Auto Monitor settings:
...
```


Layer 3 Commands

Table 2-21 Layer 3 Command Options

Command Syntax and Usage

show ip information

Displays IP Information. For details, see [page 57](#).

IP information, includes:

- IP interface information: Interface number, IP address, subnet mask, VLAN number, and operational status.
- Default gateway information: Metric for selecting which configured gateway to use, gateway number, IP address, and health status
- IP forwarding information: Enable status, lnet and lmask
- Port status

Command mode: All except User EXEC

show ip vrrp information

Displays VRRP information.

Command mode: All except User EXEC

For details, see [page 73](#).

show layer3

Dumps all Layer 3 switch information available (10K or more, depending on your configuration).

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

Command mode: All except User EXEC

IP Routing Information

Using the commands listed below, you can display all or a portion of the IP routes currently held in the switch.

Table 2-22 Route Information Command Options

Command Syntax and Usage

show ip route address <ip-address>

Displays a single route by destination IP address.

Command mode: All except User EXEC

show ip route gateway <ip-address>

Displays routes to a single gateway.

Command mode: All except User EXEC

Table 2-22 Route Information Command Options

Command Syntax and Usage

```
show ip route type {indirect|direct|local|broadcast|martian|multi-cast}
```

Displays routes of a single type.

Command mode: All except User EXEC

For a description of IP routing types, see [Table 2-23 on page 59](#).

```
show ip route tag {fixed|static|addr|rip|ospf|bgp|broadcast|multi-cast|martian}
```

Displays routes of a single tag.

Command mode: All except User EXEC

For a description of IP routing types, see [Table 2-24 on page 60](#).

```
show ip route interface <interface-instance>
```

Displays routes on a single interface.

Command mode: All except User EXEC

```
show ip route
```

Displays all routes configured in the switch.

Command mode: All except User EXEC

For more information, see [page 59](#).

Show All IP Route Information

The following command displays IP route information:

```
show ip route
```

Command mode: All except User EXEC

Status code: * - best						
Destination	Mask	Gateway	Type	Tag	Metr	If
* 11.0.0.0	255.0.0.0	11.0.0.1	direct	fixed		211
* 11.0.0.1	255.255.255.255	11.0.0.1	local	addr		211
* 11.255.255.255	255.255.255.255	11.255.255.255	broadcast	broadcast		211
* 12.0.0.0	255.0.0.0	12.0.0.1	direct	fixed		12
* 12.0.0.1	255.255.255.255	12.0.0.1	local	addr		12
* 12.255.255.255	255.255.255.255	12.255.255.255	broadcast	broadcast		12
* 13.0.0.0	255.0.0.0	11.0.0.2	indirect	ospf		2 211
* 47.0.0.0	255.0.0.0	47.133.88.1	indirect	static		24
* 47.133.88.0	255.255.255.0	47.133.88.46	direct	fixed		24
* 172.30.52.223	255.255.255.255	172.30.52.223	broadcast	broadcast		2
* 224.0.0.0	224.0.0.0	0.0.0.0	martian	martian		
* 224.0.0.5	255.255.255.255	0.0.0.0	multicast	addr		

The following table describes the Type parameters.

Table 2-23 IP Routing Type Parameters

Parameter	Description
indirect	The next hop to the host or subnet destination will be forwarded through a router at the Gateway address.
direct	Packets will be delivered to a destination host or subnet attached to the switch.
local	Indicates a route to one of the switch's IP interfaces.
broadcast	Indicates a broadcast route.
martian	The destination belongs to a host or subnet which is filtered out. Packets to this destination are discarded.
multicast	Indicates a multicast route.

The following table describes the Tag parameters.

Table 2-24 IP Routing Tag Parameters

Parameter	Description
fixed	The address belongs to a host or subnet attached to the switch.
static	The address is a static route which has been configured on the GbE Switch Module.
addr	The address belongs to one of the switch's IP interfaces.
rip	The address was learned by the Routing Information Protocol (RIP).
ospf	The address was learned by Open Shortest Path First (OSPF).
bgp	The address was learned via Border Gateway Protocol (BGP)
broadcast	Indicates a broadcast address.
martian	The address belongs to a filtered group.

ARP Information

The ARP information includes IP address and MAC address of each entry, address status flags (see [Table 2-26 on page 61](#)), VLAN and port for the address, and port referencing information.

Table 2-25 ARP Information Command Options

Command Syntax and Usage

```
show ip arp find <ip-address>
```

Displays a single ARP entry by IP address.

Command mode: All except User EXEC

```
show ip arp interface <port-instance>
```

Displays the ARP entries on a single port.

Command mode: All except User EXEC

```
show ip arp vlan <vlan-instance>
```

Displays the ARP entries on a single VLAN.

Command mode: All except User EXEC

Table 2-25 ARP Information Command Options**Command Syntax and Usage****show ip arp**

Displays all ARP entries, including:

- IP address and MAC address of each entry
- Address status flag (see below)
- The VLAN and port to which the address belongs
- The ports which have referenced the address (empty if no port has routed traffic to the IP address shown)

Command mode: All except User EXEC

For more information, see [page 61](#).

show ip arp reply

Displays the ARP address list: IP address, IP mask, MAC address, and VLAN flags.

Command mode: All except User EXEC

Show All ARP Entry Information

The following command displays ARP information:

show ip arp

Command mode: All except User EXEC

IP address	Flags	MAC address	VLAN	Port
47.80.22.1		00:e0:16:7c:28:86	1	INT6
47.80.23.243	P	00:03:42:fa:3b:30	1	
47.80.23.245		00:c0:4f:60:3e:c1	1	INT6
190.10.10.1	P	00:03:42:fa:3b:30	10	

Referenced ports are the ports that request the ARP entry. So the traffic coming into the referenced ports has the destination IP address. From the ARP entry (the referenced ports), this traffic needs to be forwarded to the egress port (port INT6 in the above example).

The Flag field is interpreted as follows:

Table 2-26 ARP Dump Flag Parameters

Flag	Description
R	Indirect route entry.
U	Unresolved ARP entry. The MAC address has not been learned.

ARP Address List Information

The following command displays ARP address list information:

```
show ip arp reply
```

Command mode: All except User EXEC

IP address	IP mask	MAC address	VLAN	Flags
205.178.18.66	255.255.255.255	00:70:cf:03:20:04		P
205.178.50.1	255.255.255.255	00:70:cf:03:20:06	1	
205.178.18.64	255.255.255.255	00:70:cf:03:20:05	1	

BGP Information Commands

Table 2-27 BGP Peer Information Command Options

Command Syntax and Usage

show ip bgp neighbor information

Displays BGP peer information.

Command mode: All except User EXEC

See [page 63](#) for a sample output.

show ip bgp neighbor summary

Displays peer summary information such as AS, message received, message sent, up/down, state.

Command mode: All except User EXEC

See [page 64](#) for a sample output.

show ip bgp information

Displays the BGP routing table.

Command mode: All except User EXEC

See [page 64](#) for a sample output.

BGP Peer information

Following is an example of the information provided by the following command:

show ip bgp neighbor information

Command mode: All except User EXEC

```
BGP Peer Information:

3: 2.1.1.1          , version 0, TTL 1
  Remote AS: 0, Local AS: 0, Link type: IBGP
  Remote router ID: 0.0.0.0, Local router ID: 1.1.201.5
  BGP status: idle, Old status: idle
  Total received packets: 0, Total sent packets: 0
  Received updates: 0, Sent updates: 0
  Keepalive: 0, Holdtime: 0, MinAdvTime: 60
  LastErrorCode: unknown(0), LastErrorSubcode: unspecified(0)
  Established state transitions: 0

4: 2.1.1.4          , version 0, TTL 1
  Remote AS: 0, Local AS: 0, Link type: IBGP
  Remote router ID: 0.0.0.0, Local router ID: 1.1.201.5
  BGP status: idle, Old status: idle
  Total received packets: 0, Total sent packets: 0
  Received updates: 0, Sent updates: 0
  Keepalive: 0, Holdtime: 0, MinAdvTime: 60
  LastErrorCode: unknown(0), LastErrorSubcode: unspecified(0)
  Established state transitions: 0
```

BGP Summary information

Following is an example of the information provided by the following command:

```
show ip bgp neighbor summary
```

Command mode: All except User EXEC

BGP Peer Summary Information:							
Peer	V	AS	MsgRcvd	MsgSent	Up/Down	State	
1: 205.178.23.142	4	142	113	121	00:00:28	established	
2: 205.178.15.148	0	148	0	0	never	connect	

Dump BGP Information

Following is an example of the information provided by the following command:

```
show ip bgp information
```

Command mode: All except User EXEC

Status codes: * valid, > best, i - internal						
Origin codes: i - IGP, e - EGP, ? - incomplete						
Network	Next Hop	Metr	LcPrf	Wght	Path	
*> 10.0.0.0	205.178.21.147	1	256	147	148	i
*>i205.178.15.0	0.0.0.0			0		i
*	205.178.21.147	1	128	147		i
*> 205.178.17.0	205.178.21.147	1	128	147		i
13.0.0.0	205.178.21.147	1	256	147	{35}	?

The 13.0.0.0 is filtered out by rrmmap; or, a loop detected.

OSPF Information Commands

Table 2-28 OSPF Information Command options

Command Syntax and Usage

show ip ospf general-information

Displays general OSPF information.

Command mode: All except User EXEC

See [page 66](#) for a sample output.

show ip ospf area information

Displays area information for a particular area index. If no parameter is supplied, it displays area information for all the areas.

Command mode: All except User EXEC

show ip ospf interface [<interface-instance>]

Displays interface information for a particular interface. If no parameter is supplied, it displays information for all the interfaces.

Command mode: All except User EXEC

See [page 67](#) for a sample output.

show ip ospf area-virtual-link information

Displays information about all the configured virtual links.

Command mode: All except User EXEC

show ip ospf neighbor

Displays the status of all the current neighbors.

Command mode: All except User EXEC

show ip ospf summary-range <area-id>

Displays the list of summary ranges belonging to non-NSSA areas.

Command mode: All except User EXEC

show ip ospf summary-range-nssa <area-id>

Displays the list of summary ranges belonging to NSSA areas.

Command mode: All except User EXEC

show ip ospf routes

Displays OSPF routing table.

Command mode: All except User EXEC

See [page 69](#) for a sample output.

show ip ospf information

Displays the OSPF information.

Command mode: All except User EXEC

OSPF General Information

The following command displays general OSPF information:

```
show ip ospf general-information
```

Command mode: All except User EXEC

```
OSPF Version 2
Router ID: 10.10.10.1
Started at 1663 and the process uptime is 4626
Area Border Router: yes, AS Boundary Router: no
LS types supported are 6
External LSA count 0
External LSA checksum sum 0x0
Number of interfaces in this router is 2
Number of virtual links in this router is 1
16 new lsa received and 34 lsa originated from this router
Total number of entries in the LSDB 10
Database checksum sum 0x0
Total neighbors are 1, of which
                                2 are >=INIT state,
                                2 are >=EXCH state,
                                2 are =FULL state
Number of areas is 2, of which 3-transit 0-nssa
  Area Id : 0.0.0.0
  Authentication : none
  Import ASEextern : yes
  Number of times SPF ran : 8
  Area Border Router count : 2
  AS Boundary Router count : 0
  LSA count : 5
  LSA Checksum sum : 0x2237B
  Summary : noSummary
```

OSPF Interface Information

The following command displays OSPF interface information:

```
show ip ospf interface [<interface-instance>]
```

Command mode: All except User EXEC

```
Ip Address 10.10.12.1, Area 0.0.0.1, Admin Status UP
Router ID 10.10.10.1, State DR, Priority 1
Designated Router (ID) 10.10.10.1, Ip Address 10.10.12.1
Backup Designated Router (ID) 10.10.14.1, Ip Address 10.10.12.2
Timer intervals, Hello 10, Dead 40, Wait 1663, Retransmit 5,
Poll interval 0, Transit delay 1
Neighbor count is 1 If Events 4, Authentication type none
```

OSPF Database Information Commands

Table 2-29 OSPF Database Information Commands

Command Syntax and Usage

```
show ip ospf database advertising-router <router-id>
```

Takes advertising router as a parameter. Displays all the Link State Advertisements (LSAs) in the LS database that have the advertising router with the specified router ID, for example: 20.1.1.1.

Command mode: All except User EXEC

```
show ip ospf database asbr-summary [advertising-router <router-id> |
link-state <A.B.C.D> | self]
```

Displays ASBR summary LSAs. The usage of this command is as follows:

- a) `asbrsum adv-rtr 20.1.1.1` displays ASBR summary LSAs having the advertising router 20.1.1.1.
- b) `asbrsum link_state_id 10.1.1.1` displays ASBR summary LSAs having the link state ID 10.1.1.1.
- c) `asbrsum self` displays the self advertised ASBR summary LSAs.
- d) `asbrsum` with no parameters displays all the ASBR summary LSAs.

Command mode: All except User EXEC

Table 2-29 OSPF Database Information Commands

Command Syntax and Usage

show ip ospf database database-summary

Displays the following information about the LS database in a table format:

- a) the number of LSAs of each type in each area.
- b) the total number of LSAs for each area.
- c) the total number of LSAs for each LSA type for all areas combined.
- d) the total number of LSAs for all LSA types for all areas combined.

No parameters are required.

Command mode: All except User EXEC

show ip ospf database external

Displays the AS-external (type 5) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command `asbrsum`.

Command mode: All except User EXEC

show ip ospf database network

Displays the network (type 2) LSAs with detailed information of each field of the LSA.network LS database. The usage of this command is the same as the usage of the command `asbrsum`.

Command mode: All except User EXEC

show ip ospf database nssa

Displays the NSSA (type 7) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command `asbrsum`.

Command mode: All except User EXEC

show ip ospf database router

Displays the router (type 1) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command `asbrsum`.

Command mode: All except User EXEC

show ip ospf database self

Displays all the self-advertised LSAs. No parameters are required.

Command mode: All except User EXEC

show ip ospf database summary [advertising-router <router-id> | link-state <A.B.C.D> | self]

Displays the network summary (type 3) LSAs with detailed information of each field of the LSAs. The usage of this command is the same as the usage of the command `asbrsum`.

Command mode: All except User EXEC

show ip ospf database

Displays all the LSAs.

Command mode: All except User EXEC

OSPF Information Route Codes

The following command displays RIP route information:

```
show ip ospf routes
```

Command mode: All except User EXEC

```
Codes: IA - OSPF inter area,  
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2  
       E1 - OSPF external type 1, E2 - OSPF external type 2  
IA 10.10.0.0/16 via 200.1.1.2  
IA 40.1.1.0/28 via 20.1.1.2  
IA 80.1.1.0/24 via 200.1.1.2  
IA 100.1.1.0/24 via 20.1.1.2  
IA 140.1.1.0/27 via 20.1.1.2  
IA 150.1.1.0/28 via 200.1.1.2  
E2 172.18.1.1/32 via 30.1.1.2  
E2 172.18.1.2/32 via 30.1.1.2  
E2 172.18.1.3/32 via 30.1.1.2  
E2 172.18.1.4/32 via 30.1.1.2  
E2 172.18.1.5/32 via 30.1.1.2  
E2 172.18.1.6/32 via 30.1.1.2  
E2 172.18.1.7/32 via 30.1.1.2  
E2 172.18.1.8/32 via 30.1.1.2
```

Routing Information Protocol Commands

Table 2-30 Routing Information Protocol Commands

Command Syntax and Usage

show ip rip route

Displays RIP routes.

Command mode: All except User EXEC

For more information, see [page 70](#).

show interface ip rip

Displays RIP user's configuration.

Command mode: All except User EXEC

For more information, see [page 71](#).

RIP Routes Information

The following command displays RIP route information:

show ip rip route

Command mode: All except User EXEC

```
>> IP Routing#
3.0.0.0/8 via 30.1.1.11 metric 4
4.0.0.0/16 via 30.1.1.11 metric 16
10.0.0.0/8 via 30.1.1.2 metric 3
20.0.0.0/8 via 30.1.1.2 metric 2
```

This table contains all dynamic routes learnt through RIP, including the routes that are undergoing garbage collection with metric = 16. This table does not contain directly connected routes and locally configured static routes.

RIP User Configuration

The following command displays RIP user information:

```
show interface ip rip
```

Command mode: All except User EXEC

```
RIP USER CONFIGURATION :
  RIP on updat 30
  RIP Interface 2 : 102.1.1.1,          enabled
    version 2, listen enabled, supply enabled, default none
    poison disabled, trigg enabled, mcast enabled, metric 1
    auth none,key none
  RIP Interface 3 : 103.1.1.1,          enabled
    version 2, listen enabled, supply enabled, default none
    poison disabled, trigg enabled, mcast enabled, metric 1
```

IP Information

The following command displays Layer 3 information:

```
show layer3 information
```

Command mode: All except User EXEC

```
Interface information:
  1: 47.80.23.243    255.255.254.0    47.80.23.255,    vlan 1, up
Default gateway information: metric strict
  1: 47.80.22.1,    vlan any,    up
Current IP forwarding settings: ON, dirbr disabled
Current local networks:
Current IP port settings:
  All other ports have forwarding ON
Current network filter settings:
  none
Current route map settings:
Current BGP settings:
  ON, pref 100
Current BGP peer settings:
Current BGP aggr settings:
```

IGMP Multicast Group Information Commands

Table 2-31 IGMP Multicast Group Command Options

Command Syntax and Usage

show ip igmp snoop

Displays IGMP Snooping information.

Command mode: All except User EXEC

show ip igmp mrouter information

Displays IGMP Multicast Router information.

Command mode: All except User EXEC

show ip igmp groups address <ip-address>

Displays a single IGMP multicast group by its IP address.

Command mode: All except User EXEC

show ip igmp groups vlan <vlan-instance>

Displays all IGMP multicast groups on a single VLAN.

Command mode: All except User EXEC

show ip igmp groups interface <port-instance>

Displays all IGMP multicast groups on a single port.

Command mode: All except User EXEC

show ip igmp groups trunk <trunk-id>

Displays all IGMP multicast groups on a single trunk group.

Command mode: All except User EXEC

show ip igmp groups

Displays information for all multicast groups.

Command mode: All except User EXEC

IGMP Multicast Router Port Information

The following command displays switch information:

```
show ip igmp mrouter information
```

Command mode: All except User EXEC

Table 2-32 IGMP Multicast Router Port Information Command Options

Command Syntax and Usage

```
show ip igmp mrouter vlan <1-4094>
```

Displays the multicast router ports configured or learned on the selected VLAN.

Command mode: All except User EXEC

VRRP Information

Virtual Router Redundancy Protocol (VRRP) support on GbE Switch Module provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

The following command displays VRRP information:

```
show ip vrrp information
```

Command mode: All except User EXEC

```
VRRP information:
 1: vrid 2, 205.178.18.210, if 1, renter, prio 100, master, server
 2: vrid 1, 205.178.18.202, if 1, renter, prio 100, backup
 3: vrid 3, 205.178.18.204, if 1, renter, prio 100, master, proxy
```

When virtual routers are configured, you can view the status of each virtual router using this command. VRRP information includes:

- Virtual router number
- Virtual router ID and IP address
- Interface number
- Ownership status
 - `owner` identifies the preferred master virtual router. A virtual router is the owner when the IP address of the virtual router and its IP interface are the same.

- `renter` identifies virtual routers which are not owned by this device.
- Priority value. During the election process, the virtual router with the highest priority becomes master.
- Activity status
 - `master` identifies the elected master virtual router.
 - `backup` identifies that the virtual router is in backup mode.
 - `init` identifies that the virtual router is waiting for a startup event. Once it receives a startup event, it transitions to master if its priority is 255, (the IP address owner), or transitions to backup if it is not the IP address owner.
- Server status. The `server` state identifies virtual routers.
- Proxy status. The proxy state identifies virtual proxy routers, where the virtual router shares the same IP address as a proxy IP address. The use of virtual proxy routers enables redundant switches to share the same IP address, minimizing the number of unique IP addresses that must be configured.

Link Status Information

The following command displays link information:

```
show interface link
```

Command mode: All except User EXEC

Alias	Port	Speed	Duplex	Flow Ctrl		Link
----	-----	-----	-----	--TX--	---RX---	-----
INT1	1	1000	full	yes	yes	up
INT2	2	1000	full	yes	yes	up
INT3	3	1000	full	yes	yes	up
INT4	4	1000	full	yes	yes	up
INT5	5	1000	full	yes	yes	down
INT6	6	1000	full	yes	yes	up
INT7	7	1000	full	yes	yes	up
INT8	8	1000	full	yes	yes	up
INT9	9	1000	full	yes	yes	up
INT10	10	1000	full	yes	yes	up
INT11	11	1000	full	yes	yes	up
INT12	12	1000	full	yes	yes	up
INT13	13	1000	full	yes	yes	up
INT14	14	1000	full	yes	yes	up
MGT1	15	100	full	yes	yes	up
MGT2	16	100	full	yes	yes	down
EXT1	17	any	any	yes	yes	up
EXT2	18	any	any	yes	yes	up
EXT3	19	any	any	yes	yes	up
EXT4	20	any	any	yes	yes	up
EXT5	21	any	any	yes	yes	up
EXT6	22	any	any	yes	yes	up

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

Use this command to display link status information about each port on an GbE Switch Module slot, including:

- Port alias
- Port speed (10, 100, 10/100, or 1000)
- Duplex mode (half, full, any, or auto)
- Flow control for transmit and receive (no, yes, or auto)
- Link status (up or down)

Port Information

The following command displays port information:

```
show interface information
```

Command mode: All except User EXEC

Alias	Port	Tag	FAST	PVID	NAME	VLAN (s)
INT1	1	y	n	1	INT1	1 4095
INT2	2	y	n	1	INT2	1 4095
INT3	3	y	n	1	INT3	1 4095
INT4	4	y	n	1	INT4	1 4095
INT5	5	y	n	1	INT5	1 4095
INT6	6	y	n	1	INT6	1 4095
INT7	7	y	n	1	INT7	1 4095
INT8	8	y	n	1	INT8	1 4095
INT9	9	y	n	1	INT9	1 4095
INT10	10	y	n	1	INT10	1 4095
INT11	11	y	n	1	INT11	1 4095
INT12	12	y	n	1	INT12	1 4095
INT13	13	y	n	1	INT13	1 4095
INT14	14	y	n	1	INT14	1 4095
MGT1	15	y	n	4095	MGT1	4095
MGT2	16	y	n	4095	MGT2	4095
EXT1	17	n	n	1	EXT1	1
EXT2	18	n	n	1	EXT2	1
EXT3	19	n	n	1	EXT3	1
EXT4	20	n	n	1	EXT4	1
EXT5	21	n	n	1	EXT5	1
EXT6	22	n	n	1	EXT6	1

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

Port information includes:

- Port alias
- Whether the port uses VLAN tagging or not (y or n)
- Port VLAN ID (PVID)
- Port name
- VLAN membership
- Whether the port is configured for Fast Port Forwarding

Logical Port to GEA Port Mapping

The following command displays information about GEA ports:

```
show geaport
```

Command mode: All except User EXEC

Alias	Logical Port	GEA Port (0-based)	GEA Unit
INT1	1	3	0
INT2	2	2	0
INT3	3	11	1
INT4	4	10	1
INT5	5	9	1
INT6	6	8	1
INT7	7	7	1
INT8	8	6	1
INT9	9	1	1
INT10	10	0	1
INT11	11	3	1
INT12	12	2	1
INT13	13	5	1
INT14	14	4	1
MGT1	15	1	0
MGT2	16	6	0
EXT1	17	10	0
EXT2	18	9	0
EXT3	19	8	0
EXT4	20	7	0
EXT5	21	5	0
EXT6	22	4	0

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

This display correlates the port alias to logical port number, and shows the GEA unit on which each port resides.

Fiber Port SFP Status

The following command displays SFP information:

```
show sfp
```

Command mode: All except User EXEC

Port	TX-Enable	RX-Signal	TX-Fault	
----	-----	-----	-----	
EXT1	enabled	LOST	none	
EXT2	DISABLED	LOST	none	<= SFP NOT APPROVED
EXT3	enabled	LOST	none	
EXT4	enabled	LOST	none	
EXT5	enabled	LOST	none	
EXT6	enabled	LOST	none	

This command displays the status of the Small Form Pluggable (SFP) module on each Fiber External Port.

Information Dump

The following command dumps switch information:

```
show information-dump
```

Command mode: All except User EXEC

Use the dump command to dump all switch information available (10K or more, depending on your configuration). This data is useful for tuning and debugging switch performance.

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

CHAPTER 3

Statistics Commands

You can use the Statistics Commands to view switch performance statistics in both the user and administrator command modes. This chapter discusses how to use the command line interface to display switch statistics.

Table 3-1 Statistics Command Options

Command Syntax and Usage

show snmp-server counters

Command mode: All

Displays SNMP statistics. See [page 113](#) for sample output.

show ntp counters

Displays Network Time Protocol (NTP) Statistics.

Command mode: All

See [page 118](#) for a sample output and a description of NTP Statistics.

show counters

Dumps all switch statistics. Use this command to gather data for tuning and debugging switch performance. If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump command.

Command mode: All

For details, see [page 119](#).

Port Statistics Commands

These commands display traffic statistics on a port-by-port basis. Traffic statistics include SNMP Management Information Base (MIB) objects.

Table 3-2 Port Statistics Command Options

Command Syntax and Usage

show interface port *<port-identifier>* **dot1x**

Displays IEEE 802.1x statistics for the port.

Command mode: All

See [page 81](#) for sample output.

show interface port *<port-identifier>* **bridging-counters**

Displays bridging (“dot1”) statistics for the port.

Command mode: All except User EXEC

See [page 84](#) for sample output.

show interface port *<port-identifier>* **ethernet-counters**

Displays Ethernet (“dot1”) statistics for the port.

Command mode: All

See [page 86](#) for sample output.

show interface port *<port-identifier>* **interface-counters**

Displays interface statistics for the port.

Command mode: All

See [page 89](#) for sample output.

show interface port *<port-identifier>* **ip-counters**

Displays IP statistics for the port.

Command mode: All except User EXEC

See [page 91](#) for sample output.

show interface port *<port-identifier>* **link-counters**

Displays link statistics for the port.

Command mode: All

See [page 92](#) for sample output.

802.1x Authenticator Statistics

Use the following command to display the 802.1x authenticator statistics of the selected port:

```
show interface port <port-identifier> dot1x
```

Command mode: All

```
Authenticator Statistics:
  eapolFramesRx           = 925
  eapolFramesTx           = 3201
  eapolStartFramesRx      = 2
  eapolLogoffFramesRx     = 0
  eapolRespIdFramesRx     = 463
  eapolRespFramesRx       = 460
  eapolReqIdFramesTx      = 1820
  eapolReqFramesTx        = 1381
  invalidEapolFramesRx    = 0
  eapLengthErrorFramesRx  = 0
  lastEapolFrameVersion   = 1
  lastEapolFrameSource    = 00:01:02:45:ac:51
```

Table 3-3 802.1x Authenticator Statistics of a Port

Statistics	Description
eapolFramesRx	Total number of EAPOL frames received
eapolFramesTx	Total number of EAPOL frames transmitted
eapolStartFramesRx	Total number of EAPOL Start frames received
eapolLogoff-FramesRx	Total number of EAPOL Logoff frames received
eapolRespId-FramesRx	Total number of EAPOL Response Identity frames received
eapolRespFramesRx	Total number of Response frames received
eapolReqIdFramesTx	Total number of Request Identity frames transmitted
eapolReqFramesTx	Total number of Request frames transmitted
invalidEapol-FramesRx	Total number of invalid EAPOL frames received
eapLengthError-FramesRx	Total number of EAP length error frames received

Table 3-3 802.1x Authenticator Statistics of a Port

Statistics	Description
lastEapolFrameVersion	The protocol version number carried in the most recently received EAPOL frame.
lastEapolFrameSource	The source MAC address carried in the most recently received EAPOL frame.

802.1x Authenticator Diagnostics

Use the following command to display the 802.1x authenticator diagnostics of the selected port:

```
show interface port <port-identifier> dot1x
```

Command mode: All

```
Authenticator Diagnostics:
  authEntersConnecting                = 1820
  authEapLogoffsWhileConnecting       = 0
  authEntersAuthenticating            = 463
  authSuccessesWhileAuthenticating    = 5
  authTimeoutsWhileAuthenticating     = 0
  authFailWhileAuthenticating         = 458
  authReauthsWhileAuthenticating      = 0
  authEapStartsWhileAuthenticating    = 0
  authEapLogoffWhileAuthenticating    = 0
  authReauthsWhileAuthenticated      = 3
  authEapStartsWhileAuthenticated     = 0
  authEapLogoffWhileAuthenticated    = 0
  backendResponses                    = 923
  backendAccessChallenges              = 460
  backendOtherRequestsToSupplicant    = 460
  backendNonNakResponsesFromSupplicant = 460
  backendAuthSuccesses                 = 5
  backendAuthFails                     = 458
```

Table 3-4 802.1x Authenticator Diagnostics of a Port

Statistics	Description
authEntersConnecting	Total number of times that the state machine transitions to the CONNECTING state from any other state.

Table 3-4 802.1x Authenticator Diagnostics of a Port

Statistics	Description
authEapLogoffsWhileConnecting	Total number of times that the state machine transitions from CONNECTING to DISCONNECTED as a result of receiving an EAPOL-Logoff message.
authEntersAuthenticating	Total number of times that the state machine transitions from CONNECTING to AUTHENTICATING, as a result of an EAP-Response/Identity message being received from the Supplicant.
authSuccessesWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to AUTHENTICATED, as a result of the Backend Authentication state machine indicating successful authentication of the Supplicant.
authTimeoutsWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of the Backend Authentication state machine indicating authentication timeout.
authFailWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to HELD, as a result of the Backend Authentication state machine indicating authentication failure.
authReauthsWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of a re-authentication request
authEapStartsWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of an EAPOL-Start message being received from the Supplicant.
authEapLogoffWhileAuthenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of an EAPOL-Logoff message being received from the Supplicant.
authReauthsWhileAuthenticated	Total number of times that the state machine transitions from AUTHENTICATED to CONNECTING, as a result of a re-authentication request.
authEapStartsWhileAuthenticated	Total number of times that the state machine transitions from AUTHENTICATED to CONNECTING, as a result of an EAPOL-Start message being received from the Supplicant.
authEapLogoffWhileAuthenticated	Total number of times that the state machine transitions from AUTHENTICATED to DISCONNECTED, as a result of an EAPOL-Logoff message being received from the Supplicant.
backendResponses	Total number of times that the state machine sends an initial Access-Request packet to the Authentication server. Indicates that the Authenticator attempted communication with the Authentication Server.

Table 3-4 802.1x Authenticator Diagnostics of a Port

Statistics	Description
backendAccessChallenges	Total number of times that the state machine receives an initial Access-Challenge packet from the Authentication server. Indicates that the Authentication Server has communication with the Authenticator.
backendOtherRequestsToSupplicant	Total number of times that the state machine sends an EAP-Request packet (other than an Identity, Notification, Failure, or Success message) to the Supplicant. Indicates that the Authenticator chose an EAP-method.
backendNonNakResponsesFromSupplicant	Total number of times that the state machine receives a response from the Supplicant to an initial EAP-Request, and the response is something other than EAP-NAK. Indicates that the Supplicant can respond to the Authenticator's chosen EAP-method.
backendAuthSuccesses	Total number of times that the state machine receives an Accept message from the Authentication Server. Indicates that the Supplicant has successfully authenticated to the Authentication Server.
backendAuthFails	Total number of times that the state machine receives a Reject message from the Authentication Server. Indicates that the Supplicant has not authenticated to the Authentication Server.

Bridging Statistics

Use the following command to display the bridging statistics of the selected port:

```
show interface port <port-identifier> bridging-counters
```

Command mode: All except User EXEC

```
Bridging statistics for port INT1:
dot1PortInFrames:                63242584
dot1PortOutFrames:               63277826
dot1PortInDiscards:              0
dot1TpLearnedEntryDiscards:      0
dot1BasePortDelayExceededDiscards: NA
dot1BasePortMtuExceededDiscards: NA
dot1StpPortForwardTransitions:   0
```

Table 3-5 Bridging Statistics of a Port

Statistics	Description
dot1PortInFrames	The number of frames that have been received by this port from its segment. A frame received on the interface corresponding to this port is only counted by this object if and only if it is for a protocol being processed by the local bridging function, including bridge management frames.
dot1PortOutFrames	The number of frames that have been transmitted by this port to its segment. Note that a frame transmitted on the interface corresponding to this port is only counted by this object if and only if it is for a protocol being processed by the local bridging function, including bridge management frames.
dot1PortInDiscards	Count of valid frames received which were discarded (that is, filtered) by the Forwarding Process.
dot1TpLearnedEntry Discards	The total number of Forwarding Database entries, which have been or would have been learnt, but have been discarded due to a lack of space to store them in the Forwarding Database. If this counter is increasing, it indicates that the Forwarding Database is regularly becoming full (a condition which has unpleasant performance effects on the subnetwork). If this counter has a significant value but is not presently increasing, it indicates that the problem has been occurring but is not persistent.
dot1BasePortDelay ExceededDiscards	The number of frames discarded by this port due to excessive transit delay through the bridge. It is incremented by both transparent and source route bridges.
dot1BasePortMtu ExceededDiscards	The number of frames discarded by this port due to an excessive size. It is incremented by both transparent and source route bridges.
dot1StpPortForward Transitions	The number of times this port has transitioned from the Learning state to the Forwarding state.

Ethernet Statistics

Use the following command to display the ethernet statistics of the selected port:

```
show interface port <port-identifier> ethernet-counters
```

Command mode: All

```
Ethernet statistics for port INT1:
dot3StatsAlignmentErrors:                0
dot3StatsFCSErrors:                      0
dot3StatsSingleCollisionFrames:          0
dot3StatsMultipleCollisionFrames:        0
dot3StatsSQETestErrors:                  NA
dot3StatsDeferredTransmissions:          0
dot3StatsLateCollisions:                 0
dot3StatsExcessiveCollisions:            0
dot3StatsInternalMacTransmitErrors:      NA
dot3StatsCarrierSenseErrors:             0
dot3StatsFrameTooLongs:                  0
dot3StatsInternalMacReceiveErrors:       0
dot3CollFrequencies [1-15]:              NA
```

Table 3-6 Ethernet Statistics for Port

Statistics	Description
dot3StatsAlignmentErrors	<p>A count of frames received on a particular interface that are not an integral number of octets in length and do not pass the Frame Check Sequence (FCS) check.</p> <p>The count represented by an instance of this object is incremented when the <code>alignmentError</code> status is returned by the MAC service to the Logical Link Control (LLC) (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.</p>
dot3StatsFCSErrors	<p>A count of frames received on a particular interface that are an integral number of octets in length but do not pass the Frame Check Sequence (FCS) check.</p> <p>The count represented by an instance of this object is incremented when the <code>frameCheckError</code> status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.</p>

Table 3-6 Ethernet Statistics for Port

Statistics	Description
dot3StatsSingleCollisionFrames	A count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts, ifOutMulticastPkts, or ifOutBroadcastPkts, and is not counted by the corresponding instance of the dot3StatsMultipleCollisionFrame object.
dot3StatsMultipleCollisionFrames	A count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts, ifOutMulticastPkts, or ifOutBroadcastPkts, and is not counted by the corresponding instance of the dot3StatsSingleCollisionFrames object.
dot3StatsSQETestErrors	A count of times that the SQE TEST ERROR message is generated by the PLS sub layer for a particular interface. The SQE TEST ERROR message is defined in section 7.2.2.4 of ANSI/IEEE 802.3-1985 and its generation is described in section 7.2.4.6 of the same document.
dot3StatsDeferredTransmissions	A count of frames for which the first transmission attempt on a particular interface is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions.
dot3StatsLateCollisions	The number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet. Five hundred and twelve bit-times corresponds to 51.2 microseconds on a 10 Mbit/s system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics.
dot3StatsExcessiveCollisions	A count of frames for which transmission on a particular interface fails due to excessive collisions.
dot3StatsInternalMacTransmitErrors	A count of frames for which transmission on a particular interface fails due to an internal MAC sub layer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the dot3StatsLateCollisions object, the dot3StatsExcessiveCollisions object, or the dot3StatsCarrierSenseErrors object. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of transmission errors on a particular interface that are not otherwise counted.

Table 3-6 Ethernet Statistics for Port

Statistics	Description
dot3StatsCarrier-SenseErrors	The number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame on a particular interface. The count represented by an instance of this object is incremented at most once per transmission attempt, even if the carrier sense condition fluctuates during a transmission attempt.
dot3StatsFrameTooLongs	A count of frames received on a particular interface that exceed the maximum permitted frame size. The count represented by an instance of this object is incremented when the frameTooLong status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.
dot3StatsInternal-MacReceiveErrors	A count of frames for which reception on a particular interface fails due to an internal MAC sub layer receive error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the dot3StatsFrameTooLongs object, the dot3Stats-AlignmentErrors object, or the dot3StatsFCSErrors object. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of received errors on a particular interface that are not otherwise counted.
dot3Coll-Frequencies	A count of individual MAC frames for which the transmission (successful or otherwise) on a particular interface occurs after the frame has experienced exactly the number of collisions in the associated dot3CollCount object. For example, a frame which is transmitted on interface 77 after experiencing exactly 4 collisions would be indicated by incrementing only dot3CollFrequencies. 77.4. No other instance of dot3CollFrequencies would be incremented in this example.

Interface Statistics

Use the following command to display the interface statistics of the selected port:

```
show interface port <port-identifier> interface-counters
```

Command mode: All

Interface statistics for port EXT1:		
	ifHCIn Counters	ifHCOOut Counters
Octets:	51697080313	51721056808
UcastPkts:	65356399	65385714
BroadcastPkts:	0	6516
MulticastPkts:	0	0
Discards:	0	0
Errors:	0	21187

Table 3-7 Interface Statistics for Port

Statistics	Description
ifInOctets	The total number of octets received on the interface, including framing characters.
ifInUcastPkts	The number of packets, delivered by this sub-layer to a higher sub-layer, which were not addressed to a multicast or broadcast address at this sub-layer.
ifInBroadcastPkts	The number of packets, delivered by this sub-layer to a higher sub-layer, which were addressed to a broadcast address at this sub-layer.
ifInMulticastPkts	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.
ifInDiscards	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being delivered to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
ifInErrors	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being delivered to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol.

Table 3-7 Interface Statistics for Port

Statistics	Description
<code>ifInUnknownProtos</code>	For packet-oriented interfaces, the number of packets received via the interface which were discarded because of an unknown or unsupported protocol. For character-oriented or fixed-length interfaces which support protocol multiplexing, the number of transmission units received via the interface which were discarded because of an unknown or unsupported protocol. For any interface which does not support protocol multiplexing, this counter will always be 0.
<code>ifOutOctets</code>	The total number of octets transmitted out of the interface, including framing characters.
<code>ifOutUcastPkts</code>	The total number of packets that higher-level protocols requested to be transmitted, and which were not addressed to a multicast or broadcast address at this sub-layer, including those that were discarded or not sent.
<code>ifOutBroadcastPkts</code>	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent. This object is a 64-bit version of <code>ifOutBroadcastPkts</code> .
<code>ifOutMulticastPkts</code>	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses. This object is a 64-bit version of <code>ifOutMulticastPkts</code> .
<code>ifOutDiscards</code>	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.
<code>ifOutErrors</code>	For packet-oriented interfaces, the number of outbound packets that could not be transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that could not be transmitted because of errors.

Interface Protocol Statistics

Use the following command to display the interface protocol statistics of the selected port:

```
show interface port <port-identifier> ip-counters
```

Command mode: All except User EXEC

```
IP statistics for port INT1:
ipInReceives:          0
ipInAddrErrors:        0   ipForwDatagrams:          0
ipInUnknownProtos:    0   ipInDiscards:            0
ipInDelivers:          0
ipTtlExceeds:          0
ipLANDattacks:         0
```

Table 3-8 Interface Protocol Statistics

Statistics	Description
ipInReceives	The total number of input datagrams received from interfaces, including those received in error.
ipInAddrErrors	The number of input datagrams discarded because the IP address in their IP header's destination field was not a valid address to be received at this entity (the switch). This count includes invalid addresses (for example, 0.0.0.0) and addresses of unsupported Classes (for example, Class E). For entities which are not IP Gateways and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
ipForwDatagrams	The number of input datagrams for which this entity (the switch) was not their final IP destination, as a result of which an attempt was made to find a route to forward them to that final destination. In entities which do not act as IP Gateways, this counter will include only those packets which were Source-Routed via this entity (the switch), and the Source-Route option processing was successful.
ipInUnknownProtos	The number of locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.
ipInDiscards	The number of input IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (for example, for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.
ipInDelivers	The total number of input datagrams successfully delivered to IP user-protocols (including ICMP).

Table 3-8 Interface Protocol Statistics

Statistics	Description
ipTtlExceeds	The number of IP datagram for which an ICMP TTL exceeded message was sent.

Link Statistics

Use the following command to display the link statistics of the selected port:

```
show interface port <port-identifier> link-counters
```

Command mode: All

```
Link statistics for port INT1:
linkStateChange:          1
```

Table 3-9 Link Statistics

Statistics	Description
linkStateChange	The total number of link state changes.

Layer 2 Statistics Commands

Table 3-10 Statistics Command Options

Command Syntax and Usage

```
show mac-address-table counters
```

Displays FDB statistics.

Command mode: All

See [page 92](#) for sample output.

```
show interface port <port-identifier> lacp counters
```

Displays Link Aggregation Control Protocol (LACP) statistics.

Command mode: All

See [page 93](#) for sample output.

FDB Statistics

Use the following command to display statistics regarding the use of the forwarding database, including the number of new entries, finds, and unsuccessful searches:

show mac-address-table counters

Command mode: All

```
FDB statistics:
  current:           83   hiwat:           855
  max:              16384 hash:              16384
```

FDB statistics are described in the following table:

Table 3-11 Forwarding Database Statistics

Statistic	Description
current	Current number of entries in the Forwarding Database.
hiwat	Highest number of entries recorded at any given time in the Forwarding Database.
max	Maximum number of FDB entries
hash	Number of hash table entries in the Forwarding Database.

LACP Statistics

Use the following command to display Link Aggregation Control Protocol (LACP) statistics:

show interface port <port-identifier> lacp counters

Command mode: All

```
Port EXT1:
-----
Valid LACPDUs received:      - 870
Valid Marker PDUs received: - 0
Valid Marker Rsp PDUs received: - 0
Unknown version/TLV type:   - 0
Illegal subtype received:   - 0
LACPDUs transmitted:       - 6031
Marker PDUs transmitted:    - 0
Marker Rsp PDUs transmitted: - 0
```

Layer 3 Statistics Commands

Table 3-12 Statistics Command Options

Command Syntax and Usage

show ip counters

Displays IP statistics.

Command mode: All except User EXEC

See [page 96](#) for sample output.

show ip route counters

Displays route statistics.

Command mode: All except User EXEC

See [page 98](#) for sample output.

show ip arp counters

Displays Address Resolution Protocol (ARP) statistics.

Command mode: All except User EXEC

See [page 99](#) for sample output.

show ip icmp counters

Displays ICMP statistics.

Command mode: All except User EXEC

See [page 100](#) for sample output.

show ip tcp counters

Displays TCP statistics.

Command mode: All except User EXEC

See [page 102](#) for sample output.

show ip udp counters

Displays UDP statistics.

Command mode: All except User EXEC

See [page 103](#) for sample output.

show ip igmp counters

Displays IGMP statistics.

Command mode: All except User EXEC

See [page 104](#) for sample output.

Table 3-12 Statistics Command Options

Command Syntax and Usage

show interface ip <interface-instance> counters

Displays interface statistics.

Command mode: All except User EXEC

See [page 105](#) for sample output.

show ip vrrp counters

When virtual routers are configured, you can display the following protocol statistics for VRRP:

- Advertisements received (`vrrpInAdvers`)
- Advertisements transmitted (`vrrpOutAdvers`)
- Advertisements received, but ignored (`vrrpBadAdvers`)

Command mode: All except User EXEC

See [page 107](#) for sample output.

show ip rip counters

Displays Routing Information Protocol (RIP) statistics.

Command mode: All except User EXEC

See [page 108](#) for sample output.

clear ip igmp [<vlan-instance>] counters

Clears IGMP statistics.

Command mode: priv-exec

clear ip counters

Clears IP statistics. Use this command with caution as it will delete all the IP statistics.

Command mode: priv-exec

show layer3 counters

Dumps all Layer 3 statistics. Use this command to gather data for tuning and debugging switch performance. If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump command.

Command mode: All except User EXEC

IP Statistics

The following command displays IP statistics:

```
show ip counters
```

Command mode: All except User EXEC

IP statistics:			
ipInReceives:	3115873	ipInHdrErrors:	1
ipInAddrErrors:	35447	ipForwDatagrams:	0
ipInUnknownProtos:	500504	ipInDiscards:	0
ipInDelivers:	2334166	ipOutRequests:	1010542
ipOutDiscards:	4	ipOutNoRoutes:	4
ipReasmReqds:	0	ipReasmOKs:	0
ipReasmFails:	0	ipFragOKs:	0
ipFragFails:	0	ipFragCreates:	0
ipRoutingDiscards:	0	ipDefaultTTL:	255
ipReasmTimeout:	5		

Table 3-13 IP Statistics

Statistics	Description
ipInReceives	The total number of input datagrams received from interfaces, including those received in error.
ipInHdrErrors	The number of input datagrams discarded due to errors in their IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options, and so forth.
ipInAddrErrors	The number of input datagrams discarded because the IP address in their IP header's destination field was not a valid address to be received at this entity (the switch). This count includes invalid addresses (for example, 0.0.0.0) and addresses of unsupported Classes (for example, Class E). For entities which are not IP Gateways and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
ipForwDatagrams	The number of input datagrams for which this entity (the switch) was not their final IP destination, as a result of which an attempt was made to find a route to forward them to that final destination. In entities which do not act as IP Gateways, this counter will include only those packets, which were Source-Routed via this entity (the switch), and the Source-Route option processing was successful.
ipInUnknownProtos	The number of locally addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.

Table 3-13 IP Statistics

Statistics	Description
<code>ipInDiscards</code>	The number of input IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (for example, for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.
<code>ipInDelivers</code>	The total number of input datagrams successfully delivered to IP user-protocols (including ICMP).
<code>ipOutRequests</code>	The total number of IP datagrams which local IP user-protocols (including ICMP) supplied to IP in requests for transmission. Note that this counter does not include any datagrams counted in <code>ipForwDatagrams</code> .
<code>ipOutDiscards</code>	The number of output IP datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (for example, for lack of buffer space). Note that this counter would include datagrams counted in <code>ipForwDatagrams</code> if any such packets met this (discretionary) discard criterion.
<code>ipOutNoRoutes</code>	The number of IP datagrams discarded because no route could be found to transmit them to their destination. Note that this counter includes any packets counted in <code>ipForwDatagrams</code> , which meet this <i>no-route</i> criterion. Note that this includes any datagrams which a host cannot route because all of its default gateways are down.
<code>ipReasmReqds</code>	The number of IP fragments received which needed to be reassembled at this entity (the switch).
<code>ipReasmOKs</code>	The number of IP datagrams successfully re- assembled.
<code>ipReasmFails</code>	The number of failures detected by the IP re- assembly algorithm (for whatever reason: timed out, errors, and so forth). Note that this is not necessarily a count of discarded IP fragments since some algorithms (notably the algorithm in RFC 815) can lose track of the number of fragments by combining them as they are received.
<code>ipFragOKs</code>	The number of IP datagrams that have been successfully fragmented at this entity (the switch).
<code>ipFragFails</code>	The number of IP datagrams that have been discarded because they needed to be fragmented at this entity (the switch) but could not be, for example, because their <code>Don't Fragment</code> flag was set.
<code>ipFragCreates</code>	The number of IP datagram fragments that have been generated as a result of fragmentation at this entity (the switch).

Table 3-13 IP Statistics

Statistics	Description
ipRoutingDiscards	The number of routing entries, which were chosen to be discarded even though they are valid. One possible reason for discarding such an entry could be to free-up buffer space for other routing entries.
ipDefaultTTL	The default value inserted into the Time-To-Live (TTL) field of the IP header of datagrams originated at this entity (the switch), whenever a TTL value is not supplied by the transport layer protocol.
ipReasmTimeout	The maximum number of seconds, which received fragments are held while they are awaiting reassembly at this entity (the switch).

Route Statistics

The following command displays route statistics:

```
show ip route counters
```

Command mode: All except User EXEC

```

Route statistics:
ipRoutesCur:          7  ipRoutesHighWater:    7
ipRoutesMax:         1024

RIP statistics:
ripInPkts:           0  ripOutPkts:           0
ripBadPkts:          0  ripRoutesAgedOut:     0

BGP statistics:
bgpInPkts:           0  bgpOutPkts:           0
bgpBadPkts:          0  bgpSessFailures:      0
bgpRoutesAdded:      0  bgpRoutesRemoved:     0
bgpRoutesCur:        0  bgpRoutesFailed:      0
bgpRoutesIgnored:    0  bgpRoutesFiltered:    0

```

Table 3-14 Route Statistics

Statistics	Description
ipRoutesCur	The total number of outstanding routes in the route table.
ipRoutesHighWater	The highest number of routes ever recorded in the route table.
ipRoutesMax	The maximum number of routes that are supported.

Table 3-14 Route Statistics

Statistics	Description
RIP statistics:	
ripInPkts	The total number of good RIP advertisement packets received.
ripOutPkts	The total number of RIP advertisement packets sent.
ripBadPkts	The total number of RIP advertisement packets received that were dropped.
ripRoutesAgedOut	The total number of routes learned via RIP that have aged out.
BGP statistics:	
bgpInPkts	The total number of BGP packets received.
bgpOutPkts	The total number of BGP packets sent.
bgpBadPkts	The total number of BGP packets dropped.
bgpSessFailures	The total number of failed sessions.
bgpRoutesAdded	The total number of routes that were added to the routing table.
bgpRoutesRemoved	The total number of routes that were removed from the routing table.
bgpRoutesCur	The total number of current BGP routes.
bgpRoutesFailed	The total number of BGP routes that failed to add in the routing table.
bgpRoutesIgnored	The total number of routes ignored because the peer was not connected locally or multihop was not configured.
bgpRoutesFiltered	The total number of routes dropped by the filter.

ARP statistics

The following command displays Address Resolution Protocol statistics

```
show ip arp counters
```

Command mode: All except User EXEC.

```
ARP statistics:
arpEntriesCur:          3  arpEntriesHighWater:      4
arpEntriesMax:         4096
```

Table 3-15 ARP Statistics

Statistics	Description
arpEntriesCur	The total number of outstanding ARP entries in the ARP table.
arpEntriesHighWater	The highest number of ARP entries ever recorded in the ARP table.
arpEntriesMax	The maximum number of ARP entries that are supported.

ICMP Statistics

The following command displays ICMP statistics:

```
show ip icmp counters
```

Command mode: All except User EXEC

ICMP statistics:			
icmpInMsgs:	245802	icmpInErrors:	1393
icmpInDestUnreachs:	41	icmpInTimeExcds:	0
icmpInParmProbs:	0	icmpInSrcQuenchs:	0
icmpInRedirects:	0	icmpInEchos:	18
icmpInEchoReps:	244350	icmpInTimestamps:	0
icmpInTimestampReps:	0	icmpInAddrMasks:	0
icmpInAddrMaskReps:	0	icmpOutMsgs:	253810
icmpOutErrors:	0	icmpOutDestUnreachs:	15
icmpOutTimeExcds:	0	icmpOutParmProbs:	0
icmpOutSrcQuenchs:	0	icmpOutRedirects:	0
icmpOutEchos:	253777	icmpOutEchoReps:	18
icmpOutTimestamps:	0	icmpOutTimestampReps:	0
icmpOutAddrMasks:	0	icmpOutAddrMaskReps:	0

Table 3-16 ICMP Statistics

Statistics	Description
icmpInMsgs	The total number of ICMP messages which the entity (the switch) received. Note that this counter includes all those counted by icmpInErrors.
icmpInErrors	The number of ICMP messages which the entity (the switch) received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, and so forth).
icmpInDestUnreachs	The number of ICMP Destination Unreachable messages received.
icmpInTimeExcds	The number of ICMP Time Exceeded messages received.

Table 3-16 ICMP Statistics

Statistics	Description
<code>icmpInParmProbs</code>	The number of ICMP Parameter Problem messages received.
<code>icmpInSrcQuenchs</code>	The number of ICMP Source Quench (buffer almost full, stop sending data) messages received.
<code>icmpInRedirects</code>	The number of ICMP Redirect messages received.
<code>icmpInEchos</code>	The number of ICMP Echo (request) messages received.
<code>icmpInEchoReps</code>	The number of ICMP Echo Reply messages received.
<code>icmpInTimestamps</code>	The number of ICMP Timestamp (request) messages received.
<code>icmpInTimestampReps</code>	The number of ICMP Timestamp Reply messages received.
<code>icmpInAddrMasks</code>	The number of ICMP Address Mask Request messages received.
<code>icmpInAddrMaskReps</code>	The number of ICMP Address Mask Reply messages received.
<code>icmpOutMsgs</code>	The total number of ICMP messages which this entity (the switch) attempted to send. Note that this counter includes all those counted by <code>icmpOutErrors</code> .
<code>icmpOutErrors</code>	The number of ICMP messages which this entity (the switch) did not send due to problems discovered within ICMP such as a lack of buffer. This value should not include errors discovered outside the ICMP layer such as the inability of IP to route the resultant datagram. In some implementations there may be no types of errors that contribute to this counter's value.
<code>icmpOutDestUnreachs</code>	The number of ICMP Destination Unreachable messages sent.
<code>icmpOutTimeExcds</code>	The number of ICMP Time Exceeded messages sent.
<code>icmpOutParmProbs</code>	The number of ICMP Parameter Problem messages sent.
<code>icmpOutSrcQuenchs</code>	The number of ICMP Source Quench (buffer almost full, stop sending data) messages sent.
<code>icmpOutRedirects</code>	The number of ICMP Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.
<code>icmpOutEchos</code>	The number of ICMP Echo (request) messages sent.
<code>icmpOutEchoReps</code>	The number of ICMP Echo Reply messages sent.
<code>icmpOutTimestamps</code>	The number of ICMP Timestamp (request) messages sent.
<code>icmpOutTimestampReps</code>	The number of ICMP Timestamp Reply messages sent.

Table 3-16 ICMP Statistics

Statistics	Description
icmpOutAddrMasks	The number of ICMP Address Mask Request messages sent.
icmpOutAddrMaskReps	The number of ICMP Address Mask Reply messages sent.

TCP Statistics

The following command displays TCP statistics:

```
show ip tcp counters
```

Command mode: All except User EXEC

```
TCP statistics:
tcpRtoAlgorithm:      4      tcpRtoMin:           0
tcpRtoMax:           240000  tcpMaxConn:         512
tcpActiveOpens:     252214  tcpPassiveOpens:    7
tcpAttemptFails:    528    tcpEstabResets:     4
tcpInSegs:          756401  tcpOutSegs:         756655
tcpRetransSegs:     0      tcpInErrs:          0
tcpCurBuff:         0      tcpCurConn:        3
tcpOutRsts:         417
```

Table 3-17 TCP Statistics

Statistics	Description
tcpRtoAlgorithm	The algorithm used to determine the timeout value used for retransmitting unacknowledged octets.
tcpRtoMin	The minimum value permitted by a TCP implementation for the retransmission timeout, measured in milliseconds. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission timeout. In particular, when the timeout algorithm is rsre(3), an object of this type has the semantics of the LBOUND quantity described in RFC 793.
tcpRtoMax	The maximum value permitted by a TCP implementation for the retransmission timeout, measured in milliseconds. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission timeout. In particular, when the timeout algorithm is rsre(3), an object of this type has the semantics of the UBOUND quantity described in RFC 793.
tcpMaxConn	The limit on the total number of TCP connections the entity (the switch) can support. In entities where the maximum number of connections is dynamic, this object should contain the value -1.

Table 3-17 TCP Statistics

Statistics	Description
tcpActiveOpens	The number of times TCP connections have made a direct transition to the SYN-SENT state from the CLOSED state.
tcpPassiveOpens	The number of times TCP connections have made a direct transition to the SYN-RCVD state from the LISTEN state.
tcpAttemptFails	The number of times TCP connections have made a direct transition to the CLOSED state from either the SYN-SENT state or the SYN-RCVD state, plus the number of times TCP connections have made a direct transition to the LISTEN state from the SYN-RCVD state.
tcpEstabResets	The number of times TCP connections have made a direct transition to the CLOSED state from either the ESTABLISHED state or the CLOSE-WAIT state.
tcpInSegs	The total number of segments received, including those received in error. This count includes segments received on currently established connections.
tcpOutSegs	The total number of segments sent, including those on current connections but excluding those containing only retransmitted octets.
tcpRetransSegs	The total number of segments retransmitted - that is, the number of TCP segments transmitted containing one or more previously transmitted octets.
tcpInErrs	The total number of segments received in error (for example, bad TCP checksums).
tcpCurBuff	The total number of outstanding memory allocations from heap by TCP protocol stack.
tcpCurConn	The total number of outstanding TCP sessions that are currently opened.
tcpOutRsts	The number of TCP segments sent containing the RST flag.

UDP Statistics

The following command displays UDP statistics:

```
show ip udp counters
```

Command mode: All except User EXEC

```
UDP statistics:
udpInDatagrams:      54    udpOutDatagrams:      43
udpInErrors:         0    udpNoPorts:          1578077
```

Table 3-18 UDP Statistics

Statistics	Description
udpInDatagrams	The total number of UDP datagrams delivered to the switch.
udpOutDatagrams	The total number of UDP datagrams sent from this entity (the switch).
udpInErrors	The number of received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port.
udpNoPorts	The total number of received UDP datagrams for which there was no application at the destination port.

IGMP Statistics

The following command displays statistics about the use of the IGMP Multicast Groups:

show ip igmp counters

Command mode: All except User EXEC

```

IGMP Snoop vlan 1 statistics:
-----
rxIgmpValidPkts:          0   rxIgmpInvalidPkts:          0
rxIgmpGenQueries:         0   rxIgmpGrpSpecificQueries:   0
rxIgmpLeaves:             0   rxIgmpReports:              0
txIgmpReports:            0   txIgmpGrpSpecificQueries:   0
txIgmpLeaves:             0
Current Groups:           0   Current M-cast Routers:     1

```

Table 3-19 IGMP Statistics

Statistic	Description
rxIgmpValidPkts	Total number of valid IGMP packets received
rxIgmpInvalidPkts	Total number of invalid packets received
rxIgmpGenQueries	Total number of General Membership Query packets received
rxIgmpGrpSpecificQueries	Total number of Membership Query packets received from specific groups
rxIgmpLeaves	Total number of Leave requests received
rxIgmpReports	Total number of Membership Reports received
txIgmpReports	Total number of Membership reports transmitted

Table 3-19 IGMP Statistics

Statistic	Description
txIgmpGrpSpecificQueries	Total number of Membership Query packets transmitted to specific groups
txIgmpLeaves	Total number of Leave messages transmitted
Current Groups	Total number of active IGMP groups learned through IGMP Snooping
Current M-Cast Routers	Total number of static Multicast Routers configured on the switch

Interface Statistics

The following command displays switch interface statistics.

```
show interface ip <interface-instance> counters
```

Command mode: All except User EXEC

IP interface 1 statistics:			
ifInOctets:	48948386	ifInUcastPkts:	220553
ifInNUcastPkts:	167895	ifInDiscards:	0
ifInErrors:	0	ifInUnknownProtos:	0
ifOutOctets:	27100789	ifOutUcastPkts:	441938
ifOutNUcastPkts:	218652	ifOutDiscards:	0
ifOutErrors:	0	ifStateChanges	1

Table 3-20 Interface Statistics

Statistics	Description
ifInOctets	The total number of octets received on the interface, including framing characters.
ifInUcastPkts	The number of packets, delivered by this sub-layer to a higher (sub-layer), which were not addressed to a multicast or broadcast address at this sub-layer.
ifInNUcastPkts	The number of packets, delivered by this sub-layer to a higher (sub-layer), which were addressed to a multicast or broadcast address at this sub-layer. This object is deprecated in favor of <code>ifInMulticastPkts</code> and <code>ifInBroadcastPkts</code> .

Table 3-20 Interface Statistics

Statistics	Description
<code>ifInDiscards</code>	The number of inbound packets that were chosen to be discarded even though no errors had been detected to prevent their being delivered to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
<code>ifInErrors</code>	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being delivered to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol.
<code>ifInUnknownProtos</code>	For packet-oriented interfaces, the number of packets received via the interface which were discarded because of an unknown or unsupported protocol. For character-oriented or fixed-length interfaces which support protocol multiplexing the number of transmission units received via the interface which were discarded because of an unknown or unsupported protocol. For any interface which does not support protocol multiplexing, this counter will always be 0.
<code>ifOutOctets</code>	The total number of octets transmitted out of the interface, including framing characters.
<code>ifOutUcastPkts</code>	The total number of packets that higher-level protocols requested to be transmitted, and which were not addressed to a multicast or broadcast address at this sub-layer, including those that were discarded or not sent.
<code>ifOutNUcastPkts</code>	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a multicast or broadcast address at this sub-layer, including those that were discarded or not sent. This object is deprecated in favor of <code>ifOutMulticastPkts</code> and <code>ifOutBroadcastPkts</code> .
<code>ifOutDiscards</code>	The number of outbound packets, which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.
<code>ifOutErrors</code>	For packet-oriented interfaces, the number of outbound packets that could not be transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that could not be transmitted because of errors.
<code>ifStateChanges</code>	The number of times an interface has transitioned from either down to up or from up to down.

VRRP Statistics

Virtual Router Redundancy Protocol (VRRP) support on the GbE Switch Module provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

When virtual routers are configured, you can display the following protocol statistics for VRRP:

- Advertisements received (`vrrpInAdvers`)
- Advertisements transmitted (`vrrpOutAdvers`)
- Advertisements received, but ignored (`vrrpBadAdvers`)

The statistics for the VRRP LAN are displayed:

```
show ip vrrp counters
```

Command mode: All except User EXEC

VRRP statistics:			
<code>vrrpInAdvers:</code>	0	<code>vrrpBadAdvers:</code>	0
<code>vrrpOutAdvers:</code>	0		
<code>vrrpBadVersion:</code>	0	<code>vrrpBadVrid:</code>	0
<code>vrrpBadAddress:</code>	0	<code>vrrpBadData:</code>	0
<code>vrrpBadPassword:</code>	0	<code>vrrpBadInterval:</code>	0

Table 3-21 VRRP Statistics

Statistics	Description
<code>vrrpInAdvers</code>	The total number of VRRP advertisements that have been received.
<code>vrrpBadAdvers</code>	The total number of VRRP advertisements received that were dropped.
<code>vrrpOutAdvers</code>	The total number of VRRP advertisements that have been sent.
<code>vrrpBadVersion</code>	The total number of VRRP advertisements that had a bad version number.
<code>vrrpBadVrid</code>	The total number of VRRP advertisements that had a bad virtual router ID.
<code>vrrpBadAddress</code>	The total number of VRRP advertisements that had a bad address.
<code>vrrpBadData</code>	The total number of VRRP advertisements that had bad data.
<code>vrrpBadPassword</code>	The total number of VRRP advertisements that had a bad password.
<code>vrrpBadInterval</code>	The total number of VRRP advertisements that had a bad interval.

Routing Information Protocol Statistics

The following command displays RIP statistics:

```
show ip rip counters
```

Command mode: All except User EXEC

```
RIP ALL STATS INFORMATION:
RIP packets received = 12
RIP packets sent     = 75
RIP request received = 0
RIP response received = 12
RIP request sent     = 3
RIP reponse sent     = 72
RIP route timeout    = 0
RIP bad size packet received = 0
RIP bad version received = 0
RIP bad zeros received = 0
RIP bad src port received = 0
RIP bad src IP received = 0
RIP packets from self received = 0
```

Management Processor Statistics

Table 3-22 Management Processor Statistics Command Options

Command Syntax and Usage

show mp packet

Displays packet statistics, to check for leads and load.

Command mode: All except User EXEC

To view a sample output and a description of the stats, see [page 109](#).

show mp tcp-block

Displays all TCP control blocks that are in use.

Command mode: All except User EXEC

To view a sample output and a description of the stats, see [page 110](#).

show mp udp-block

Displays all UDP control blocks that are in use.

Command mode: All except User EXEC

To view a sample output, see [page 111](#).

show mp cpu

Displays CPU utilization for periods of up to 1, 4, and 64 seconds.

Command mode: All except User EXEC

To view a sample output and a description of the stats, see [page 111](#).

MP Packet Statistics

The following command displays MP packet statistics:

show mp packet

Command mode: All except User EXEC

```

Packet counts:
  allocs:          1166996      frees:          1166996
  mediums:         0           mediums hi-watermark: 7
  smalls:          0           smalls hi-watermark: 7
  failures:        0

```

Table 3-23 Packet Statistics

Statistics	Description
allocs	Total number of packet allocations from the packet buffer pool by the TCP/IP protocol stack.
frees	Total number of times the packet buffers are freed (released) to the packet buffer pool by the TCP/IP protocol stack.
mediums	Total number of packet allocations with size between 128 to 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
smalls	Total number of packet allocations with size less than 128 bytes from the packet buffer pool by the TCP/IP protocol stack.
failures	Total number of packet allocation failures from the packet buffer pool by the TCP/IP protocol stack.
frees	Total number of packets freed from the packet buffer pool by the TCP/IP protocol stack.
mediums hi-watermark	The highest number of packet allocation with size between 128 to 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
smalls hi-watermark	The highest number of packet allocation with size less than 128 bytes from the packet buffer pool by the TCP/IP protocol stack.

TCP Statistics

The following command displays TCP statistics:

```
show mp tcp-block
```

Command mode: All except User EXEC

```
All TCP allocated control blocks:
10ad41e8: 0.0.0.0          0 <=> 0.0.0.0          80 listen
10ad5790: 47.81.27.5          1171 <=> 47.80.23.243    23 established
```

Table 3-24 MP Specified TCP Statistics

Statistics	Description
10ad41e8/10ad5790	Memory
0.0.0.0/47.81.27.5	Destination IP address
0/1171	Destination port
0.0.0.0/47.80.23.243	Source IP

Table 3-24 MP Specified TCP Statistics

Statistics	Description
80/23	Source port
listen/established	State

UDP Statistics

The following command displays UDP statistics:

```
show mp udp-block
```

Command mode: All except User EXEC

```
All UDP allocated control blocks:
161: listen
```

CPU Statistics

The following command displays the CPU utilization statistics:

```
show mp cpu
```

Command mode: All except User EXEC.

```
CPU utilization:
cpuUtil1Second:      53%
cpuUtil4Seconds:     54%
cpuUtil64Seconds:    54%
```

Table 3-25 CPU Statistics

Statistics	Description
cpuUtil1Second	The utilization of MP CPU over 1 second. It shows the percentage.
cpuUtil4Seconds	The utilization of MP CPU over 4 seconds. It shows the percentage.
cpuUtil64Seconds	The utilization of MP CPU over 64 seconds. It shows the percentage.

Access Control List Statistics

Table 3-26 ACL Statistics Command Options

Command Syntax and Usage

show access-control list <list-number> counters

Displays the Access Control List Statistics for a specific ACL.

Command mode: All except User EXEC

For details, see [page 112](#).

show access-control meter <meter-number> counters

Displays statistics for a specific ACL Meter.

Command mode: All except User EXEC

For details, see [page 113](#).

show access-control counters

Displays all ACL statistics.

Command mode: All except User EXEC

clear access-control list <list-number> counters

Clears ACL statistics.

Command mode: All except User EXEC

clear access-control meter <meter-number> counters

Clears ACL metering statistics.

Command mode: All except User EXEC

ACL Statistics

This option displays statistics for the selected ACL.

show access-control list <list-number> counters

Command mode: All except User EXEC

Hits for ACL 1, port EXT1:	26057515
Hits for ACL 2, port EXT1:	26057497

ACL Meter Statistics

This option displays statistics of the selected ACL meter.

```
show access-control meter <meter-number> counters
```

Command mode: All except User EXEC

```
Meters for ACL Group 1, Port EXT1: Out of profile: 0
Meters for ACL Group 2, Port EXT1: Out of profile: 0
```

SNMP Statistics

The following command displays SNMP statistics:

```
show snmp-server counters
```

Command mode: All except User EXEC

SNMP statistics:			
snmpInPkts:	150097	snmpInBadVersions:	0
snmpInBadC'tyNames:	0	snmpInBadC'tyUses:	0
snmpInASNParseErrs:	0	snmpEnableAuthTraps:	0
snmpOutPkts:	150097	snmpInBadTypes:	0
snmpInTooBigS:	0	snmpInNoSuchNames:	0
snmpInBadValues:	0	snmpInReadOnlyS:	0
snmpInGenErrs:	0	snmpInTotalReqVars:	798464
snmpInTotalSetVars:	2731	snmpInGetRequests:	17593
snmpInGetNexts:	131389	snmpInSetRequests:	615
snmpInGetResponses:	0	snmpInTraps:	0
snmpOutTooBigS:	0	snmpOutNoSuchNames:	1
snmpOutBadValues:	0	snmpOutReadOnlyS:	0
snmpOutGenErrs:	1	snmpOutGetRequests:	0
snmpOutGetNexts:	0	snmpOutSetRequests:	0
snmpOutGetResponses:	150093	snmpOutTraps:	4
snmpSilentDrops:	0	snmpProxyDrops:	0
SNMPv3 Statistics:			
snmpUnknownSecurityModels:		0	
snmpInvalidMsgs:		0	
snmpUnknownPDUHandlers:		0	
snmpUnknownContexts:		0	
snmpUnavailableContexts:		0	
usmStatsUnsupportedSecLevels:		0	
usmStatsNotInTimeWindows:		0	
usmStatsUnknownUserNames:		2	
usmStatsUnknownEngineIDs:		2	
usmStatsWrongDigests:		0	
usmStatsDecryptionErrors:		0	

Table 3-27 SNMP Statistics

Statistics	Description
snmpInPkts	The total number of Messages delivered to the SNMP entity from the transport service.
snmpInBadVersions	The total number of SNMP Messages, which were delivered to the SNMP protocol entity and were for an unsupported SNMP version.
snmpInBadC'tyNames	The total number of SNMP Messages delivered to the SNMP entity which used an SNMP community name not known to the said entity (the switch).
snmpInBadC'tyUses	The total number of SNMP Messages delivered to the SNMP protocol entity which represented an SNMP operation which was not allowed by the SNMP community named in the Message.

Table 3-27 SNMP Statistics

Statistics	Description
snmpInASNParseErrs	The total number of ASN.1 or BER errors encountered by the SNMP protocol entity when decoding SNMP Messages received. Note: OSI's method of specifying abstract objects is called ASN.1 (Abstract Syntax Notation One, defined in X.208), and one set of rules for representing such objects as strings of ones and zeros is called the BER (Basic Encoding Rules, defined in X.209). ASN.1 is a flexible notation that allows one to define a variety of data types, from simple types such as integers and bit strings to structured types such as sets and sequences. BER describes how to represent or encode values of each ASN.1 type as a string of eight-bit octets.
snmpEnableAuthTraps	An object to enable or disable the authentication traps generated by this entity (the switch).
snmpOutPkts	The total number of SNMP Messages which were passed from the SNMP protocol entity to the transport service.
snmpInBadTypes	The total number of SNMP Messages which failed ASN parsing.
snmpInTooBig	The total number of SNMP Protocol Data Units (PDUs) which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>too big</i> .
snmpInNoSuchNames	The total number of SNMP Protocol Data Units (PDUs) which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>noSuchName</i> .
snmpInBadValues	The total number of SNMP Protocol Data Units (PDUs) which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>badValue</i> .
snmpInReadOnly	The total number of valid SNMP Protocol Data Units (PDUs), which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>'read-Only'</i> . It should be noted that it is a protocol error to generate an SNMP PDU, which contains the value <i>'read-Only'</i> in the error-status field. As such, this object is provided as a means of detecting incorrect implementations of the SNMP.
snmpInGenErrs	The total number of SNMP Protocol Data Units (PDUs), which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>genErr</i> .
snmpInTotalReqVars	The total number of MIB objects which have been retrieved successfully by the SNMP protocol entity as a result of receiving valid SNMP Get-Request and Get-Next Protocol Data Units (PDUs).

Table 3-27 SNMP Statistics

Statistics	Description
<code>snmpInTotalSetVars</code>	The total number of MIB objects, which have been altered successfully by the SNMP protocol entity as a result of receiving valid SNMP Set-Request Protocol Data Units (PDUs).
<code>snmpInGetRequests</code>	The total number of SNMP Get-Request Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
<code>snmpInGetNexts</code>	The total number of SNMP Get-Next Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
<code>snmpInSetRequests</code>	The total number of SNMP Set-Request Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
<code>snmpInGetResponses</code>	The total number of SNMP Get-Response Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
<code>snmpInTraps</code>	The total number of SNMP Trap Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
<code>snmpOutTooBigs</code>	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is <i>too big</i> .
<code>snmpOutNoSuchNames</code>	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status is <code>noSuchName</code> .
<code>snmpOutBadValues</code>	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is <code>badValue</code> .
<code>snmpOutReadOnlys</code>	Not in use.
<code>snmpOutGenErrs</code>	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is <code>genErr</code> .
<code>snmpOutGetRequests</code>	The total number of SNMP Get-Request Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
<code>snmpOutGetNexts</code>	The total number of SNMP Get-Next Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
<code>snmpOutSetRequests</code>	The total number of SNMP Set-Request Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
<code>snmpOutGetResponses</code>	The total number of SNMP Get-Response Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.

Table 3-27 SNMP Statistics

Statistics	Description
snmpOutTraps	The total number of SNMP Trap Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpSilentDrops	The total number of GetRequest-PDUs, GetNextRequest-PDUs, GetBulkRequest-PDUs, SetRequest-PDUs, and InformRequest-PDUs delivered to the SNMPv2 entity which were silently dropped because the size of a reply containing an alternate Response-PDU with an empty variable bindings field was greater than either a local constraint or the maximum message size associated with the originator of the request.
snmpProxyDrops	The total number of GetRequest-PDUs, GetNextRequest-PDUs, GetBulkRequest-PDUs, SetRequest-PDUs, and InformRequest-PDUs delivered to the SNMP entity which were silently dropped because the transmission of the message to a proxy target failed in a manner such that no Response-PDU could be returned.
SNMPv3 Statistics:	
snmpUnknownSecurityModels	The total number of packets received by the SNMP engine which were dropped because they referenced a securityModel that was not known to or supported by the SNMP engine.
snmpInvalidMsgs	The total number of packets received by the SNMP engine which were dropped because there were invalid or inconsistent components in the SNMP message.
snmpUnknownPDUHandlers	The total number of packets received by the SNMP engine which were dropped because the PDU contained in the packet could not be passed to an application responsible for handling the pduType, for example, no SNMP application had registered for the proper combination of the contextEngineID and the pduType.
snmpUnknownContexts	The total number of packets received by the SNMP engine which were dropped because the context contained in the message was unavailable.
snmpUnavailableContexts	The total number of packets received by the SNMP engine which were dropped because the context contained in the message was unknown.
usmStatsUnsupportedSecLevels	The total number of packets received by the SNMP engine which were dropped because they requested a securityLevel that was unknown to the SNMP engine or otherwise unavailable.
usmStatsNotInTimeWindows	The total number of packets received by the SNMP engine which were dropped because they appeared outside of the authoritative SNMP engine's window.

Table 3-27 SNMP Statistics

Statistics	Description
usmStatsUnknownUserNames	The total number of packets received by the SNMP engine which were dropped because they referenced a user that was not known to the SNMP engine.
usmStatsUnknownEngineIDs	The total number of packets received by the SNMP engine which were dropped because they referenced an snmpEngineID that was not known to the SNMP engine.
usmStatsWrongDigests	The total number of packets received by the SNMP engine which were dropped because they didn't contain the expected digest value.
usmStatsDecryptionErrors	The total number of packets received by the SNMP engine which were dropped because they could not be decrypted.

NTP Statistics

Alteon OS uses NTP (Network Timing Protocol) version 3 to synchronize the switch's internal clock with an atomic time calibrated NTP server. With NTP enabled, the switch can accurately update its internal clock to be consistent with other devices on the network and generates accurate syslogs.

The following command displays NTP statistics:

```
show ntp counters
```

Command mode: All except User EXEC

```
NTP statistics:
  Primary Server:
    Requests Sent:           17
    Responses Received:      17
    Updates:                 1
  Secondary Server:
    Requests Sent:           0
    Responses Received:      0
    Updates:                 0

  Last update based on response from primary server.
  Last update time: 18:04:16 Tue Jul 13, 2004
  Current system time: 18:55:49 Tue Jul 13, 2004
```

Table 3-28 NTP Statistics Parameters

Field	Description
Primary Server	<p>Requests Sent: The total number of NTP requests the switch sent to the primary NTP server to synchronize time.</p> <p>Responses Received: The total number of NTP responses received from the primary NTP server.</p> <p>Updates: The total number of times the switch updated its time based on the NTP responses received from the primary NTP server.</p>
Secondary Server	<p>Requests Sent: The total number of NTP requests the switch sent to the secondary NTP server to synchronize time.</p> <p>Responses Received: The total number of NTP responses received from the secondary NTP server.</p> <p>Updates: The total number of times the switch updated its time based on the NTP responses received from the secondary NTP server.</p>
Last update based on response from primary server	Last update of time on the switch based on either primary or secondary NTP response received.
Last update time	The time stamp showing the time when the switch was last updated.
Current system time	The switch system time when the command show ntp counters was issued.

Statistics Dump

The following command dumps switch statistics:

```
show counters
```

Use the dump command to dump all switch statistics (40K or more, depending on your configuration). This data can be used to tune or debug switch performance.

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump command:

CHAPTER 4

Configuration Commands

This chapter discusses how to use the Command Line Interface (CLI) for making, viewing, and saving switch configuration changes. Many of the commands, although not new, display more or different information than in the previous version. Important differences are called out in the text.

Table 4-1 Configuration Command Options

Command Syntax and Usage

show running-config

Dumps current configuration to a script file.

Command mode: All except User EXEC

For details, see [page 226](#).

copy running-config {ftp|tftp}

Backs up current configuration to FTP or TFTP server.

Command mode: priv-exec

For details, see [page 227](#).

copy {ftp|tftp} running-config

Restores current configuration from a FTP or TFTP server.

Command mode: priv-exec

For details, see [page 227](#).

Viewing and Saving Changes

As you use the configuration commands to set switch parameters, the changes you make take effect immediately. You do not need to apply them. Configuration changes are lost the next time the switch boots, unless you save the changes.

NOTE – Some operations can override the settings of the Configuration commands. Therefore, settings you view using the Configuration commands (for example, port status) might differ from run-time information that you view using the Information commands or the management module. The Information commands display current run-time information of switch parameters.

Saving the Configuration

You must save configuration settings to flash memory, so the GbESM reloads the settings after a reset.

NOTE – If you do not save the changes, they will be lost the next time the system is rebooted.

To save the new configuration, enter the following command:

```
Router# copy running-config startup-config
```

When you save configuration changes, the changes are saved to the *active* configuration block. For instructions on selecting the configuration to run at the next system reset, see [“Selecting a Configuration Block” on page 238](#).

System Configuration Commands

These commands provide configuration of switch management parameters such as user and administrator privilege mode passwords, Web-based management settings, and management access lists.

Table 4-2 System Configuration Command Options

Command Syntax and Usage

system date <yyyy> <mm> <dd>

Prompts the user for the system date. The date reverts to its default value when the switch is reset.

Command mode: config

system time <hh>:<mm>:<ss>

Configures the system time using a 24-hour clock format. The time reverts to its default value when the switch is reset.

Command mode: config

Table 4-2 System Configuration Command Options**Command Syntax and Usage****system timezone**

Configures the time zone where the switch resides. You are prompted to select your location (continent, country, region) by the timezone wizard. Once a region is selected, the switch updates the time to reflect local changes to Daylight Savings Time, etc.

Command mode: config

system idle <idle-value>

Sets the idle timeout for CLI sessions, from 1 to 60 minutes. The default is 5 minutes.

Command mode: config

system notice <string>

Displays login notice immediately before the “Enter password:” prompt. This notice can contain up to 1024 characters and new lines.

Command mode: config

banner <string>

Configures a login banner of up to 80 characters. When a user or administrator logs into the switch, the login banner is displayed. It is also displayed as part of the output from the **show sys-info** command.

Command mode: config

[no] hostname <string>

Enables or disables displaying of the host name (system administrator’s name) in the Command Line Interface (CLI).

Command mode: config

show system

Displays the current system parameters.

Command mode: All

System Host Log Configuration**Table 4-3** System Configuration Command Options**Command Syntax and Usage****[no] logging host {<host-instance>} address {<ip-address>}**

Sets the IP address of the first or second syslog host.

Command mode: config

logging host {<host-instance>} severity {<severity-level>}

This option sets the severity level of the first or second syslog host displayed. The default is 7, which means log all the seven severity levels.

Command mode: config

Table 4-3 System Configuration Command Options

Command Syntax and Usage

logging host {<host-instance>} **facility** {<facility-level>}

This option sets the facility level of the first or second syslog host displayed. The default is 0.

Command mode: config

logging console

Enables delivering syslog messages to the console. It is enabled by default.

Command mode: config

[no] logging consoleDisables delivering syslog messages to the console. When necessary, disabling `console` ensures the switch is not affected by syslog messages. It is enabled by default.**Command mode:** config

[no] logging log {<feature>}

Displays a list of features for which syslog messages can be generated. You can choose to enable/disable specific features (such as vlans, stg, or servers), or enable/disable syslog on all available features.

Command mode: config

show logging

Displays the current syslog settings.

Command mode: All

SSH Server Configuration Commands

For the GbE Switch Module, these commands enable Secure Shell access from any SSH client.

NOTE – Most of the following commands are accessible only through the management module interface.

Table 4-4 System Configuration Command Options

Command Syntax and Usage	
ssh interval <i><interval-value></i>	Set the interval for auto-generation of the RSA server key. Command mode: config
ssh scp-password	Set the administration password for SCP access. Command mode: config
ssh generate-host-key	Generate the RSA host key. Command mode: config
ssh generate-server-key	Generate the RSA server key. Command mode: config
ssh port <i><port-number></i>	Sets the SSH server port number. Command mode: config
ssh scp-enable	Enables the SCP apply and save. Command mode: config
no ssh scp-enable	Disables the SCP apply and save. Command mode: config
ssh enable	Enables the SSH server. Command mode: config
no ssh enable	Disables the SSH server. Command mode: config
show ssh	Displays the current SSH server configuration. Command mode: All

RADIUS Server Configuration Commands

Table 4-5 System Configuration Command Options

Command Syntax and Usage

[no] radius-server host *<ip-address>*

Sets the primary or secondary RADIUS server address.

Command mode: config

radius-server host *<ip-address>* **key** *<key-value>*

This is the primary or secondary shared secret between the switch and the RADIUS server(s).

Command mode: config

radius-server port *<port-number>*

Enter the number of the UDP port to be configured, between 1500 - 3000. The default is 1645.

Command mode: config

radius-server retransmit *<retry-count>*

Sets the number of failed authentication requests before switching to a different RADIUS server. The default is 3 requests.

Command mode: config

radius-server timeout *<timeout-value>*

Sets the amount of time, in seconds, before a RADIUS server authentication attempt is considered to have failed. The default is 3 seconds.

Command mode: config

[no] radius-server telnet-backdoor

Enables or disables the RADIUS backdoor for telnet. The `telnet` command also applies to SSH/SCP connections and the Browser-Based Interface (BBI). The default is `disabled`.

To obtain the RADIUS backdoor password for your GbESM, contact your IBM Service and Support line.

Command mode: config

radius-server enable

Enables the RADIUS server.

Command mode: config

no radius-server enable

Disables the RADIUS server.

Command mode: config

show radius-server

Displays the current RADIUS server parameters.

Command mode: All

TACACS+ Server Configuration Commands

TACACS (Terminal Access Controller Access Control system) is an authentication protocol that allows a remote access server to forward a user's logon password to an authentication server to determine whether access can be allowed to a given system. TACACS is an encryption protocol, and therefore less secure than TACACS+ and Remote Authentication Dial-In User Service (RADIUS) protocols. (Both TACACS and TACACS+ are described in RFC 1492.)

TACACS+ protocol is more reliable than RADIUS, as TACACS+ uses the Transmission Control Protocol (TCP) whereas RADIUS uses the User Datagram Protocol (UDP). Also, RADIUS combines authentication and authorization in a user profile, whereas TACACS+ separates the two operations.

TACACS+ offers the following advantages over RADIUS as the authentication device:

- TACACS+ is TCP-based, so it facilitates connection-oriented traffic.
- It supports full-packet encryption, as opposed to password-only in authentication requests.
- It supports de-coupled authentication, authorization, and accounting.

Table 4-6 TACACS+ Server Command Options

Command Syntax and Usage

[no] tacacs-server host *<ip-address>*

Defines the primary or secondary TACACS+ server address.

Command mode: config

[no] tacacs-server host *<ip-address>* **key** *<key-value>*

This is the primary or secondary shared secret between the switch and the TACACS+ server(s).

Command mode: config

tacacs-server port *<port-number>*

Enter the number of the TCP port to be configured, between 1 - 65000. The default is 49.

Command mode: config

tacacs-server retransmit *<retry-count>*

Sets the number of failed authentication requests before switching to a different TACACS+ server. The default is 3 requests.

Command mode: config

tacacs-server timeout *<timeout-value>*

Sets the amount of time, in seconds, before a TACACS+ server authentication attempt is considered to have failed. The default is 5 seconds.

Command mode: config

Table 4-6 TACACS+ Server Command Options

Command Syntax and Usage

[no] tacacs-server telnet-backdoor

Enables or disables the TACACS+ back door for telnet. The `telnet` command also applies to SSH/SCP connections, and the Browser-Based Interface (BBI). The default is `disabled`.

To obtain the TACACS+ backdoor password for your GbESM, contact your IBM Service and Support line.

Command mode: `config`

[no] tacacs-server command-authorization

Enables or disables TACACS+ command authorization.

Command mode: `config`

[no] tacacs-server command-logging

Enables or disables TACACS+ command logging.

Command mode: `config`

tacacs-server enable

Enables the TACACS+ server.

Command mode: `config`

no tacacs-server enable

Disables the TACACS+ server. This is the default setting.

Command mode: `config`

show tacacs-server

Displays current TACACS+ configuration parameters.

Command mode: `All`

NTP Server Configuration Commands

These commands enable you to synchronize the switch clock to a Network Time Protocol (NTP) server. By default, this option is disabled.

Table 4-7 System Configuration Command Options

Command Syntax and Usage

ntp server *<ip-address>*

Prompts for the IP addresses of the primary or secondary NTP server to which you want to synchronize the switch clock.

Command mode: config

ntp interval *<interval-value>*

Specifies the interval, that is, how often, in minutes (1-2880), to re-synchronize the switch clock with the NTP server.

Command mode: config

ntp timezone *<zone-value>*

Prompts for the NTP time zone offset, in hours and minutes, of the switch you are synchronizing from Greenwich Mean Time (GMT).

[no] ntp daylight savings

Disables or enables daylight savings time in the system clock. When enabled, the switch will add an extra hour to the system clock so that it is consistent with the local clock. By default, this option is disabled.

Command mode: config

ntp enable

Enables the NTP synchronization service.

Command mode: config

no ntp enable

Disables the NTP synchronization service.

Command mode: config

show ntp

Displays the current NTP service settings.

Command mode: All

System SNMP Configuration Commands

Alteon OS supports SNMP-based network management. In SNMP model of network management, a management station (client/manager) accesses a set of variables known as MIBs (Management Information Base) provided by the managed device (agent). If you are running an SNMP network management station on your network, you can manage the switch using the following standard SNMP MIBs:

- MIB II (RFC 1213)
- Ethernet MIB (RFC 1643)
- Bridge MIB (RFC 1493)

An SNMP agent is a software process on the managed device that listens on UDP port 161 for SNMP messages. Each SNMP message sent to the agent contains a list of management objects to retrieve or to modify.

SNMP parameters that can be modified include:

- System name
- System location
- System contact
- Use of the SNMP system authentication trap function
- Read community string
- Write community string
- Trap community strings

Table 4-8 System SNMP Command Options

Command Syntax and Usage

snmp-server name *<string>*

Configures the name for the system. The name can have a maximum of 64 characters.

Command mode: config

snmp-server location *<string>*

Configures the name of the system location. The location can have a maximum of 64 characters.

Command mode: config

snmp-server contact *<string>*

Configures the name of the system contact. The contact can have a maximum of 64 characters.

Command mode: config

Table 4-8 System SNMP Command Options

Command Syntax and Usage

snmp-server read-community <string>

Configures the SNMP read community string. The read community string controls SNMP “get” access to the switch. It can have a maximum of 32 characters. The default read community string is *public*.

Command mode: config

snmp-server write-community <string>

Configures the SNMP write community string. The write community string controls SNMP “set” and “get” access to the switch. It can have a maximum of 32 characters. The default write community string is *private*.

Command mode: config

snmp-server timeout <timeout-value>

Sets the timeout value for the SNMP state machine.

Command mode: config

[no] snmp-server authentication-trap

Enables or disables the use of the system authentication trap facility. The default setting is disabled.

Command mode: config

[no] snmp-server link-trap

Enables or disables the sending of SNMP link up and link down traps. The default setting is enabled.

Command mode: config

show snmp-server

Displays the current SNMP configuration.

Command mode: All

SNMPv3 Configuration Commands

SNMP version 3 (SNMPv3) is an extensible SNMP Framework that supplements the SNMPv2 Framework by supporting the following:

- a new SNMP message format
- security for messages
- access control
- remote configuration of SNMP parameters

For more details on the SNMPv3 architecture please refer to RFC2271 to RFC2276.

Table 4-9 SNMPv3 Configuration Command Options

Command Syntax and Usage

snmp-server user <user-instance>

This command allows you to create a user security model (USM) entry for an authorized user. You can also configure this entry through SNMP.

Command mode: config

To view command options, see [page 133](#).

snmp-server view <view-instance>

This command allows you to create different MIB views.

Command mode: config

To view command options, see [page 134](#).

snmp-server access <access-instance>

This command allows you to specify access rights. The View-based Access Control Model defines a set of services that an application can use for checking access rights of the user. You need access control when you have to process retrieval or modification request from an SNMP entity.

Command mode: config

To view command options, see [page 135](#).

snmp-server group <group-instance>

A group maps the user name to the access group names and their access rights needed to access SNMP management objects. A group defines the access rights assigned to all names that belong to a particular group.

Command mode: config

To view command options, see [page 137](#).

snmp-server community <community-instance>

The community table contains objects for mapping community strings and version-independent SNMP message parameters.

Command mode: config

To view command options, see [page 137](#).

snmp-server target-address <taddr-instance>

This command allows you to configure destination information, consisting of a transport domain and a transport address. This is also termed as transport endpoint. The SNMP MIB provides a mechanism for performing source address validation on incoming requests, and for selecting community strings based on target addresses for outgoing notifications.

Command mode: config

To view command options, see [page 138](#).

Table 4-9 SNMPv3 Configuration Command Options

snmp-server target-parameters <*tparam-instance*>

This command allows you to configure SNMP parameters, consisting of message processing model, security model, security level, and security name information. There may be multiple transport endpoints associated with a particular set of SNMP parameters, or a particular transport endpoint may be associated with several sets of SNMP parameters.

Command mode: config

To view command options, see [page 139](#).

snmp-server notify <*notify-instance*>

A notification application typically monitors a system for particular events or conditions, and generates Notification-Class messages based on these events or conditions.

Command mode: config

To view command options, see [page 141](#).

snmp-server version {*v1v2v3* | *v3only*}

This command allows you to enable or disable the access to SNMP versions 1, 2 or 3. This command is enabled by default.

Command mode: config

show snmp-server v3

Displays the current SNMPv3 configuration.

Command mode: All

User Security Model Configuration Commands

You can make use of a defined set of user identities using this Security Model. An SNMP engine must have the knowledge of applicable attributes of a user.

These commands help you create a user security model entry for an authorized user. You need to provide a security name to create the USM entry.

Table 4-10 User Security Model Configuration Command Options

Command Syntax and Usage

snmp-server user <*user-instance*> **name** <*user-name*>

This command allows you to configure a string up to 32 characters that represents the name of the user. This is the login name that you need in order to access the switch.

Command mode: config

snmp-server user <*user-instance*> **authentication-protocol**
{*md5* | *sha* | *none*}

This command allows you to configure the authentication protocol between HMAC-MD5-96 or HMAC-SHA-96. The default algorithm is none.

Command mode: config

Table 4-10 User Security Model Configuration Command Options**Command Syntax and Usage**

```
snmp-server user <user-instance> authentication-password <password-value>
```

If you selected an authentication algorithm using the above command, you need to provide a password, otherwise you will get an error message during validation. This command allows you to create or change your password for authentication.

Command mode: config

```
snmp-server user <user-instance> privacy-protocol {des|none}
```

This command allows you to configure the type of privacy protocol on your switch. The privacy protocol protects messages from disclosure. The options are `des` (CBC-DES Symmetric Encryption Protocol) or `none`. If you specify `des` as the privacy protocol, then make sure that you have selected one of the authentication protocols (MD5 or HMAC-SHA-96). If you select `none` as the authentication protocol, you will get an error message.

Command mode: config

```
snmp-server user <user-instance> privacy-password <password-value>
```

This command allows you to create or change the privacy password.

Command mode: config

```
no snmp-server user <user-instance>
```

Deletes the USM user entries.

Command mode: config

```
show snmp-server user [<user-instance>]
```

Displays the USM user entries.

Command mode: All

SNMPv3 View Configuration Commands**Table 4-11** SNMPv3 View Command Options**Command Syntax and Usage**

```
snmp-server view <view-instance> name <view-name>
```

This command defines the name for a family of view subtrees up to a maximum of 32 characters.

Command mode: config

```
snmp-server view <view-instance> tree <tree-value>
```

This command defines MIB tree, a string of maximum 32 characters, which when combined with the corresponding mask defines a family of view subtrees.

Command mode: config

Table 4-11 SNMPv3 View Command Options**Command Syntax and Usage**

```
snmp-server view <view-instance> mask <mask-value>
```

This command defines the bit mask, which in combination with the corresponding tree defines a family of view subtrees.

Command mode: config

```
snmp-server view <view-instance> type {included|excluded}
```

This command indicates whether the corresponding instances of `vacmViewTreeFamilySubtree` and `vacmViewTreeFamilyMask` define a family of view subtrees, which is included in or excluded from the MIB view.

Command mode: config

```
no snmp-server view <view-instance>
```

Deletes the `vacmViewTreeFamily` group entry.

Command mode: config

```
show snmp-server view [<view-instance>]
```

Displays the current `vacmViewTreeFamily` configuration.

Command mode: All

View-based Access Control Model Configuration Commands

The view-based Access Control Model defines a set of services that an application can use for checking access rights of the user. Access control is needed when the user has to process SNMP retrieval or modification request from an SNMP entity.

Table 4-12 View-based Access Control Model Command Options**Command Syntax and Usage**

```
snmp-server access <access-instance> name <name-value>
```

Defines the name of the group.

Command mode: config

```
snmp-server access <access-instance> prefix <prefix-value>
```

Defines the name of the context. An SNMP context is a collection of management information that an SNMP entity can access. An SNMP entity has access to many contexts. For more information on naming the management information, see RFC2571, the SNMP Architecture document. The view-based Access Control Model defines a table that lists the locally available contexts by contextName.

Command mode: config

Table 4-12 View-based Access Control Model Command Options**Command Syntax and Usage**

```
snmp-server access <access-instance> security {usm|snmpv1|snmpv2}
```

Allows you to select the security model to be used.

Command mode: config

```
snmp-server access <access-instance> level {noAuthNoPriv|authNoPriv|authPriv}
```

Defines the minimum level of security required to gain access rights. The level `noAuthNoPriv` means that the SNMP message will be sent without authentication and without using a privacy protocol. The level `authNoPriv` means that the SNMP message will be sent with authentication but without using a privacy protocol. The `authPriv` means that the SNMP message will be sent both with authentication and using a privacy protocol.

Command mode: config

```
snmp-server access <access-instance> match {exact|prefix}
```

If the value is set to `exact`, then all the rows whose `contextName` exactly matches the prefix are selected. If the value is set to `prefix` then the all the rows where the starting octets of the `contextName` exactly match the prefix are selected.

Command mode: config

```
snmp-server access <access-instance> read-view <view-name>
```

This is a 32 character read view name that allows you read access to a particular MIB view. If the value is empty or if there is no active MIB view having this value then no access is granted.

Command mode: config

```
snmp-server access <access-instance> write-view <view-name>
```

This is a 32 character write view name that allows you write access to the MIB view. If the value is empty or if there is no active MIB view having this value then no access is granted.

Command mode: config

```
snmp-server access <access-instance> notify-view <view-name>
```

This is a 32 character notify view name that allows you notify access to the MIB view.

Command mode: config

```
no snmp-server access <access-instance>
```

Deletes the View-based Access Control entry.

Command mode: config

```
show snmp-server access [<access-instance>]
```

Displays the View-based Access Control configuration.

Command mode: All

SNMPv3 Group Configuration Commands

Table 4-13 SNMPv3 Group Command Options

Command Syntax and Usage

snmp-server group *<group-instance>* **security** {*usm*|*snmpv1*|*snmpv2*}

Defines the security model.

Command mode: config

snmp-server group *<group-instance>* **user-name** *<name>*

Sets the user name as defined in `snmp-server user <user-instance> name <user-name>` on [page 133](#).

Command mode: config

snmp-server group *<group-instance>* **group-name** *<name>*

The name for the access group as defined in `snmp-server access <access-instance> name <name-value>` on [page 133](#).

Command mode: config

no snmp-server group *<group-instance>*

Deletes the `vacmSecurityToGroup` entry.

Command mode: config

show snmp-server group [*<group-instance>*]

Displays the current `vacmSecurityToGroup` configuration.

Command mode: All

SNMPv3 Community Table Configuration Commands

These commands are used for configuring the community table entry. The configured entry is stored in the community table list in the SNMP engine. This table is used to configure community strings in the Local Configuration Datastore (LCD) of SNMP engine.

Table 4-14 SNMPv3 Community Table Configuration Command Options

Command Syntax and Usage

snmp-server community *<community-instance>* **index** *<string>*

Allows you to configure the unique index value of a row in this table consisting of 32 characters maximum.

Command string: config

snmp-server community *<community-instance>* **name** *<string>*

Defines the user name as defined in `snmp-server user <user-instance> name <user-name>` on [page 133](#).

Command string: config

Table 4-14 SNMPv3 Community Table Configuration Command Options**Command Syntax and Usage**

snmp-server community *<community-instance>* **user-name** *<string>*

Defines a readable 32 character long string that represents the corresponding value of an SNMP community name in a security model.

Command mode: config

snmp-server community *<community-instance>* **tag** *<string>*

Allows you to configure a tag of up to 255 characters maximum. This tag specifies a set of transport endpoints to which a command responder application sends an SNMP trap.

Command mode: config

no snmp-server community *<community-instance>*

Deletes the community table entry.

Command mode: config

show snmp-server community [*<community-instance>*]

Displays the community table configuration.

Command mode: All

SNMPv3 Target Address Table Configuration Commands

These commands are used to configure the target transport entry. The configured entry is stored in the target address table list in the SNMP engine. This table of transport addresses is used in the generation of SNMP messages.

Table 4-15 Target Address Table Command Options**Command Syntax and Usage**

snmp-server target-address *<taddr-instance>* **name** *<string>*

Allows you to configure the locally arbitrary, but unique identifier, target address name associated with this entry.

Command mode: config

snmp-server target-address *<taddr-instance>* **address** *<ip-address>*

Allows you to configure a transport address IP that can be used in the generation of SNMP traps.

Command mode: config

snmp-server target-address *<taddr-instance>* **port** *<port-number>*

Allows you to configure a transport address port that can be used in the generation of SNMP traps.

Command mode: config

Table 4-15 Target Address Table Command Options**Command Syntax and Usage**

```
snmp-server target-address <taddr-instance> taglist <string>
```

Allows you to configure a list of tags that are used to select target addresses for a particular operation.

Command mode: config

```
snmp-server target-address <taddr-instance> parameters-name <string>
```

Defines the name as defined in `snmp-server target-parameters <tparam-instance> name <string>` on [page 139](#).

Command mode: config

```
no snmp-server target-address <taddr-instance>
```

Deletes the Target Address Table entry.

Command mode: config

```
show snmp-server target-address [<taddr-instance>]
```

Displays the current Target Address Table configuration.

Command mode: All

SNMPv3 Target Parameters Table Configuration Commands

You can configure the target parameters entry and store it in the target parameters table in the SNMP engine. This table contains parameters that are used to generate a message. The parameters include the message processing model (for example: SNMPv3, SNMPv2c, SNMPv1), the security model (for example: USM), the security name, and the security level (noAuthnoPriv, authNoPriv, or authPriv).

Table 4-16 Target Parameters Table Configuration Command Options**Command Syntax and Usage**

```
snmp-server target-parameters <tparam-instance> name <string>
```

Allows you to configure the locally arbitrary, but unique, identifier that is associated with this entry.

Command mode: config

```
snmp-server target-parameters <tparam-instance> message  
{ snmpv1 | snmpv2c | snmpv3 }
```

Allows you to configure the message processing model that is used to generate SNMP messages.

Command mode: config

Table 4-16 Target Parameters Table Configuration Command Options

Command Syntax and Usage

```
snmp-server target-parameters <tparam-instance> security
{usm|snmpv1|snmpv2}
```

Allows you to select the security model to be used when generating the SNMP messages.

Command mode: config

```
snmp-server target-parameters <tparam-instance> user-name <string>
```

Defines the name that identifies the user in the USM table (page 133) on whose behalf the SNMP messages are generated using this entry.

Command mode: config

```
snmp-server target-parameters <tparam-instance> level {noAuthNo-
Priv|authNoPriv|authPriv}
```

Allows you to select the level of security to be used when generating the SNMP messages using this entry. The level `noAuthNoPriv` means that the SNMP message will be sent without authentication and without using a privacy protocol. The level `authNoPriv` means that the SNMP message will be sent with authentication but without using a privacy protocol. The `authPriv` means that the SNMP message will be sent both with authentication and using a privacy protocol.

Command mode: config

```
no snmp-server target-parameters <tparam-instance>
```

Deletes the `targetParamsTable` entry.

Command mode: config

```
show snmp-server target-parameters <tparam-instance>
```

Displays the current `targetParamsTable` configuration.

Command mode: All

SNMPv3 Notify Table Configuration Commands

SNMPv3 uses Notification Originator to send out traps. A notification typically monitors a system for particular events or conditions, and generates Notification-Class messages based on these events or conditions.

Table 4-17 Notify Table Command Options

Command Syntax and Usage

snmp-server notify *<notify-instance>* **name** *<string>*

Defines a locally arbitrary, but unique, identifier associated with this SNMP notify entry.

Command mode: config

snmp-server notify *<notify-instance>* **tag** *<string>*

Allows you to configure a tag of 255 characters maximum that contains a tag value which is used to select entries in the Target Address Table. Any entry in the `snmpTargetAddrTable`, that matches the value of this tag, is selected.

Command mode: config

no snmp-server notify *<notify-instance>*

Deletes the notify table entry.

Command mode: config

show snmp-server notify [*<notify-instance>*]

Displays the current notify table configuration.

Command mode: All

System Access Commands

Table 4-18 System Configuration Command Options

Command Syntax and Usage

[no] access http enable

Enables or disables HTTP (Web) access to the Browser-Based Interface. It is enabled by default.

Command mode: config

access http port <port-number>

Sets the switch port used for serving switch Web content. The default is HTTP port 80.

Command mode: config

[no] access snmp {read-only|read-write}

Disables or provides read-only/write-read SNMP access.

Command mode: config

[no] access telnet enable

Enables or disables Telnet access. This command is enabled by default. You will see this command only if you are connected to the switch through the management module.

Command mode: config

access telnet port <1-65535>

Sets an optional Telnet server port number for cases where the server listens for Telnet sessions on a non-standard port.

Command mode: config

show access

Displays the current system access parameters.

Command mode: All

Management Network Commands

These commands are used to define IP address ranges which are allowed to access the switch for management purposes.

Table 4-19 Management Network Command Options

Command Syntax and Usage

access management-network *<ip-address>* *<ip-mask>*

Adds a defined network through which switch access is allowed through Telnet, SNMP, RIP, or the Alteon OS browser-based interface. A range of IP addresses is produced when used with a network mask address. Specify an IP address and mask address in dotted-decimal notation.

Command mode: config

no access management-network *<ip-address>* *<ip-mask>*

Removes a defined network, which consists of a management network address and a management network mask address.

Command mode: config

show access management-network

Displays the current configuration.

Command mode: All except User EXEC

User Access Control Configuration Commands

NOTE – Passwords can be a maximum of 128 characters.

Table 4-20 User Access Control Command Options

Command Syntax and Usage

access user *<user-id>*

Configures the User ID.

Command mode: config

access user user-password

Sets the user (*user*) password. The user has no direct responsibility for switch management. He or she can view switch status information and statistics, but cannot make any configuration changes.

Command mode: config

Table 4-20 User Access Control Command Options**Command Syntax and Usage****access user operator-password**

Sets the operator (`oper`) password. The operator password can have a maximum of 128 characters. The operator manages all functions of the switch. He or she can view all switch information and statistics and can reset ports or the entire switch.

Command mode: config

access user administrator-password

Sets the administrator (`admin`) password. The super user administrator has complete access to all information and configuration commands on the GbE Switch Module, including the ability to change both the user and administrator passwords.

Access includes “oper” functions.

Command mode: config

show access user

Displays the current user status.

Command mode: All except User EXEC

System User ID Configuration Commands**Table 4-21** User ID Configuration Command Options**Command Syntax and Usage****access user <user-id> level {user|operator|administrator}**

Sets the Class-of-Service to define the user’s authority level. Alteon OS defines these levels as: User, Operator, and Administrator, with User being the most restricted level.

Command mode: config

access user <user-id> name <string>

Defines the user name of maximum eight characters.

Command mode: config

access user <user-id> password

Sets the user password of up to 128 characters maximum.

Command mode: config

access user <user-id> enable

Enables the user ID.

Command mode: config

no access user <user-id> enable

Disables the user ID.

Command mode: config

Table 4-21 User ID Configuration Command Options

Command Syntax and Usage

no access user <user-id>

Deletes the user ID.

Command mode: config

show access user

Displays the current user ID configuration.

Command mode: All except User EXEC

HTTPS Access Configuration Commands

Table 4-22 HTTPS Access Configuration Command Options

Command Syntax and Usage

[no] access https enable

Enables or disables BBI access (Web access) using HTTPS.

Command mode: config

access https port <port-number>

Defines the HTTPS Web server port number.

Command mode: config

access https generate-certificate

Allows you to generate a certificate to connect to the SSL to be used during the key exchange. A default certificate is created when HTTPS is enabled for the first time. The user can create a new certificate defining the information that they want to be used in the various fields. For example:

- Country Name (2 letter code) []: CA
- State or Province Name (full name) []: Ontario
- Locality Name (for example, city) []: Ottawa
- Organization Name (for example, company) []: Nortel Networks
- Organizational Unit Name (for example, section) []: Alteon
- Common Name (for example, user's name) []: Mr Smith
- Email (for example, email address) []: info@nortelnetworks.com

You will be asked to confirm if you want to generate the certificate. It will take approximately 30 seconds to generate the certificate. Then the switch will restart SSL agent.

Command mode: config

Table 4-22 HTTPS Access Configuration Command Options

Command Syntax and Usage

access https save-certificate

Allows the client, or the Web browser, to accept the certificate and save the certificate to Flash to be used when the switch is rebooted.

Command mode: config

show access

Displays the current SSL Web Access configuration.

Command mode: All except User EXEC

Port Configuration Commands

These commands enable you to configure settings for individual switch ports (except MGT1 and MGT2). This command is enabled by default.

Table 4-23 Port Configuration Command Options

Command Syntax and Usage

dot1p {0-7}

Configures the port's 802.1p priority level.

Command mode: interface port

pvid {<vlan-instance>}

Sets the default VLAN number which will be used to forward frames which are not VLAN tagged. The default number is 1 for non-management ports.

Command mode: interface port

name {<name-string>}

Sets a name for the port. The assigned port name appears next to the port number on some information and statistics screens. The default is set to None.

[no] dscp-marking

Enables or disables DSCP re-marking on a port.

Command mode: interface port

[no] tagging

Disables or enables VLAN tagging for this port. It is disabled by default.

Command mode: interface port

Table 4-23 Port Configuration Command Options

Command Syntax and Usage

[no] tag-pvid

Disables or enables VLAN tag persistence. When disabled, the VLAN tag is removed from packets whose VLAN tag matches the port PVID. The default value is disabled for INT and EXT ports, and enabled for MGT ports.

Command mode: interface port

[no] fastforward

Disables or enables Port Fast Forwarding, which permits a port that participates in Spanning Tree to bypass the Listening and Learning states and enter directly into the Forwarding state. While in the Forwarding state, the port listens to the BPDUs to learn if there is a loop and, if dictated by normal STG behavior (following priorities, etc.), the port transitions into the Blocking state. This feature permits the GbESM to interoperate well within Rapid Spanning Tree networks.

Command mode: interface port

no shutdown

Enables the port.

Command mode: interface port

shutdown

Disables the port. (To temporarily disable a port without changing its configuration attributes, refer to [“Temporarily Disabling a Port”](#) on page 148.)

Command mode: interface port

show interface port {<port-identifier>}

Displays current port parameters.

Command mode: All

Port Link Configuration Commands

You can use these commands to set port parameters such as speed, flow control, and negotiation mode for the port link.

Table 4-24 Port Link Configuration Command Options

Command Syntax and Usage

speed {10 | 100 | 1000 | auto}

Sets the link speed. Not all options are valid on all ports. The choices include:

- 10 Mbps
- 100 Mbps
- 1000 Mbps
- “Auto,” for auto negotiation

Command mode: interface port

Table 4-24 Port Link Configuration Command Options

Command Syntax and Usage

duplex {full | half | any}

Sets the operating mode. The choices include:

- Full-duplex
- Half-duplex
- “Any,” for auto negotiation (default)

Command mode: interface port

flowcontrol {receive | send | both}**no flowcontrol**

Sets the flow control. The choices include:

- Receive flow control
- Transmit flow control
- Both receive and transmit flow control (default)
- No flow control

Command mode: interface port

show interface port {<port-identifier>}

Displays current port parameters.

Command mode: All

Temporarily Disabling a Port

To temporarily disable a port without changing its stored configuration attributes, enter the following command at any prompt:

```
Router# interface port <port identifier> shutdown
```

Because this configuration sets a temporary state for the port, you do not need to use a save operation. The port state will revert to its original configuration when the GbE Switch Module is reset. See the [“Operations Commands” on page 229](#) for other operations-level commands.

ACL Port Commands

Table 4-25 ACL/QoS Command Options

Command Syntax and Usage

access-control meter *<meter-number>*

Configures the port metering.

Command mode: interface port

To view command options, see [“ACL Port Metering Commands” on page 149](#).

access-control group *<acgroup-number>*

Adds the specified ACL Group to the port. You can add multiple ACL Groups to a port, but the total number of precedence levels allowed is eight.

Command mode: interface port

no access-control group *<acgroup-number>*

Removes the specified ACL from the port.

Command mode: interface port

show interface port [*<port-identifier>*] **access-control**

Displays current ACL QoS parameters.

Command mode: All

ACL Port Metering Commands

These commands define the Access Control profile for the selected ACL group on the port.

Table 4-26 Metering Command Options

Command Syntax and Usage

access-control meter *<meter-number>* **committed-rate** *<rate-value>*

Configures the committed rate, in Kilobits per second. The committed rate must be a multiple of 64.

Command mode: interface port

access-control meter *<meter-number>* **maximum-burst-size** *<size-value>*

Configures the maximum burst size, in Kilobits. Enter one of the following values for mbsize: 32, 64, 128, 256, 512, 1024, 2048, 4096

Command mode: interface port

[no] access-control meter *<meter-number>* **enable**

Enables or disables ACL Metering on the port.

Command mode: interface port

Table 4-26 Metering Command Options**Command Syntax and Usage**

```
access-control meter <meter-number> action {drop|pass}
```

Configures the ACL Meter to either drop or pass out-of-profile traffic.

Command mode: interface port

```
access-control meter <meter-number> {list|block|group} <number>
```

Adds an ACL, ACL Block, or ACL Group to the ACL Meter on this port.

Command mode: interface port

```
no access-control meter <meter-number> {list|block|group} <number>
```

Removes an ACL, ACL Block, or ACL Group from the ACL Meter on this port.

Command mode: interface port

```
default access-control meter <meter-number>
```

Reset ACL Metering parameters to their default values.

Command mode: interface port

```
show interface port {<port-identifier>} access-control meter {<meter-number>}
```

Displays current ACL Metering parameters.

Command mode: All

Re-Mark Commands

You can choose to re-mark IP header data for the selected ACL Group on the port. You can configure different re-mark values, based on whether packets fall within the ACL Metering profile, or out of the ACL Metering profile.

Table 4-27 Re-Mark Command Options**Command Syntax and Usage**

```
access-control re-mark <rm-num> {list|group|block} <num>
```

Assign an ACL, ACL Block, or ACL Group for DSCP remarking on this port.

Command mode: interface port

```
no access-control re-mark <rm-num> {list|block|group} <num>
```

Removes an ACL, ACL Block, or ACL Group from DSCP remarking on this port.

Command mode: interface port

Table 4-27 Re-Mark Command Options

Command Syntax and Usage

default access-control re-mark *<rm-num>*

Resets ACL Re-Mark parameters to their default values.

Command mode: interface port

show interface port {*<port-identifier>*} **access-control re-mark** {*<rm-num>*}

Displays current Re-Mark parameters.

Command mode: All

Re-Marking In-Profile Commands

Table 4-28 Re-Mark Command Options

Command Syntax and Usage

access-control re-mark *<rm-num>* **in-profile dscp** *<dscp-value>*

Sets the DiffServ Code Point (DSCP) of In-Profile packets to the selected value.

Command mode: interface port

default access-control re-mark *<rm-num>*

Resets the update DSCP parameters to their default values.

Command mode: interface port

show interface port {*<port-identifier>*} **access-control re-mark** {*<rm-num>*}

Displays current Re-Mark In-Profile parameters.

Command mode: All

Update User Priority Commands

Table 4-29 User Priority Command Options

Command Syntax and Usage

access-control re-mark *<rm-num>* **in-profile dot1p** *<pri>*

Defines 802.1p value. The value is the priority bits information in the packet structure.

Command mode: interface port

[no] **access-control re-mark** *<rm-num>* **in-profile use-tos-precedence**

Enable or disable mapping of TOS (Type of Service) priority to 802.1p priority for In-Profile packets. When enabled, the TOS value is used to set the 802.1p value.

Command mode: interface port

default access-control re-mark *<rm-num>*

Resets UPIP settings to their default values.

Command mode: interface port

show interface port {*<port-identifier>*} **access-control re-mark** {*<rm-num>*}

Displays current Re-Mark In-Profile User Priority parameters.

Command mode: All

Re-Marking Out-of-Profile Commands

Table 4-30 Out-of-Profile Command Options

Command Syntax and Usage

access-control re-mark *<rm-num>* **out-profile dscp** *<dscp-value>*

Sets the DiffServ Code Point (DSCP) of Out-of-Profile packets to the selected value. The switch sets the DSCP value on Out-of-Profile packets.

Command mode: interface port

default access-control re-mark *<rm-num>*

Resets the update DSCP parameters for Out-of-Profile packets to their default values.

Command mode: interface port

show interface port {*<port-identifier>*} **access-control re-mark** {*<rm-number>*}

Displays current Re-Mark Out-of-Profile parameters.

Command mode: All

Layer 2 Commands

Table 4-31 Configuration Command Options

Command Syntax and Usage

vlan {<vlan-identifier>}

Configures the VLAN.

Command mode: config

To view command options, see [page 173](#).

[no] spanning-tree fast-uplink

Enables or disables Fast Uplink Convergence, which provides rapid Spanning Tree convergence to an upstream switch during failover.

Note: When enabled, this feature increases bridge priorities to 65500 for all STGs and path cost by 3000 for all external STP ports.

Command mode: config

spanning-tree fast-uplink update-rate <rate-value>

Configures the station update rate. The default value is 40.

Command mode: config

show layer2

Displays current Layer 2 parameters.

Command mode: All

802.1x Configuration Commands

These commands allow you to configure the GbESM as an IEEE 802.1x Authenticator, to provide port-based network access control.

Table 4-32 802.1x Configuration Commands

Command Syntax and Usage

dot1x enable

Globally enables 802.1x.

Command mode: config

no dot1x enable

Globally disables 802.1x.

Command mode: config

show dot1x

Displays current 802.1x parameters.

Command mode: All

802.1x Global Configuration

The global 802.1x commands allow you to configure parameters that affect all ports in the GbESM.

Table 4-33 802.1x Global Configuration Commands

Command Syntax and Usage

dot1x mode { [*force-unauthorized* | *auto* | *force-authorized*] }

Sets the type of access control for all ports:

- **force-unauthorized** - the port is unauthorized unconditionally.
- **auto** - the port is unauthorized until it is successfully authorized by the RADIUS server.
- **force-authorized** - the port is authorized unconditionally, allowing all traffic.

The default value is *force-authorized*.

Command mode: config

dot1x quiet-time { <*interval-value*> }

Sets the time, in seconds, the authenticator waits before transmitting an EAP-Request/ Identity frame to the supplicant (client) after an authentication failure in the previous round of authentication. The default value is 60 seconds.

Command mode: config

dot1x transmit-interval { <*interval-value*> }

Sets the time, in seconds, the authenticator waits for an EAP-Response/Identity frame from the supplicant (client) before retransmitting an EAP-Request/Identity frame. The default value is 30 seconds.

Command mode: config

dot1x supplicant-timeout { <*timeout-value*> }

Sets the time, in seconds, the authenticator waits for an EAP-Response packet from the supplicant (client) before retransmitting the EAP-Request packet to the authentication server. The default value is 30 seconds.

Command mode: config

dot1x server-timeout { <*timeout-value*> }

Sets the time, in seconds, the authenticator waits for a response from the RADIUS server before declaring an authentication timeout. The default value is 30 seconds.

The time interval between transmissions of the RADIUS Access-Request packet containing the supplicant's (client's) EAP-Response packet is determined by the current setting of *radius-server timeout <timeout-value>* (default is 3 seconds).

Command mode: config

dot1x max-request { <*request-value*> }

Sets the maximum number of times the authenticator retransmits an EAP-Request packet to the supplicant (client). The default value is 2.

Command mode: config

Table 4-33 802.1x Global Configuration Commands

Command Syntax and Usage

dot1x re-authentication-interval {<interval-value>}

Sets the time, in seconds, the authenticator waits before re-authenticating a supplicant (client) when periodic re-authentication is enabled. The default value is 3600 seconds.

Command mode: config

dot1x re-authenticate

Sets the re-authentication status to *on*. The default value is *off*.

Command mode: config

[no] **dot1x re-authenticate**

Sets the re-authentication status to *off*. The default value is *off*.

Command mode: config

default dot1x

Resets the global 802.1x parameters to their default values.

Command mode: config

show dot1x

Displays current global 802.1x parameters.

Command mode: All

802.1x Port Configuration

The 802.1x port commands allows you to configure parameters that affect the selected port in the GbESM. These settings override the global 802.1x parameters.

Table 4-34 802.1x Port Commands

Command Syntax and Usage

dot1x mode { [**force-unauthorized** | **auto** | **force-authorized**] }

Sets the type of access control for the port:

- **force-unauthorized** - the port is unauthorized unconditionally.
- **auto** - the port is unauthorized until it is successfully authorized by the RADIUS server.
- **force-authorized** - the port is authorized unconditionally, allowing all traffic.

The default value is **force-authorized**.

Command mode: interface

dot1x quiet-time { <interval-value> }

Sets the time, in seconds, the authenticator waits before transmitting an EAP-Request/ Identity frame to the supplicant (client) after an authentication failure in the previous round of authentication. The default value is 60 seconds.

Command mode: interface

dot1x transmit-interval { <interval-value> }

Sets the time, in seconds, the authenticator waits for an EAP-Response/Identity frame from the supplicant (client) before retransmitting an EAP-Request/Identity frame. The default value is 30 seconds.

Command mode: interface

dot1x supplicant-timeout { <timeout-value> }

Sets the time, in seconds, the authenticator waits for an EAP-Response packet from the supplicant (client) before retransmitting the EAP-Request packet to the authentication server. The default value is 30 seconds.

Command mode: interface

dot1x server-timeout { <timeout-value> }

Sets the time, in seconds, the authenticator waits for a response from the RADIUS server before declaring an authentication timeout. The default value is 30 seconds.

The time interval between transmissions of the RADIUS Access-Request packet containing the supplicant's (client's) EAP-Response packet is determined by the current setting of **radius-server timeout <timeout-value>** (default is 3 seconds).

Command mode: interface

dot1x max-request { <request-value> }

Sets the maximum number of times the authenticator retransmits an EAP-Request packet to the supplicant (client). The default value is 2.

Command mode: interface

Table 4-34 802.1x Port Commands

Command Syntax and Usage

dot1x re-authentication-interval {<interval-value>}

Sets the time, in seconds, the authenticator waits before re-authenticating a supplicant (client) when periodic re-authentication is enabled. The default value is 3600 seconds.

Command mode: interface

dot1x re-authenticate

Sets the re-authentication status to on. The default value is off.

Command mode: interface

[no] dot1x re-authenticate

Sets the re-authentication status off. The default value is off.

Command mode: interface

default dot1x

Resets the 802.1x port parameters to their default values.

Command mode: config

dot1x apply-global

Applies current global 802.1x configuration parameters to the port.

Command mode: interface

show interface port <port-identifier> **dot1x**

Displays current 802.1x port parameters.

Command mode: All

Rapid Spanning Tree Protocol/Multiple Spanning Tree Protocol Configuration Commands

Alteon OS supports the IEEE 802.1w Rapid Spanning Tree Protocol (RSTP) and IEEE 802.1s Multiple Spanning Tree Protocol (MSTP). MSTP allows you to map many VLANs to a small number of spanning tree groups, each with its own topology.

There are 32 Spanning Tree Groups that can be configured on the switch. MRST is turned off by default.

NOTE – When Multiple Spanning Tree is turned on, VLAN 4095 is moved from Spanning Tree Group 32 to the Common Internal Spanning Tree (CIST). When Multiple Spanning Tree is turned off, VLAN 4095 is moved back to Spanning Tree Group 32.

Table 4-35 Multiple Spanning Tree Configuration Command Options

Command Syntax and Usage

spanning-tree mstp name {<name-string>}

Configures a name for the MSTP region. All devices within a MSTP region must have the same region name.

Command mode: config

spanning-tree mstp version {<version-value>}

Configures a version number for the MSTP region. The version is used as a numerical identifier for the region. All devices within a MSTP region must have the same version number.

Command mode: config

spanning-tree mstp maximum-hop <hop-value>

Configures the maximum number of bridge hops a packet may to traverse before it is dropped. The range is from 4 to 60 hops. The default is 20.

Command mode: config

spanning-tree mrst mode {mst|rstp}

Selects either Rapid Spanning Tree mode (rstp) or Multiple Spanning Tree mode (mstp). The default mode is RSTP.

Command mode: config

spanning-tree mrst enable

Globally turns RSTP/MSTP ON.

Note: When RSTP is turned on, the configuration parameters for STG 1 apply to RSTP.

Command mode: config

Table 4-35 Multiple Spanning Tree Configuration Command Options

Command Syntax and Usage

no spanning-tree mrst enable

Globally turns RSTP/MSTP off.

Command mode: config

show spanning-tree mrst

Displays the current RSTP/MSTP configuration.

Command mode: All

Common Internal Spanning Tree Configuration Commands

[Table 4-36](#) describes the commands used to configure Common Internal Spanning Tree (CIST) parameters. The CIST provides compatibility with different MSTP regions and with devices running different Spanning Tree instances. It is equivalent to Spanning Tree Group 0.

Table 4-36 Common Internal Spanning Tree Command Options

Command Syntax and Usage

default spanning-tree mstp cist

Resets all CIST parameters to their default values.

Command mode: config

show spanning-tree mstp cist

Displays the current CIST configuration.

Command mode: All

CIST Bridge Configuration Commands

CIST bridge parameters are used only when the switch is in MSTP or RSTP mode. CIST parameters do not affect operation of STP/PVST+.

Table 4-37 CIST Bridge Configuration Command Options

Command Syntax and Usage

spanning-tree mstp cist-bridge priority {<priority-value>}

Configures the CIST bridge priority. The bridge priority parameter controls which bridge on the network is the MSTP root bridge. To make this switch the root bridge, configure the bridge priority lower than all other switches and bridges on your network. The lower the value, the higher the bridge priority. The range is 0 to 65535, and the default is 32768.

Command mode: config

spanning-tree mstp cist-bridge maximum-age {<age-value>}

Configures the CIST bridge maximum age. The maximum age parameter specifies the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the MSTP network. The range is 6 to 40 seconds, and the default is 20 seconds.

Command mode: config

spanning-tree mstp cist-bridge forward-delay {<delay-value>}

Configures the CIST bridge forward delay parameter. The forward delay parameter specifies the amount of time that a bridge port has to wait before it changes from the listening state to the learning state and from the learning state to the forwarding state. The range is 4 to 30 seconds, and the default is 15 seconds.

Command mode: config

show spanning-tree mstp cist

Displays the current CIST bridge configuration.

Command mode: All

CIST Port Configuration Commands

CIST port parameters are used to modify MRST operation on an individual port basis. CIST parameters do not affect operation of STP/PVST+. For each port, RSTP/MSTP is turned on by default.

Table 4-38 CIST Port Configuration Command Options

Command Syntax and Usage

spanning-tree mstp cist interface-priority {<priority-value>}

Configures the CIST port priority. The port priority helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment. The range is 0 to 240, in steps of 16 (0, 16, 32...), and the default is 128.

Command mode: interface

spanning-tree mstp cist path-cost {<cost-value>}

Configures the CIST port path cost. The port path cost is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. The default is 20000 for Gigabit ports.

Command mode: interface

spanning-tree mstp cist hello {<time-value>}

Configures the CIST port Hello time. The Hello time specifies how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge Hello value. The range is 1 to 10 seconds, and the default is 2 seconds.

Command mode: interface

spanning-tree mstp cist link-type {auto|p2p|shared}

Defines the type of link connected to the port, as follows:

- auto:** Configures the port to detect the link type, and automatically match its settings.
- p2p:** Configures the port for Point-To-Point protocol.
- shared:** Configures the port to connect to a shared medium (usually a hub).

The default link type is **auto**.

Command mode: interface

[no] **spanning-tree mst cist edge**

Enables or disables this port as an edge port. An edge port is not connected to a bridge, and can begin forwarding traffic as soon as the link is up. Configure server ports as edge ports (enabled). This command is disabled by default.

Command mode: interface

spanning-tree mst cist enable

Enables MRST on the port.

Command mode: interface

Table 4-38 CIST Port Configuration Command Options**Command Syntax and Usage****no spanning-tree mst cist enable**

Disables MRST on the port.

Command mode: interface**show interface port {<port-identifier>} spanning-tree mstp cist**

Displays the current CIST port configuration.

Command mode: All

Spanning Tree Configuration Commands

Alteon OS supports the IEEE 802.1d Spanning Tree Protocol (STP). STP is used to prevent loops in the network topology. There are 32 Spanning Tree Groups that can be configured on the switch (STG 32 is reserved for management).

NOTE – When VRRP is used for active/active redundancy, STG must be enabled.

Table 4-39 Spanning Tree Configuration Commands**Command Syntax and Usage****spanning-tree stp {<stg-identifier>} vlan {<vlan-list>}**

Associates a VLAN with a spanning tree and requires an external VLAN ID as a parameter.

Command mode: config**no spanning-tree stp {<stg-identifier>} vlan {<vlan-list>}**

Breaks the association between a VLAN and a spanning tree and requires an external VLAN ID as a parameter.

Command mode: config**no spanning-tree stp {<stg-identifier>} vlan all**

Removes all VLANs from a spanning tree.

Command mode: config**spanning-tree stp {<stg-identifier>} enable**

Globally enables Spanning Tree Protocol. STG is turned on by default.

Command mode: config

Table 4-39 Spanning Tree Configuration Commands

Command Syntax and Usage

no spanning-tree stp {<stg-identifier>} **enable**

Globally disables Spanning Tree Protocol.

Command mode: config

default spanning-tree <stg-identifier>

Restores a spanning tree instance to its default configuration.

Command mode: config

show spanning-tree stp {<stg-identifier>}

Displays current Spanning Tree Protocol parameters.

Command mode: All

Bridge Spanning Tree Configuration Commands

Spanning Tree bridge parameters affect the global STG operation of the switch. STG bridge parameters include:

- Bridge priority
- Bridge hello time
- Bridge maximum age
- Forwarding delay
- Bridge aging time

Table 4-40 Bridge Spanning Tree Command Options**Command Syntax and Usage**

```
spanning-tree stp {<stg-identifier>} bridge priority {<priority-value>}
```

Configures the bridge priority. The bridge priority parameter controls which bridge on the network is the STG root bridge. To make this switch the root bridge, configure the bridge priority lower than all other switches and bridges on your network. The lower the value, the higher the bridge priority. The range is 0 to 65535, and the default is 32768.

RSTP/MSTP: The range is 0 to 61440, in steps of 4096 (0, 4096, 8192...), and the default is 32768.

Command mode: config

```
spanning-tree stp {<stg-identifier>} bridge hello-time {<time-value>}
```

Configures the bridge Hello time. The Hello time specifies how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge Hello value. The range is 1 to 10 seconds, and the default is 2 seconds.

This command does not apply to MSTP.

Command mode: config

```
spanning-tree stp {<stg-identifier>} bridge maximum-age {<age-value>}
```

Configures the bridge maximum age. The maximum age parameter specifies the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it re configures the STG network. The range is 6 to 40 seconds, and the default is 20 seconds.

This command does not apply to MSTP.

Command mode: config

```
spanning-tree stp {<stg-identifier>} bridge forward-delay {<delay-value>}
```

Configures the bridge forward delay parameter. The forward delay parameter specifies the amount of time that a bridge port has to wait before it changes from the listening state to the learning state and from the learning state to the forwarding state. The range is 4 to 30 seconds, and the default is 15 seconds.

This command does not apply to MSTP.

Command mode: config

Table 4-40 Bridge Spanning Tree Command Options

Command Syntax and Usage

spanning-tree stp {<stg-identifier>} **bridge aging** {<aging-value>}

Configures the forwarding database aging time. The aging time specifies the amount of time the bridge waits without receiving a packet from a station before removing the station from the forwarding database. The range is 1 to 65535 seconds, and the default is 300 seconds. To disable aging, set this parameter to 0.

Command mode: config

show spanning-tree stp {<stg-identifier>} **bridge**

Displays the current bridge STG parameters.

Command mode: All

When configuring STG bridge parameters, the following formulas must be used:

- $2*(fwd-1) \geq mxage$
- $2*(hello+1) \leq mxage$

Spanning Tree Port Configuration Commands

By default for STP/PVST+, Spanning Tree is turned off for internal ports and management ports, and turned on for external ports. By default for RSTP/MSTP, Spanning Tree is turned off for internal ports and management ports, and turned on for external ports, with internal ports configured as Edge ports. STG port parameters include:

- Port priority
- Port path cost

The **port** option of STG is turned on by default.

Table 4-41 Spanning Tree Port Commands

Command Syntax and Usage

spanning-tree stp {<stg-identifier>} **priority** {<priority-value>}

Configures the port priority. The port priority helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment. The range is 0 to 255, and the default is 128.

RSTP/MSTP: The range is 0 to 240, in steps of 16 (0, 16, 32...) and the default is 128.

Command mode: interface

spanning-tree stp {<stg-identifier>} **path-cost** {<cost-value>}

Configures the port path cost. The port path cost is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. The range is 1 to 65535. The default is 10 for 100Mbps ports, and 1 for Gigabit ports. A value of 0 indicates that the default cost will be computed for an auto negotiated link speed.

Command mode: interface

spanning-tree stp {<stg-identifier>} **link** {auto|p2p|shared}

Defines the type of link connected to the port, as follows:

auto: Configures the port to detect the link type, and automatically match its settings.

p2p: Configures the port for Point-To-Point protocol.

shared: Configures the port to connect to a shared medium (usually a hub).

Command mode: interface

[no] **spanning-tree stp** {<stg-identifier>} **edge**

Enables or disables this port as an edge port. An edge port is not connected to a bridge, and can begin forwarding traffic as soon as the link is up. Configure server ports as edge ports (enabled).

Command mode: interface

spanning-tree stp {<stg-identifier>} **enable**

Enables STG on the port.

Command mode: interface

no spanning-tree stp {<stg-identifier>} **enable**

Disables STG on the port.

Command mode: interface

show interface port {<port-identifier>} **spanning-tree stp** {<stg-identifier>}

Displays the current STG port parameters.

Command mode: All except User EXEC

Trunk Configuration Commands

Trunk groups can provide super-bandwidth connections between GbE Switch Modules or other trunk capable devices. A *trunk* is a group of ports that act together, combining their bandwidth to create a single, larger port. Up to 13 trunk groups can be configured on the GbE Switch Module, with the following restrictions:

- Any physical switch port can belong to no more than one trunk group.
- Up to six ports/trunks can belong to the same trunk group.
- Best performance is achieved when all ports in a trunk are configured for the same speed.
- Trunking from non-Alteon devices must comply with Cisco® EtherChannel® technology.

By default, each trunk group is empty and disabled.

Table 4-42 Trunk Configuration Command Options

Command Syntax and Usage

mlt {<mlt-identifier>} **member** {<port-identifier>}
 Adds a physical port to the current trunk group.

Command mode: config

no mlt {<mlt-identifier>} **member** {<port-identifier>}
 Removes a physical port from the current trunk group.

Command mode: config

mlt {<mlt-identifier>} **enable**
 Enables the current trunk group.

Command mode: config

no mlt {<mlt-identifier>} **enable**
 Disables the current trunk group.

Command mode: config

no mlt {<mlt-identifier>}
 Removes the current trunk group configuration.

Command mode: config

show mlt {<mlt-identifier>}
 Displays current trunk group parameters.

Command mode: All

IP Trunk Hash Commands

Use the following commands to configure IP trunk hash settings for the GbESM.

Table 4-43 IP Trunk Hash commands

Command Syntax and Usage

show mlt hash

Display current trunk hash configuration.

Command mode: All

Layer 2 IP Trunk Hash Commands

Trunk hash parameters are set globally for the GbE Switch Module. You can enable one or two parameters, to configure any of the following valid combinations:

- SMAC (source MAC only)
- DMAC (destination MAC only)
- SIP (source IP only)
- DIP (destination IP only)
- SIP + DIP (source IP and destination IP)
- SMAC + DMAC (source MAC and destination MAC)

Use the following commands to configure layer 2 IP trunk hash parameters for the GbESM.

Table 4-44 Layer 2 IP Trunk Hash commands

Command Syntax and Usage

mlt hash source-mac-address

Enable trunk hashing on the source MAC.

Command mode: config

mlt hash destination-mac-address

Enable trunk hashing on the destination MAC.

Command mode: config

mlt hash source-ip-address

Enable trunk hashing on the source IP.

Command mode: config

Table 4-44 Layer 2 IP Trunk Hash commands

Command Syntax and Usage

mlt hash destination-ip-address

Enable trunk hashing on the destination IP.

Command mode: config

mlt hash source-destination-ip

Enable trunk hashing on the source and destination IP.

Command mode: config

mlt hash source-destination-mac

Enable trunk hashing on the source and destination MAC address.

Command mode: config

show mlt hash

Display current layer 2 trunk hash setting.

Command mode: All

Link Aggregation Control Protocol Commands

Use the following commands to configure Link Aggregation Control Protocol (LACP) for the GbESM.

Table 4-45 Link Aggregation Control Protocol Commands

Command Syntax and Usage

lACP system-priority {<priority-value>}

Defines the priority value (1 through 65535) for the GbESM. Lower numbers provide higher priority. The default value is 32768.

Command mode: config

lACP timeout {short|long}Defines the timeout period before invalidating LACP data from a remote partner. Choose **short** (3 seconds) or **long** (90 seconds). The default value is **long**.**Note:** Nortel Networks recommends that you use a timeout value of **long**, to reduce LACPDU processing. If your GbESM's CPU utilization rate remains at 100% for periods of 90 seconds or more, consider using static trunks instead of LACP.**Command mode:** config

show lACP

Display current LACP configuration.

Command mode: All

LACP Port Commands

Use the following commands to configure Link Aggregation Control Protocol (LACP) for the selected port.

Table 4-46 Link Aggregation Control Protocol Commands

Command Syntax and Usage

lACP mode {*off* | *active* | *passive*}

Set the LACP mode for this port, as follows:

- **off**
Turn LACP off for this port. You can use this port to manually configure a static trunk. The default value is **off**.
- **active**
Turn LACP on and set this port to active. Active ports initiate LACPDU.
- **passive**
Turn LACP on and set this port to passive. Passive ports do not initiate LACPDU, but respond to LACPDU from active ports.

Command mode: interface port

lACP priority {<*priority-value*>}

Sets the priority value for the selected port. Lower numbers provide higher priority. Default is 128.

Command mode: interface port

lACP key {<*key-value*>}

Set the admin key for this port. Only ports with the same *admin key* and *oper key* (operational state generated internally) can form a LACP trunk group.

Command mode: interface port

show interface port {<*port-identifier*>} **lACP**

Displays the current LACP configuration for this port.

Command mode: All

Failover Commands

Use these commands to configure Layer 2 Failover. For more information about Layer 2 Failover, see “High Availability” in the *Alteon OS Application Guide*.

Table 4-47 Layer 2 Failover Command Options

Command Syntax and Usage

failover vlan

Globally turns VLAN monitor `on`. When the VLAN Monitor is `on`, the switch automatically disables only internal ports that belong to the same VLAN as ports in the failover trigger. The default value is `off`.

Command mode: config

[no] failover vlan

Globally turns VLAN monitor `off`. When the VLAN Monitor is `on`, the switch automatically disables only internal ports that belong to the same VLAN as ports in the failover trigger. The default value is `off`.

Command mode: config

failover enable

Globally turns L2 failover `on`.

Command mode: config

no failover enable

Globally turns L2 failover `off`.

Command mode: config

show failover

Displays current L2 failover parameters.

Command mode: All

Failover Trigger Configuration

Table 4-48 Failover Trigger Command Options

Command Syntax and Usage

failover trigger <trigger-id> **limit** <0-6>

Configures the minimum number of operational links allowed within each trigger before the trigger initiates a failover event. If you enter a value of zero (0), the switch triggers a failover event only when no links in the trigger are operational.

Command mode: config

show failover

Displays the current failover trigger settings.

Auto Monitor Configuration

Table 4-49 Auto Monitor Command Options

Command Syntax and Usage

failover trigger <trigger-id> **trunk** <1-13>

Adds a trunk group to the Auto Monitor.

Command mode: config

no failover trigger <trigger-id> **trunk** <1-13>

Removes a trunk group from the Auto Monitor.

Command mode: config

failover trigger <trigger-id> **admin-key** <1-65535>

Adds a LACP admin key to the Auto Monitor. LACP trunks formed with this admin key will be included in the Auto Monitor.

Command mode: config

no failover trigger <trigger-id> **admin-key** <1-65535>

Removes a LACP admin key from the Auto Monitor.

Command mode: config

VLAN Configuration Commands

These commands configure VLAN attributes, change the status of each VLAN, change the port membership of each VLAN, and delete VLANs.

By default, the VLAN commands are disabled, except VLAN 1, which is enabled all the time. Internal server ports (INTx) and external ports (EXT1-EXT6) are in VLAN 1 by default. Up to 1024 VLANs can be configured on the GbESM.

Table 4-50 VLAN Configuration Command Options

Command Syntax and Usage

name {<name-string>}

Assigns a name to the VLAN or changes the existing name. The default VLAN name is the first one.

Command mode: vlan

stg {<stg-identifier>}

Assigns a VLAN to a Spanning Tree Group.

Command mode: vlan

member {<port-identifier>}

Adds port(s) to the VLAN membership.

Command mode: vlan

no member {<port-identifier>}

Removes port(s) from this VLAN.

Command mode: vlan

enable

Enables this VLAN.

Command mode: vlan

no enable

Disables this VLAN without removing it from the configuration.

Command mode: vlan

no vlan {<vlan-identifier>}

Deletes this VLAN.

Command mode: vlan

show vlan [<vlan-identifier>]

Displays the current VLAN configuration.

Command mode: All

NOTE – All ports must belong to at least one VLAN. Any port which is removed from a VLAN and which is not a member of any other VLAN is automatically added to default VLAN 1. You cannot remove a port from VLAN 1 if the port has no membership in any other VLAN.

Also, you cannot add a port to more than one VLAN unless the port has VLAN tagging turned on.

Layer 3 Commands

Table 4-51 Configuration Command Options

Command Syntax and Usage

interface ip {<interface-instance>}

Configures the IP Interface.

Command mode: config

To view command options, see [page 176](#).

router rip

Configures the Routing Interface Protocol.

Command mode: config

To view command options, see [page 185](#).

router ospf

Configures OSPF.

Command mode: config

To view command options, see [page 188](#).

router bgp

Configures Border Gateway Protocol.

Command mode: config

To view command options, see [page 196](#).

router vrrp

Configures Virtual Router Redundancy.

Command mode: config

To view command options, see [page 207](#).

ip router-id <ip-address>

Sets the router ID.

Command mode: config

show layer3

Displays the current IP configuration.

Command mode: All

IP Interface Configuration Commands

The GbE Switch Module can be configured with up to 128 IP interfaces. Each IP interface represents the GbE Switch Module on an IP subnet on your network. The Interface option is disabled by default.

NOTE – To maintain connectivity between the management module and the GbE Switch Module, use the management module interface to change the IP address of the switch.

Table 4-52 IP Interface Command Options

Command Syntax and Usage

ip address {<ip-address>}{<ip-netmask>}

Configures the IP address of the switch interface, or the IP subnet address mask for the interface, using dotted decimal notation.

Command mode: interface ip

vlan {<vlan-instance>}

Configures the VLAN number for this interface. Each interface can belong to one VLAN, though any VLAN can have multiple IP interfaces in it.

Command mode: interface ip

[no] relay

Enables or disables the BOOTP relay on this interface. It is enabled by default.

Command mode: interface ip

enable

Enables this IP interface.

Command mode: interface ip

no enable

Disables this IP interface.

Command mode: interface ip

no interface ip {<interface-instance>}

Removes this IP interface.

Command mode: config

show interface ip {<interface-identifier>}

Displays the current interface settings.

Command mode: All

Default Gateway Configuration Commands

NOTE – The switch can be configured with up to 132 gateways. Gateways one to four are reserved for default gateways. Gateway 132 is reserved for the management VLAN.

This option is disabled by default.

Table 4-53 Default Gateway Command Options

Command Syntax and Usage

ip gateway {<gateway-instance>} **address** {<ip-address>}

Configures the IP address of the default IP gateway using dotted decimal notation.

Command mode: config

ip gateway {<gateway-instance>} **interval** {<interval-value>}

The switch pings the default gateway to verify that it's up. This command sets the time between health checks. The range is from 0 to 60 seconds. The default is 2 seconds.

Command mode: config

ip gateway {<gateway-instance>} **retry** {<retry-value>}

Sets the number of failed health check attempts required before declaring this default gateway inoperative. The range is from 1 to 120 attempts. The default is 8 attempts.

Command mode: config

[no] **ip gateway** {<gateway-instance>} **arp-health-check**

Enables or disables Address Resolution Protocol (ARP) health checks. This command is disabled by default.

Command mode: config

ip gateway {<gateway-instance>} **vlan** {<vlan-instance>}

Sets the VLAN to be assigned to this default IP gateway.

Command mode: config

ip gateway {<gateway-instance>} **enable**

Enables the gateway for use.

Command mode: config

no ip gateway {<gateway-instance>} **enable**

Disables the gateway.

Command mode: config

Table 4-53 Default Gateway Command Options**Command Syntax and Usage**

no ip gateway {<gateway-instance>}

Deletes the gateway from the configuration.

Command mode: config

show ip gateway {<gateway-instance>}

Displays the current gateway settings.

Command mode: All except User EXEC

Default Gateway Metrics

For information about configuring which gateway is selected when multiple default gateways are enabled, see [page 178](#).

IP Static Route Configuration Commands

Up to 128 static routes can be configured.

Table 4-54 IP Static Route Configuration Command Options**Command Syntax and Usage**

ip route {<ip-subnet>}{<ip-netmask>}{<ip-next-hop>}{<ip-interface-value>}

Adds a static route. You will be prompted to enter a destination IP address, destination subnet mask, and gateway address. Enter all addresses using dotted decimal notation.

Command mode: config

no ip route {<ip-subnet>}{<ip-netmask>}

Removes a static route. The destination address of the route to remove must be specified using dotted decimal notation.

Command mode: config

show ip route static

Displays the current IP static routes.

Command mode: All except User EXEC

ARP Configuration Commands

Address Resolution Protocol (ARP) is the TCP/IP protocol that resides within the Internet layer. ARP resolves a physical address from an IP address. ARP queries machines on the local network for their physical addresses. ARP also maintains IP to physical address pairs in its

cache memory. In any IP communication, the ARP cache is consulted to see if the IP address of the computer or the router is present in the ARP cache. Then the corresponding physical address is used to send a packet.

Table 4-55 ARP Configuration Command Options

Command Syntax and Usage	
ip arp rearp {<rearp-value>}	Defines re-ARP period in minutes. You can set this duration between 2 and 120 minutes.
Command mode: config	
show ip arp	Displays the current ARP configurations.
Command mode: All except User EXEC	

ARP Static Configuration Commands

Static ARP entries are permanent in the ARP cache and do not age out like the ARP entries that are learnt dynamically. Static ARP entries enable the switch to reach the hosts without sending an ARP broadcast request to the network. Static ARPs are also useful to communicate with devices that do not respond to ARP requests. Static ARPs can also be configured on some gateways as a protection against malicious ARP Cache corruption and possible DOS attacks.

Table 4-56 ARP Static Configuration Command Options

Command Syntax and Usage	
ip arp {<ip-address><mac-address><vlan-instance><port-instance>}	Adds a permanent ARP entry.
Command mode: config	
no ip arp {<ip-address>}	Deletes a permanent ARP entry.
Command mode: config	
show ip arp find <ip-address>	Displays current static ARP configuration.
Command mode: All except User EXEC	

IP Forwarding Configuration Commands

Table 4-57 IP Forwarding Configuration Command Options

Command Syntax and Usage

[no] ip routing directed-broadcasts

Enables or disables forwarding directed broadcasts. This command is disabled by default.

Command mode: config

ip routing

Enables IP forwarding (routing) on the GbE Switch Module.

Command mode: config

no ip routing

Disables IP forwarding (routing) on the GbE Switch Module. Forwarding is turned off by default.

Command mode: config

show ip routing

Displays the current IP forwarding settings.

Command mode: All except User EXEC

Network Filter Configuration Commands

Table 4-58 IP Network Filter Command Options

Command Syntax and Usage

ip match-address <match-id> <ip-address> <mask>

Sets the starting IP address for this filter. The default address is 0.0.0.0

Command mode: config.

ip match-address <match-id> mask <ip-netmask>

Sets the IP subnet mask that is used with **ip match-address <match-id> <ip-address>** to define the range of IP addresses that will be accepted by the peer when the filter is enabled. The default value is 0.0.0.0.

For Border Gateway Protocol (BGP), assign the network filter to a route map, then assign the route map to the peer.

Command mode: config

ip match-address <match-id> enable

Enables the Network Filter configuration.

Command mode: config

Table 4-58 IP Network Filter Command Options

Command Syntax and Usage

no ip match-address <match-id> **enable**

Disables the Network Filter configuration.

Command mode: config

no ip match-address <match-id>

Deletes the Network Filter configuration.

Command mode: config

show ip match-address [<match-id>]

Displays the current the Network Filter configuration.

Command mode: All except User EXEC

Routing Map Configuration Commands

NOTE – The *map number* (1-32) represents the routing map you wish to configure.

Routing maps control and modify routing information.

Table 4-59 Routing Map Command Options

Command Syntax and Usage

[no] access-list <alist-id>

Configures the Access List.

Command mode: route-mapFor more information, see [page 183](#).

[no] as-path-list <pathlist-id>

Configures the Autonomous System (AS) Filter.

Command mode: route-mapFor more information, see [page 184](#).

[no] as-path-preference <preference-value>

Sets the AS path preference of the matched route. One to three path preferences can be configured.

Command mode: route-map

[no] local-preference <preference-value>

Sets the local preference of the matched route, which affects both inbound and outbound directions. The path with the higher preference is preferred.

Command mode: route-map

Table 4-59 Routing Map Command Options**Command Syntax and Usage**

[no] metric *<metric-value>*

Sets the metric of the matched route.

Command mode: route-map

[no] metric-type {*type1* | *type2*}

Assigns the type of OSPF metric. The default is type 1.

- **Type 1**—External routes are calculated using both internal and external metrics.
- **Type 2**—External routes are calculated using only the external metrics. Type 1 routes have more cost than Type 2.
- **none**—Removes the OSPF metric.

Command mode: route-map

precedence *<precedence-value>*

Sets the precedence of the route map. The smaller the value, the higher the precedence. Default value is 10.

Command mode: route-map

[no] weight *<weigh-value>*

Sets the weight of the route map.

Command mode: route-map

enable

Enables the route map.

Command mode: route-map

no enable

Disables the route map.

Command mode: route-map

no route-map *<rmap-id>*

Deletes the route map.

Command mode: config

show route-map [*<rmap-id>*]

Displays the current route configuration.

Command mode: All except User EXEC

IP Access List Configuration Commands

NOTE – The *route map number* (1-32) and the *access list number* (1-8) represent the IP access list you wish to configure.

Table 4-60 IP Access List Command Options

Command Syntax and Usage

[no] access-list <alist-id> **match-address** <match-id>

Sets the network filter number.

Command mode: route-map

See “[Network Filter Configuration Commands](#)” on page 180 for details.

[no] access-list <alist-id> **metric** <metric-value>

Sets the metric value in the AS-External (ASE) LSA.

Command mode: route-map

access-list <alist-id> **action** {**permit**|**deny**}

Permits or denies action for the access list.

Command mode: route-map

access-list <alist-id> **enable**

Enables the access list.

Command mode: route-map

no access-list <alist-id> **enable**

Disables the access list.

Command mode: route-map

no access-list <alist-id>

Deletes the access list.

Command mode: route-map

show route-map <map-id> **access-list** {<alist-id>}

Displays the current Access List configuration.

Command mode: All except User EXEC

Autonomous System Filter Path Commands

NOTE – The *rmap number* (1-32) and the *path number* (1-8) represent the AS path you wish to configure.

Table 4-61 AS Filter Command Options

Command Syntax and Usage

as-path-list *<pathlist-id>* **as-path** *<path-number>*

Sets the Autonomous System filter's path number.

Command mode: route-map

as-path-list *<pathlist-id>* **action** {**permit**|**deny**}

Permits or denies Autonomous System filter action.

Command mode: route-map

as-path-list *<pathlist-id>* **enable**

Enables the Autonomous System filter.

Command mode: route-map

no as-path-list *<pathlist-id>* **enable**

Disables the Autonomous System filter.

Command mode: route-map

no as-path-list *<pathlist-id>*

Deletes the Autonomous System filter.

Command mode: route-map

show route-map *<rmap-id>* **as-path-list** {*<pathlist-id>*}

Displays the current Autonomous System filter configuration.

Command mode: All except User EXEC

router rip

Routing Information Protocol Configuration

RIP commands are used for configuring Routing Information Protocol parameters. This option is turned off by default.

Table 4-62 Routing Information Protocol Commands

Command Syntax and Usage

timers update {<update-value>}

Configures the time interval for sending for RIP table updates, in seconds.
The default value is 30 seconds.

Command mode: router rip

enable

Globally turns RIP **on**.

Command mode: router rip

no enable

Globally turns RIP **off**.

Command mode: router rip

show ip rip

Displays the current RIP configuration.

Command mode: All except User EXEC

Routing Information Protocol Interface Configuration Commands

RIP Commands are used for configuring Routing Information Protocol parameters. This option is turned off by default.

NOTE – Do not configure RIP1 parameters if your routing equipment uses RIP version 2.

Table 4-63 Routing Information Protocol Commands

Command Syntax and Usage

ip rip version <version-value>

Configures the RIP version used by this interface. The default value is version 1.

Command mode: interface ip

[no] ip rip supply

This command is disabled by default. When enabled, the switch supplies routes to other routers.

Command mode: interface ip

[no] ip rip listen

This command is disabled by default. When enabled, the switch learns routes from other routers.

Command mode: interface ip

[no] ip rip poison

This command is disabled by default. When enabled, the switch uses split horizon with poisoned reverse. When disabled, the switch uses only split horizon.

Command mode: interface ip

[no] ip rip triggered

Enables or disables Triggered Updates. Triggered Updates are used to speed convergence. When enabled, Triggered Updates force a router to send update messages immediately, even if it is not yet time for the update message. The default value is disabled.

Command mode: interface ip

[no] ip rip multicast-updates

Enables or disables multicast updates of the routing table (using address 224.0.0.9). The default value is disabled.

Command mode: interface ip

[no] ip rip default-action {both|listen|supply}

When enabled, the switch accepts RIP default routes from other routers, but gives them lower priority than configured default gateways. When disabled, the switch rejects RIP default routes. This command is disabled by default.

Command mode: interface ip

[no] ip rip metric {<cost-value>}

Configures the route metric, which indicates the relative distance to the destination. The default value is 1.

Command mode: interface ip

Table 4-63 Routing Information Protocol Commands

Command Syntax and Usage

[no] ip rip authentication type {password}

Configures the authentication type. The default is none.

Command mode: interface ip

ip rip authentication key {<key-value>}

Configures the authentication key password.

Command mode: interface ip

ip rip enable

Enables this RIP interface.

Command mode: interface ip

no ip rip enable

Disables this RIP interface.

Command mode: interface ip

show interface ip [<ip interface id>] rip

Displays the current RIP configuration.

Command mode: All except User EXEC

router ospf

Open Shortest Path First Configuration Commands

Table 4-64 OSPF Configuration Command Options

Command Syntax and Usage

area-range *<area-id>*

Configures summary routes for up to 16 IP addresses.

Command mode: router ospf

See [page 190](#) to view command options.

ip ospf

Configures the OSPF interface.

Command mode: interface ip

See [page 191](#) to view command options.

area-virtual-link *<area-id>*

Configures the Virtual Links used to configure OSPF for a Virtual Link.

Command mode: router ospf

See [page 193](#) to view command options.

message-digest-key *<key-id>* **md5-key** *<WORD>*

Assigns a string to MD5 authentication key.

Command mode: router ospf

host *<host-index>*

Configures OSPF for the host routes. Up to 128 host routes can be configured. Host routes are used for advertising network device IP addresses to external networks to perform server load balancing within OSPF. It also makes Area Border Route (ABR) load sharing and ABR failover possible.

Command mode: router ospf

See [page 194](#) to view command options.

lsdb-limit *<limit-value>*

Sets the link state database limit.

Command mode: router ospf

[no] default-information *<metric-value>* *<as-value>*

Sets one default route among multiple choices in an area. Use none for no default.

Command mode: router ospf

enable

Enables OSPF on the GbE Switch Module.

Command mode: router ospf

Table 4-64 OSPF Configuration Command Options

Command Syntax and Usage

no enable

Disables OSPF on the GbE Switch Module.

Command mode: router ospf

show ip ospf

Displays the current OSPF configuration settings.

Command mode: All except User EXEC

Area Index Configuration Commands**Table 4-65** Area Index Configuration Command Options

Command Syntax and Usage

area <area-id> area-id <ip-address>

Defines the IP address of the OSPF area number.

Command mode: router ospf

area <area-id> type {transit|stub|nssa}

Defines the type of area. For example, when a virtual link has to be established with the backbone, the area type must be defined as transit.

Transit area: allows area summary information to be exchanged between routing devices. Any area that is not a stub area or NSSA is considered to be transit area.

Stub area: is an area where external routing information is not distributed. Typically, a stub area is connected to only one other area.

NSSA: Not-So-Stubby Area (NSSA) is similar to stub area with additional capabilities. For example, routes originating from within the NSSA can be propagated to adjacent transit and backbone areas. External routes from outside the Autonomous System (AS) can be advertised within the NSSA but are not distributed into other areas.

Command mode: router ospf

area <area-id> stub-metric <metric-value>

Configures a stub area to send a numeric metric value. All routes received via that stub area carry the configured metric to potentially influencing routing decisions.

Metric value assigns the priority for choosing the switch for default route. Metric type determines the method for influencing routing decisions for external routes.

Command mode: router ospf

Table 4-65 Area Index Configuration Command Options**Command Syntax and Usage**

```
[no] area <area-id> authentication-type {password|md5}
```

None: No authentication required.

Password: Authenticates simple passwords so that only trusted routing devices can participate.

MD5: This parameter is used when MD5 cryptographic authentication is required.

Command mode: router ospf

```
area <area-id> spf-interval <interval-value>
```

Sets time interval between two successive SPF (shortest path first) calculations of the shortest path tree using the Dijkstra's algorithm.

Command mode: router ospf

```
area <area-id> enable
```

Enables the OSPF area.

Command mode: router ospf

```
no area <area-id> enable
```

Disables the OSPF area.

Command mode: router ospf

```
no area <area-id>
```

Deletes the OSPF area.

Command mode: router ospf

```
show ip ospf area <area-id>
```

Displays the current OSPF configuration.

Command mode: All except User EXEC

OSPF Summary Range Configuration Commands**Table 4-66** OSPF Summary Range Configuration Command Options**Command Syntax and Usage**

```
area-range <area-id> address <ip-address> <ip-netmask>
```

Displays the base IP address or the IP address mask for the range.

Command mode: router ospf

```
area-range <area-id> area <area-id>
```

Displays the area index used by the GbE Switch Module.

Command mode: router ospf

Table 4-66 OSPF Summary Range Configuration Command Options

Command Syntax and Usage

[no] area-range <area-id> **hide**

Hides the OSPF summary range.

Command mode: router ospf

area-range <area-id> **enable**

Enables the OSPF summary range.

Command mode: router ospf

no area-range <area-id> **enable**

Disables the OSPF summary range.

Command mode: router ospf

no area-range <area-id>

Deletes the OSPF summary range.

Command mode: router ospf

show ip ospf area-range <area-id>

Displays the current OSPF summary range.

Command mode: router ospf

OSPF Interface Configuration Commands

Table 4-67 OSPF Interface Configuration Command Options

Command Syntax and Usage

ip ospf area <area-id>

Configures the OSPF area index.

Command mode: interface ip

ip ospf priority <priority-value>

Configures the priority value for the GbE Switch Module's OSPF interfaces.

(A priority value of 255 is the highest and 1 is the lowest. A priority value of 0 specifies that the interface cannot be used as Designated Router (DR) or Backup Designated Router (BDR).)

Command mode: interface ip

ip ospf cost <cost-value>

Configures cost set for the selected path—preferred or backup. Usually the cost is inversely proportional to the bandwidth of the interface. Low cost indicates high bandwidth.

Command mode: interface ip

Table 4-67 OSPF Interface Configuration Command Options**Command Syntax and Usage**

ip ospf hello-interval <interval-value>

Configures the interval in seconds between the hello packets for the interfaces.

Command mode: interface ip

ip ospf dead-interval <interval-value>

Configures the health parameters of a hello packet, which is set for an interval of seconds before declaring a silent router to be down.

Command mode: interface ip

ip ospf transit-delay <delay-value>

Configures the transit delay in seconds.

Command mode: interface ip

ip ospf retransmit-interval <interval-value>

Configures the retransmit interval in seconds.

Command mode: interface ip

[no] **ip ospf key** <key-string>

Sets the authentication key to clear the password.

Command mode: interface ip

[no] **ip ospf message-digest-key** <key-id>

Assigns an MD5 key to the interface.

Command mode: interface ip

ip ospf enable

Enables OSPF interface.

Command mode: interface ip

no ip ospf enable

Disables OSPF interface.

Command mode: interface ip

no ip ospf

Deletes OSPF interface.

Command mode: interface ip

show interface ip ospf {<ip-interface-id>}

Displays the current settings for OSPF interface.

Command mode: All except User EXEC

OSPF Virtual Link Configuration Commands

Table 4-68 OSPF Virtual Link Configuration Command Options

Command Syntax and Usage

area-virtual-link <1-3> **area** <area-id>

Configures the OSPF area index for the virtual link.

Command mode: router ospf

area-virtual-link <1-3> **hello-interval** <interval-value>

Configures the authentication parameters of a hello packet, which is set to be in an interval of seconds.

Command mode: router ospf

area-virtual-link <1-3> **dead-interval** <interval-value>

Configures the health parameters of a hello packet, which is set to be in an interval of seconds. Default is 40 seconds.

Command mode: router ospf

area-virtual-link <1-3> **transit-delay** <delay-value>

Configures the delay in transit in seconds. Default is one second.

Command mode: router ospf

area-virtual-link <1-3> **retransmit-interval** <interval-value>

Configures the retransmit interval in seconds. Default is five seconds.

Command mode: router ospf

area-virtual-link <1-3> **neighbor-router** <IP address>

Configures the router ID of the virtual neighbor. Default is 0.0.0.0.

Command mode: router ospf

[no] **area-virtual-link** <1-3> **key** <key-string>

Configures the password (up to eight characters) for each virtual link. Default is none.

Command mode: router ospf

area-virtual-link <1-3> **message-digest-key** <key-id>

Sets MD5 key ID for each virtual link. Default is none.

Command mode: router ospf

area-virtual-link <1-3> **enable**

Enables OSPF virtual link.

Command mode: router ospf

no area-virtual-link <1-3> **enable**

Disables OSPF virtual link.

Command mode: router ospf

Table 4-68 OSPF Virtual Link Configuration Command Options**Command Syntax and Usage**

no area-virtual-link <1-3>

Deletes OSPF virtual link.

Command mode: router ospf

show ip ospf area-virtual-link <1-3>

Displays the current OSPF virtual link settings.

Command mode: router ospf

OSPF Host Entry Configuration Commands**Table 4-69** OSPF Host Entry Configuration Command Options**Command Syntax and Usage**

host <host-index> **address** <ip-address>

Configures the base IP address for the host entry.

Command mode: router ospf

host <host-index> **area** <area-id>

Configures the area index of the host.

Command mode: router ospf

host <host-index> **cost** <cost-value>

Configures the cost value of the host.

Command mode: router ospf

host <host-index> **enable**

Enables OSPF host entry.

Command mode: router ospf

no host <host-index> **enable**

Disables OSPF host entry.

Command mode: router ospf

no host <host-index>

Deletes OSPF host entry.

Command mode: router ospf

show ip ospf host {<host-index>}

Displays the current OSPF host entries.

Command mode: All except User EXEC

OSPF Route Redistribution Configuration Commands.

Table 4-70 OSPF Route Redistribution Command Options

Command Syntax and Usage

redistribute {fixed|static|rip|ebgp|ibgp} {<rmap-id>}

Adds selected routing map to the rmap list.

This option adds a route map to the route redistribution list. The routes of the redistribution protocol matched by the route maps in the route redistribution list will be redistributed.

Command mode: router ospf

no redistribute {fixed|static|rip|ebgp|ibgp} {<rmap-id>}

Removes the route map from the route redistribution list.

Removes routing maps from the rmap list.

Command mode: router ospf

[no] **redistribute** {fixed|static|rip|ebgp|ibgp} **export metric** <metric-value> **metric-type** {type1|type2}

Exports the routes of this protocol as external OSPF AS-external LSAs in which the metric and metric type are specified. To remove a previous configuration and stop exporting the routes of the protocol, enter none.

Command mode: router ospf

show ip ospf redistribute

Displays the current route map settings.

Command mode: router ospf

OSPF MD5 Key Configuration Commands

Table 4-71 OSPF MD5 Key Configuration Command Options

Command Syntax and Usage

message-digest-key <key-id> **md5-key** <key-string>

Sets the authentication key for this OSPF packet.

Command mode: router ospf

no message-digest-key <key-id>

Deletes the authentication key for this OSPF packet.

Command mode: router ospf

show ip ospf message-digest-key <key-id>

Displays the current MD5 key configuration.

Command mode: All except User EXEC

router bgp**Border Gateway Protocol Configuration Commands**

Border Gateway Protocol (BGP) is an Internet protocol that enables routers on a network to share routing information with each other and advertise information about the segments of the IP address space they can access within their network with routers on external networks. BGP allows you to decide what is the “best” route for a packet to take from your network to a destination on another network, rather than simply setting a default route from your border router(s) to your upstream provider(s). You can configure BGP either within an autonomous system or between different autonomous systems. When run within an autonomous system, it's called internal BGP (iBGP). When run between different autonomous systems, it's called external BGP (eBGP). BGP is defined in RFC 1771.

BGP commands enable you to configure the switch to receive routes and to advertise static routes, fixed routes and virtual server IP addresses with other internal and external routers. In the current Alteon OS implementation, the GbE Switch Module does not advertise BGP routes that are learned from other BGP “speakers”.

The BGP command option is turned off by default.

NOTE – Fixed routes are subnet routes. There is one fixed route per IP interface.

Table 4-72 Border Gateway Protocol Commands

Command Syntax and Usage

neighbor <*nbr-id*>

Configures each BGP *peer*. Each border router, within an autonomous system, exchanges routing information with routers on other external networks.

Command mode: router bgp

To view command options, see [page 197](#).

as

Set Autonomous System number.

Command mode: router bgp

local-preference <*preference-value*>

Sets the local preference. The path with the higher value is preferred.

When multiple peers advertise the same route, use the route with the shortest AS path as the preferred route if you are using eBGP, or use the local preference if you are using iBGP.

Command mode: router bgp

Table 4-72 Border Gateway Protocol Commands

Command Syntax and Usage

enable

Globally turns BGP on.

Command mode: router bgp

no enable

Globally turns BGP off.

Command mode: router bgp

show ip bgp

Displays the current BGP configuration.

Command mode: All except User EXEC

BGP Peer Configuration Commands

These commands are used to configure BGP peers, which are border routers that exchange routing information with routers on internal and external networks. The peer option is disabled by default.

Table 4-73 BGP Peer Configuration Options

Command Syntax and Usage

nbr-id

Defines the IP address for the specified peer (border router), using dotted decimal notation. The default address is 0.0.0.0.

Command mode: router bgp

neighbor <nbr-id> remote-as <as-number>

Sets the remote autonomous system number for the specified peer.

Command mode: router bgp

neighbor <nbr-id> timers hold-time <time-value>

Sets the period of time, in seconds, that will elapse before the peer session is torn down because the switch hasn't received a "keep alive" message from the peer. It is set at 90 seconds by default.

Command mode: router bgp

neighbor <nbr-id> timers keep-alive <time-value>

Sets the keep-alive time for the specified peer in seconds. It is set at 0 by default.

Command mode: router bgp

neighbor <nbr-id> advertisement-interval <interval-value>

Sets time in seconds between advertisements.

Command mode: router bgp

Table 4-73 BGP Peer Configuration Options**Command Syntax and Usage**

```
neighbor <nbr-id> retry-interval <interval-value>
```

Sets connection retry interval in seconds.

Command mode: router bgp

```
neighbor <nbr-id> route-origination-interval <interval-value>
```

Sets the minimum time between route originations in seconds.

Command mode: router bgp

```
neighbor <nbr-id> ttl <ttl-value>
```

Time-to-live (TTL) is a value in an IP packet that tells a network router whether or not the packet has been in the network too long and should be discarded. TTL specifies a certain time span in seconds that, when exhausted, would cause the packet to be discarded. The TTL is determined by the number of router hops the packet is allowed before it must be discarded.

This command specifies the number of router hops that the IP packet can make. This value is used to restrict the number of “hops” the advertisement makes. It is also used to support multi-hops, which allow BGP peers to talk across a routed network. The default number is set at 1.

Command mode: router bgp

```
neighbor <nbr-id> route-map in <map-id>
```

Adds route map into in-route map list.

Command mode: router bgp

```
neighbor <nbr-id> route-map out <map-id>
```

Adds route map into out-route map list.

Command mode: router bgp

```
no neighbor <nbr-id> route-map in <map-id>
```

Removes route map from in-route map list.

Command mode: router bgp

```
no neighbor <nbr-id> route-map out <map-id>
```

Removes route map from out-route map list.

Command mode: router bgp

```
no neighbor <nbr-id> shutdown
```

Enables this peer configuration.

Command mode: router bgp

```
neighbor <nbr-id> shutdown
```

Disables this peer configuration.

Command mode: router bgp

Table 4-73 BGP Peer Configuration Options

Command Syntax and Usage

no neighbor *<nbr-id>*
 Deletes this peer configuration.
Command mode: router bgp

show ip bgp neighbor [*<nbr-id>*]
 Displays the current BGP peer configuration.
Command mode: All except User EXEC

BGP Redistribution Configuration Commands**Table 4-74** BGP Redistribution Configuration Command Options

Command Syntax and Usage

[no] neighbor *<nbr-id>* **redistribute default-metric** *<metric-value>*
 Sets default metric of advertised routes.
Command mode: router bgp

neighbor *<nbr-id>* **redistribute default-information** {*none|import|originate|redistribute*}

Sets default route action.

Defaults routes can be configured as import, originate, redistribute, or none.

None: No routes are configured

Import: Import these routes.

Originate: The switch sends a default route to peers even though it does not have any default routes in its routing table.

Redistribute: Default routes are either configured through default gateway or learned through other protocols and redistributed to peer. If the routes are learned from default gateway configuration, you have to enable static routes since the routes from default gateway are static routes. Similarly, if the routes are learned from a certain routing protocol, you have to enable that protocol.

Command mode: router bgp

[no] neighbor *<nbr-id>* **redistribute rip**
 Enables or disables advertising RIP routes.
Command mode: router bgp

[no] neighbor *<nbr-id>* **redistribute ospf**
 Enables or disables advertising OSPF routes.
Command mode: router bgp

Table 4-74 BGP Redistribution Configuration Command Options**Command Syntax and Usage**

```
[no] neighbor <nbr-id> redistribute fixed
```

Enables or disables advertising fixed routes.

Command mode: router bgp

```
[no] neighbor <nbr-id> redistribute static
```

Enables or disables advertising static routes.

Command mode: router bgp

```
show ip bgp neighbor <nbr-id> redistribute
```

Displays current redistribution configuration.

Command mode: All except User EXEC

BGP Aggregation Configuration Commands

These commands enable you to configure filters that specify the routes/range of IP destinations a peer router will accept from other peers. A route must match a filter to be installed in the routing table. By default, the first filter is enabled and the rest of the filters are disabled.

Table 4-75 BGP Filter Configuration Command Options**Command Syntax and Usage**

```
aggregate-address <ip-address> <ip-netmask>
```

Defines the starting IP address for this filter, using dotted decimal notation. The default address is 0.0.0.0.

Command mode: router bgp

```
aggregate-address <ip-address> <ip-netmask> enable
```

Enables this BGP filter.

Command mode: router bgp

```
no aggregate-address <ip-address> <ip-netmask> enable
```

Disables this BGP filter.

Command mode: router bgp

```
no aggregate-address <ip-address> <ip-netmask>
```

Deletes this BGP filter.

Command mode: router bgp

```
show ip bgp aggregate-address <ip-address> <ip-netmask>
```

Displays the current BGP filter configuration.

Command mode: All except User EXEC

IGMP Configuration

IGMP Snooping allows the switch to forward multicast traffic only to those ports that request it. IGMP snooping prevents multicast traffic from being flooded to all ports. The switch learns which server hosts are interested in receiving multicast traffic, and forwards it only to ports connected to those servers.

IGMP Snooping Configuration

Table 4-76 describes the commands used to configure IGMP Snooping.

Table 4-76 IGMP Snoop Commands

Command Syntax and Usage

ip igmp snoop timeout *<timeout-value>*

Configures the timeout value for IGMP Membership Reports (host). Once the timeout value is reached, the switch removes the host from its IGMP table, if the conditions are met. The range is from 1 to 255 seconds. The default is 10 seconds.

Command mode: config

ip igmp snoop mrouter-timeout *<timeout-value>*

Configures the timeout value for IGMP Membership Queries (mrouter). Once the timeout value is reached, the switch removes the multicast router from its IGMP table, if the proper conditions are met. The range is from 1 to 600 seconds. The default is 255 seconds.

Command mode: config

ip igmp snoop query-interval *<1-600>*

Sets the IGMP router query interval, in seconds. The default value is 125.

Command mode: config

ip igmp snoop robustval *<robust-value>*

Configures the IGMP Robustness variable, which allows you to tune the switch for expected packet loss on the subnet. If the subnet is expected to be lossy (high rate of packet loss), increase the value. The default value is 2.

Command mode: config

[no] ip igmp snoop aggregate

Enables or disables IGMP Membership Report aggregation.

Command mode: config

ip igmp snoop source-ip *<IP addr>*

Configures the source IP address used as a proxy for IGMP Group Specific Queries.

Command mode: config

Table 4-76 IGMP Snoop Commands

Command Syntax and Usage

ip igmp snoop vlan *<vlan-instance>*

Adds the selected VLAN(s) to IGMP Snooping.

Command mode: config

no ip igmp snoop vlan *<vlan-instance>* **enable**

Removes the selected VLAN(s) from IGMP Snooping.

Command mode: config

no ip igmp snoop vlan all

Removes all VLANs from IGMP Snooping.

Command mode: config

ip igmp snoop vlan *<vlan-instance>* **fast-leave**

Enables or disables Fastleave processing. Fastleave allows the switch to immediately remove a port from the IGMP port list, if the host sends a Leave message, and the proper conditions are met. This command is disabled by default.

Command mode: config

show ip igmp snoop

Displays the current IGMP Snooping parameters.

Command mode: All except User EXEC

IGMP Static Multicast Router Configuration

[Table 4-77](#) describes the commands used to configure a static multicast router.

NOTE – When you configure a static multicast router on a VLAN, the process of learning multicast routers is disabled for that VLAN.

Table 4-77 IGMP Static Multicast Router Commands

Command Syntax and Usage

ip igmp mrouter vlan *<vlan-instance>* **version** *<version-number>* *<port-identifier>*

Selects a port/VLAN combination on which the static multicast router is connected, and configures the IGMP version (1 or 2) of the multicast router.

Note: Port number must be an external port (EXT1-EXT6).

Command mode: config

no ip igmp mrouter vlan *<vlan-instance>* **version** *<version-number>* *<port-identifier>*

Removes a static multicast router from the selected port/VLAN combination.

Command mode: config

show ip igmp mrouter

Displays the current IGMP Static Multicast Router parameters.

Command mode: All except User EXEC

IGMP Filtering Configuration

[Table 4-78](#) describes the commands used to configure an IGMP filter.

Table 4-78 IGMP Filtering Commands

Command Syntax and Usage

ip igmp profile *<filter-instance>*

Configures the IGMP filter.

Command mode: config

To view command options, see [page 204](#).

ip igmp filtering

Enables IGMP filtering globally.

Command mode: config

Table 4-78 IGMP Filtering Commands

Command Syntax and Usage

no ip igmp filtering

Disables IGMP filtering globally.

Command mode: config

show ip igmp filtering

Displays the current IGMP Filtering parameters.

Command mode: All except User EXEC

IGMP Filter Definition

[Table 4-79](#) describes the commands used to define an IGMP filter.

Table 4-79 IGMP Filter Definition Commands

Command Syntax and Usage

ip igmp profile *<filter-instance>* **range** *<ip-address1>* *<ip-address2>*

Configures the range of IP multicast addresses for this filter.

Command mode: config

ip igmp profile *<filter-instance>* **action** {**allow**|**deny**}

Allows or denies multicast traffic for the IP multicast addresses specified.

Command mode: config

ip igmp profile *<filter-instance>* **enable**

Enables this IGMP filter.

Command mode: config

no ip igmp profile *<filter-instance>* **enable**

Disables this IGMP filter.

Command mode: config

no ip igmp profile *<filter-instance>*

Deletes this filter's parameter definitions.

Command mode: config

show ip igmp profile [*<filter-instance>*]

Displays the current IGMP filter.

Command mode: config

IGMP Filtering Port Configuration

Table 4-80 describes the commands used to configure a port for IGMP filtering.

Table 4-80 IGMP Filter Definition Commands

Command Syntax and Usage

[no] ip igmp filtering

Enables or disables IGMP filtering on this port.

Command mode: interface

ip igmp profile <filter-instance>

Adds an IGMP filter to this port.

Command mode: interface

no ip igmp profile <filter-instance>

Removes an IGMP filter from this port.

Command mode: interface

show interface port {<port-identifier>} igmp-filtering

Displays the current IGMP filter parameters for this port.

Command mode: All except User EXEC

Domain Name System Configuration

The Domain Name System (DNS) commands are used for defining the primary and secondary DNS servers on your local network, and for setting the default domain name served by the switch services. DNS parameters must be configured prior to using hostname parameters with the ping, traceroute, and tftp commands.

Table 4-81 Domain Name Service Command Options

Command Syntax and Usage

[no] ip name-server <ip-address>

You will be prompted to set the IP address for your primary DNS server. Use dotted decimal notation.

Command mode: config

[no] ip name-server <ip-address>

You will be prompted to set the IP address for your secondary DNS server. If the primary DNS server fails, the configured secondary will be used instead. Enter the IP address using dotted decimal notation.

Command mode: config

Table 4-81 Domain Name Service Command Options

Command Syntax and Usage

[no] ip domain-name *<name>*
 Sets the default domain name used by the switch.
 For example: `mycompany.com`
Command mode: config

show ip dns
 Displays the current Domain Name System settings.
Command mode: All except User EXEC

Bootstrap Protocol Relay Configuration

The Bootstrap Protocol (BOOTP) Relay commands are used to allow hosts to obtain their configurations from a Dynamic Host Configuration Protocol (DHCP) server. The BOOTP configuration enables the switch to forward a client request for an IP address to two DHCP/BOOTP servers with IP addresses that have been configured on the GbE Switch Module.

BOOTP relay is turned off by default.

Table 4-82 Bootstrap Protocol Relay Configuration Command Options

Command Syntax and Usage

[no] ip bootp-relay server *<ip-address>*
 Sets the IP address of the first or second BOOTP server.
Command mode: config

ip bootp-relay enable
 Globally turns on BOOTP relay.
Command mode: config

no ip bootp-relay enable
 Globally turns off BOOTP relay.
Command mode: config

show ip bootp-relay
 Displays the current BOOTP relay configuration.
Command mode: All except User EXEC

VRRP Configuration

Virtual Router Redundancy Protocol (VRRP) support on GbE Switch Modules provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

By default, VRRP is disabled. Alteon OS has extended VRRP to include virtual servers as well, allowing for full active/active redundancy between switches. For more information on VRRP, see the “High Availability” chapter in the *Alteon OS 21.0 Application Guide*.

Table 4-83 Virtual Router Redundancy Protocol Command Options

Command Syntax and Usage

[no] hot-standby

Enables or disables hot standby processing, in which two or more switches provide redundancy for each other. By default, this option is disabled.

Command mode: router vrrp

enable

Globally enables VRRP on this switch.

Command mode: router vrrp

no enable

Globally disables VRRP on this switch.

Command mode: router vrrp

show ip vrrp

Displays the current VRRP parameters.

Command mode: All except User EXEC

Virtual Router Configuration

These commands are used for configuring up to 128 virtual routers for this switch. A virtual router is defined by its virtual router ID and an IP address. On each VRRP-capable routing device participating in redundancy for this virtual router, a virtual router will be configured to share the same virtual router ID and IP address.

Virtual routers are disabled by default.

Table 4-84 VRRP Virtual Router Command Options

Command Syntax and Usage

virtual-router *<index>* **virtual-router-id** *<vr-id>*

Defines the virtual router ID. This is used in conjunction with the **[no] virtual-router <vr-id> address <ip-address>** command below to define a virtual router on this switch. To create a pool of VRRP-enabled routing devices which can provide redundancy to each other, each participating VRRP device must be configured with the same virtual router.

The *vr-id* for standard virtual routers (where the virtual router IP address is not the same as any virtual server) can be any integer between 1 and 255. The default value is 1.

All *vr-id* values must be unique within the VLAN to which the virtual router's IP interface belongs.

Command mode: router vrrp

[no] virtual-router *<vr-id>* **address** *<ip-address>*

Defines the IP address for this virtual router using dotted decimal notation. This is used in conjunction with the *vr-id* (above) to configure the same virtual router on each participating VRRP device. The default address is 0.0.0.0.

Command mode: router vrrp

virtual-router *<vr-id>* **interface** *<interface-instance>*

Selects a switch IP interface (between 1 and 128). If the IP interface has the same IP address as the *addr* option above, this switch is considered the "owner" of the defined virtual router. An owner has a special priority of 255 (highest) and will always assume the role of master router, even if it must preempt another virtual router which has assumed master routing authority. This preemption occurs even if the *preem* option below is disabled. The default value is 1.

Command mode: router vrrp

virtual-router *<vr-id>* **priority** *<pri-value>*

Defines the election priority bias for this virtual server. This can be any integer between 1 and 254. The default value is 100.

During the master router election process, the routing device with the highest virtual router priority number wins. If there is a tie, the device with the highest IP interface address wins. If this virtual router's IP address is the same as the one used by the IP interface, the priority for this virtual router will automatically be set to 255 (highest).

When priority tracking is used, this base priority value can be modified according to a number of performance and operational criteria.

Command mode: router vrrp

virtual-router *<vr-id>* **timers advertise** *<interval-value>*

Defines the time interval between VRRP master advertisements. This can be any integer between 1 and 255 seconds. The default value is 1.

Command mode: router vrrp

Table 4-84 VRRP Virtual Router Command Options

Command Syntax and Usage

[no] virtual-router <vr-id> preemption

Enables or disables master preemption. When enabled, if this virtual router is in backup mode but has a higher priority than the current master, this virtual router will preempt the lower priority master and assume control. Note that even when `preemption` is disabled, this virtual router will always preempt any other master if this switch is the owner (the IP interface address and virtual router `addr` are the same). By default, this option is enabled.

Command mode: router vrrp

virtual-router <vr-id> enable

Enables this virtual router.

Command mode: router vrrp

no virtual-router <vr-id> enable

Disables this virtual router.

Command mode: router vrrp

no virtual-router <vr-id>

Deletes this virtual router from the switch configuration.

Command mode: router vrrp

show ip vrrp virtual-router <vr-id>

Displays the current configuration information for this virtual router.

Command mode: All except User EXEC

Virtual Router Priority Tracking Configuration Commands

These commands are used for modifying the priority system used when electing the master router from a pool of virtual routers. Various tracking criteria can be used to bias the election results. Each time one of the tracking criteria is met, the priority level for the virtual router is increased by an amount defined through the VRRP Tracking commands.

Criteria are tracked dynamically, continuously updating virtual router priority levels when enabled. If the virtual router preemption option is enabled, this virtual router can assume master routing authority when its priority level rises above that of the current master.

Some tracking criteria apply to standard virtual routers, otherwise called “virtual interface routers.” A virtual *server* router is defined as any virtual router whose IP address is the same as any configured virtual server IP address.

Table 4-85 VRRP Priority Tracking Options

Command Syntax and Usage

[no] virtual-router <vr-id> track virtual-routers

When enabled, the priority for this virtual router will be increased for each virtual router in master mode on this switch. This is useful for making sure that traffic for any particular client/server pairing are handled by the same switch, increasing routing and load balancing efficiency. This command is disabled by default.

Command mode: router vrrp

[no] virtual-router <vr-id> track interfaces

When enabled, the priority for this virtual router will be increased for each other IP interface active on this switch. An IP interface is considered active when there is at least one active port on the same VLAN. This helps elect the virtual routers with the most available routes as the master. This command is disabled by default.

Command mode: router vrrp

[no] virtual-router <vr-id> track ports

When enabled, the priority for this virtual router will be increased for each active port on the same VLAN. A port is considered “active” if it has a link and is forwarding traffic. This helps elect the virtual routers with the most available ports as the master. This command is disabled by default.

Command mode: router vrrp

show ip vrrp virtual-router <vr-id> track

Displays the current configuration for priority tracking for this virtual router.

Command mode: All except User EXEC

Virtual Router Group Configuration Commands

Virtual Router Group commands are used for associating all virtual routers into a single logical virtual router, which forces all virtual routers on the GbE Switch Module to either be master or backup as a group. A virtual router is defined by its virtual router ID and an IP address. On each VRRP-capable routing device participating in redundancy for this virtual router, a virtual router will be configured to share the same virtual router ID and IP address.

NOTE – This option is required to be configured only when using at least two GbE Switch Modules in a hot-standby failover configuration, where only one switch is active at any time.

Table 4-86 VRRP Virtual Router Group Command Options

Command Syntax and Usage

group virtual-router-id <*gvr-id*>

Defines the virtual router ID.

The `vrid` for standard virtual routers (where the virtual router IP address is not the same as any virtual server) can be any integer between 1 and 255. All `vrid` values must be unique within the VLAN to which the virtual router's IP interface (see `if` below) belongs. The default virtual router ID is 1.

Command mode: router vrrp

group interface <*interface-instance*>

Selects a switch IP interface (between 1 and 128). The default switch IP interface number is 1.

Command mode: router vrrp

group priority <*pri-value*>

Defines the election priority bias for this virtual router group. This can be any integer between 1 and 254. The default value is 100.

During the master router election process, the routing device with the highest virtual router priority number wins. If there is a tie, the device with the highest IP interface address wins. If this virtual router's IP address (`addr`) is the same as the one used by the IP interface, the priority for this virtual router will automatically be set to 255 (highest).

When priority tracking is used, this base priority value can be modified according to a number of performance and operational criteria.

Command mode: router vrrp

group advertisement <*interval-value*>

Defines the time interval between VRRP master advertisements. This can be any integer between 1 and 255 seconds. The default is 1.

Command mode: router vrrp

[no] group preemption

Enables or disables master preemption. When enabled, if the virtual router group is in backup mode but has a higher priority than the current master, this virtual router will preempt the lower priority master and assume control. Note that even when `preemption` is disabled, this virtual router will always preempt any other master if this switch is the owner (the IP interface address and virtual router address are the same). By default, this option is enabled.

Command mode: router vrrp

Table 4-86 VRRP Virtual Router Group Command Options

Command Syntax and Usage

group enable

Enables the virtual router group.

Command mode: router vrrp

no group enable

Disables the virtual router group.

Command mode: router vrrp

no group

Deletes the virtual router group from the switch configuration.

Command mode: router vrrp

show ip vrrp group

Displays the current configuration information for the virtual router group.

Command mode: All except User EXEC

Virtual Router Group Priority Tracking Configuration Commands

NOTE – If *Virtual Router Group Tracking* is enabled, then the tracking option will be available only under *group* option. The tracking setting for the other individual virtual routers will be ignored.

Table 4-87 Virtual Router Group Priority Tracking Command Options

Command Syntax and Usage

[no] group track virtual-routers

When enabled, the priority for this virtual router will be increased for each virtual router in master mode on this switch. This is useful for making sure that traffic for any particular client/server pairing are handled by the same switch, increasing routing and load balancing efficiency. This command is disabled by default.

Command mode: router vrrp

[no] group track interfaces

When enabled, the priority for this virtual router will be increased for each other IP interface active on this switch. An IP interface is considered active when there is at least one active port on the same VLAN. This helps elect the virtual routers with the most available routes as the master. This command is disabled by default.

Command mode: router vrrp

Table 4-87 Virtual Router Group Priority Tracking Command Options

Command Syntax and Usage

[no] group track ports

When enabled, the priority for this virtual router will be increased for each active port on the same VLAN. A port is considered “active” if it has a link and is forwarding traffic. This helps elect the virtual routers with the most available ports as the master. This command is disabled by default.

Command mode: router vrrp

show ip vrrp group track

Displays the current configuration for priority tracking for this virtual router.

Command mode: All except User EXEC

VRRP Interface Configuration Commands

NOTE – The *interface-id* (1 to 128) represents the IP interface on which authentication parameters must be configured.

These commands are used for configuring VRRP authentication parameters for the IP interfaces used with the virtual routers.

Table 4-88 VRRP Interface Command Options

Command Syntax and Usage

interface <interface-id> authentication {password|none}

Defines the type of authentication that will be used: none (no authentication) or password (password authentication).

Command mode: router vrrp

interface <interface-id> password <password>

Defines a plain text password up to eight characters long. This password will be added to each VRRP packet transmitted by this interface when password authentication is chosen (see **interface authentication** above).

Command mode: router vrrp

Table 4-88 VRRP Interface Command Options

Command Syntax and Usage

no interface <interface-id>

Clears the authentication configuration parameters for this IP interface. The IP interface itself is not deleted.

Command mode: router vrrp

show ip vrrp interface <interface-id>

Displays the current configuration for this IP interface's authentication parameters.

Command mode: All except User EXEC

VRRP Tracking Configuration Commands

These commands are used for setting weights for the various criteria used to modify priority levels during the master router election process. Each time one of the tracking criteria is met (see “VRRP Virtual Router Priority Tracking Commands” on [page 209](#)), the priority level for the virtual router is increased by a defined amount.

Table 4-89 VRRP Tracking Command Options

Command Syntax and Usage

tracking-priority-increment virtual-routers *<increment-value>*

Defines the priority increment value (0 through 254) for virtual routers in master mode detected on this switch. The default value is 2.

Command mode: router vrrp

tracking-priority-increment interfaces *<increment-value>*

Defines the priority increment value (0 through 254) for active IP interfaces detected on this switch. The default value is 2.

Command mode: router vrrp

tracking-priority-increment ports *<increment-value>*

Defines the priority increment value (0 through 254) for active ports on the virtual router's VLAN. The default value is 2.

Command mode: router vrrp

show ip vrrp tracking-priority-increment

Displays the current configuration of priority tracking increment values.

Command mode: All except User EXEC

NOTE – These priority tracking options only define increment values. These options do not affect the VRRP master router election process until options under the VRRP Virtual Router Priority Tracking Commands (see [page 209](#)) are enabled.

Quality of Service Commands

Quality of Service (QoS) commands configure the 802.1p priority value and DiffServ Code Point value of incoming packets. This allows you to differentiate between various types of traffic, and provide different priority levels.

802.1p Commands

This feature provides the GbESM the capability to filter IP packets based on the 802.1p bits in the packet's VLAN header. The 802.1p bits specify the priority that you should give to the packets while forwarding them. The packets with a higher (non-zero) priority bits are given forwarding preference over packets with numerically lower priority bits value.

Table 4-90 802.1p Command Options

Command Syntax and Usage

qos transmit-queue mapping *<pri>* *<queue-number>*

Maps the 802.1p priority of to the Class of Service queue (COSq) priority. Enter the 802.1p priority value (0-7), followed by the Class of Service queue (0-7) that handles the matching traffic.

Command mode: config

qos transmit-queue weight *<queue-number>* *<weight-value>*

Configures the weight of the selected Class of Service queue (COSq). Enter the queue number (0-7), followed by the scheduling weight (0-15).

Command mode: config

qos transmit-queue number-cos {2|8}

Sets the number of Class of Service queues for switch ports. Default is 8.

Command mode: config

show qos transmit-queue

Displays the current 802.1p parameters.

Command mode: All except User EXEC

DSCP Commands

These commands map the DiffServ Code Point (DSCP) value of incoming packets to a new value or to an 802.1p priority value.

Table 4-91 DSCP Command Options

Command Syntax and Usage

qos dscp dscp-mapping *<dscp>* *<dscp>*

Maps the initial DiffServ Code Point (DSCP) value to a new value. Enter the DSCP value (0-63) of incoming packets, followed by the new value.

Command mode: config

qos dscp dot1p-mapping *<dscp>* *<pri>*

Maps the DiffServ Code point value to an 802.1p priority value. Enter the DSCP value, followed by the corresponding 802.1p value.

Command mode: config

qos dscp re-marking

Turns on DSCP re-marking globally.

Command mode: config

no qos dscp re-marking

Turns off DSCP re-marking globally.

Command mode: config

show qos dscp

Displays the current DSCP parameters.

Command mode: All except User EXEC

Access Control Commands

Use these commands to create Access Control Lists, ACL Blocks, and ACL Groups. ACLs define matching criteria used for IP filtering and Quality of Service functions.

Table 4-92 ACL command options

Command Syntax and Usage

[no] access-control list *<list-number>*

Configures an Access Control List.

Command mode: config

To view command options, see [page 219](#).

[no] access-control block *<block-number>*

Configures an ACL Block.

Command mode: config

To view command options, see [page 223](#).

[no] access-control group *<group-number>*

Configures an ACL Group.

Command mode: config

To view command options, see [page 224](#).

show access-control

Displays the current ACL parameters.

Command mode: All except User EXEC

Access Control List Commands

These commands allow you to define filtering criteria for each Access Control List (ACL).

Table 4-93 ACL command options

Command Syntax and Usage

[no] access-control list *<list-number>* **egress-port** *<port-instance>*

Configures the ACL to function on egress packets.

Command mode: config

access-control list *<list-number>* **action** {**permit**|**deny**|**class-of-service** *<0-7>*}

Configures a filter action for packets that match the ACL definitions. You can choose to permit (pass) or deny (drop) packets, or set the Class of Service queue that handles the packets.

Command mode: config

access-control list *<list-number>* **statistics**

Enables or disables the statistics collection for the Access Control List.

Command mode: All except User EXEC

default access-control list *<list-number>*

Resets the ACL parameters to their default values.

Command mode: config

show access-control list *<list-number>*

Displays the current ACL parameters.

Command mode: All except User EXEC

Ethernet Filtering Commands

These commands allow you to define Ethernet matching criteria for an ACL.

Table 4-94 Ethernet Filtering Command Options

Command Syntax and Usage

access-control list *<list-number>* **ethernet source-mac-address** *<mac-address>*

Defines the source MAC address for this ACL.

Command mode: config

access-control list *<list-number>* **ethernet destination-mac-address** *<mac-address>*

Defines the destination MAC address for this ACL.

Command mode: config

access-control list *<list-number>* **ethernet vlan** *<vid>* *<mask>*

Defines a VLAN number and mask for this ACL.

Command mode: config

access-control list *<list-number>* **ethernet ethernet-type** *<etype>*

Defines the Ethernet type for this ACL.

Command mode: config

access-control list *<list-number>* **ethernet priority** *<0-7>*

Defines the Ethernet priority value for the ACL.

Command mode: config

default access-control list *<list-number>* **ethernet**

Resets Ethernet parameters for the ACL to their default values.

Command mode: config

show access-control list {*<list-number>*} **ethernet**

Displays the current Ethernet parameters for the ACL.

Command mode: All except User EXEC

IP version 4 Filtering Commands

These commands allow you to define IPv4 matching criteria for an ACL.

Table 4-95 IP version 4 Filtering Command Options

Command Syntax and Usage

access-control list *<list-number>* **ipv4 source-ip-address** *<ip-address>* {*<ip-mask>*}

Defines a source IP address for the ACL. If defined, traffic with this source IP address will match this ACL. Specify an IP address in dotted decimal notation.

Command mode: config

access-control list *<list-number>* **ipv4 destination-ip-address** *<ip-address>* {*<ip-mask>*}

Defines a destination IP address for the ACL. If defined, traffic with this destination IP address will match this ACL.

Command mode: config

access-control list *<list-number>* **ipv4 protocol** *<proto>*

Defines an IP protocol for the ACL. If defined, traffic from the specified protocol matches this filter. Specify the protocol number. Listed below are some of the well-known protocols.

Number Name

1	icmp
2	igmp
6	tcp
17	udp
89	ospf
112	vrrp

Command mode: config

access-control list *<list-number>* **ipv4 type-of-service** *<tos>*

Defines a Type of Service value for the ACL. For more information on ToS, refer to RFC 1340 and 1349.

Command mode: config

default access-control list *<list-number>* **ipv4**

Resets the IPv4 parameters for the ACL to their default values.

Command mode: config

show access-control list *<list-number>* **ipv4**

Displays the current IPV4 parameters.

Command mode: All except User EXEC

TCP/UDP Filtering Commands

These commands allow you to define TCP/UDP matching criteria for an ACL.

Table 4-96 TCP/UDP Filtering options

Command Syntax and Usage

access-control list *<list-number>* **tcp-udp source-port** *<port>*

Defines a source port for the ACL. If defined, traffic with the specified TCP or UDP source port will match this ACL. Specify the port number. Listed below are some of the well-known ports:

<u>Number</u>	<u>Name</u>
20	ftp-data
21	ftp
22	ssh
23	telnet
25	smtp
37	time
42	name
43	whois
53	domain
69	tftp
70	gopher
79	finger
80	http

Command mode: config

access-control list *<list-number>* **tcp-udp destination-port** *<port>*

Defines a destination port for the ACL. If defined, traffic with the specified TCP or UDP destination port will match this ACL. Specify the port number, just as with `sport` above.

Command mode: config

access-control list *<list-number>* **tcp-udp flags** *<flag-value>*

Defines a TCP/UDP flag for the ACL.

Command mode: config

default access-control list *<list-number>* **tcp-udp**

Resets the TCP/UDP parameters for the ACL to their default values.

Command mode: config

show access-control list [*<list-number>*] **tcp-udp**

Displays the current TCP/UDP Filtering parameters.

Command mode: All except User EXEC

Packet Format Filtering Commands

These commands allow you to define Packet Format matching criteria for an ACL.

Table 4-97 Packet Format Filtering Command Options

Command Syntax and Usage

access-control list <list-number> **packet-format ethernet** {ether-type2 | snap | llc}

Defines the Ethernet format for the ACL.

Command mode: config

[no] **access-control list** <list-number> **packet-format tag tagged**

Defines the tagging format for the ACL.

Command mode: config

[no] **access-control list** <list-number> **packet-format ip** {ipv4 | ipv6}

Defines the IP format for the ACL.

Command mode: config

default access-control list <list-number> **packet-format**

Resets Packet Format parameters for the ACL to their default values.

Command mode: config

show access-control list <list-number> **packet-format**

Displays the current Packet Format parameters for the ACL.

Command mode: All except User EXEC

ACL Block Commands

These commands allow you to compile one or more ACLs into an ACL Block. Each ACL in the ACL Block must fall within the same mask.

Table 4-98 ACL Block Command Options

Command Syntax and Usage

access-control block <block-number> <aclist-number>

Adds the selected ACL to the ACL Block.

Command mode: config

Table 4-98 ACL Block Command Options**Command Syntax and Usage**

no access-control block *<block-number>* *<aclist-number>*

Removes the selected ACL from the ACL Block.

Command mode: config

show access-control block *<block-number>*

Displays the current ACL block parameters.

Command mode: All except User EXEC

ACL Group Commands

These commands allow you to compile one or more ACLs and ACL Blocks into an ACL Group. Once you create an ACL Group, you can assign the ACL Group to one or more ports.

Table 4-99 ACL Group Command Options**Command Syntax and Usage**

access-control group *<group-number>* **list|block** *<list/block-number>*

Adds the selected ACL or ACL Block to the ACL Group.

Command mode: config

no access-control group *<group-number>* **list|block** *<list/block-number>*

Removes the selected ACL or ACL Block from the ACL Group.

Command mode: config

show access-control group *<group-number>*

Displays the current ACL group parameters.

Command mode: All except User EXEC

Port Mirroring Commands

Port mirroring is disabled by default. For more information about port mirroring on the GbE Switch Module, see “Appendix A: Troubleshooting” in the *Alteon OS Application Guide*.

NOTE – Traffic on VLAN 4095 is not mirrored to the external ports.

Port Mirroring commands are used to configure, enable, and disable the monitored port. When enabled, network packets being sent and/or received on a target port are duplicated and sent to a monitor port. By attaching a network analyzer to the monitor port, you can collect detailed information about your network performance and usage.

Table 4-100 Port Mirroring Command Options

Command Syntax and Usage

[no] port-mirroring enable

Enables or disables port mirroring.

Command mode: config

show port-mirroring

Displays current settings of the mirrored and monitoring ports.

Command mode: All except User EXEC

Port-Mirroring Commands

Table 4-101 Port-Based Port-Mirroring Command Options

Command Syntax and Usage

port-mirroring monitor-port *<port-instance>* **mirroring-port** *<port-identifier>* **direction**

Adds the port to be mirrored. This command also allows you to enter the direction of the traffic. It is necessary to specify the direction because:

If the source port of the frame matches the mirrored port and the mirrored direction is ingress or both (ingress and egress), the frame is sent to the mirrored port.

If the destination port of the frame matches the mirrored port and the mirrored direction is egress or both, the frame is sent to the monitoring port.

Command mode: config

no port-mirroring monitor-port *<port-instance>* **mirroring-port** *<port-identifier>* **<in|out|both>**

Removes the mirrored port.

Command mode: config

no port-mirroring monitor-port *<port-instance>* **mirroring-port** *<port-id>*

Deletes this monitor port.

Command mode: config

show port-mirroring

Displays the current settings of the monitoring port.

Command mode: All except User EXEC

Configuration Dump

The dump program writes the current switch configuration to the terminal screen. To start the dump program, at the prompt, enter:

```
Router(config)# show running-config
```

The configuration is displayed with parameters that have been changed from the default values. The screen display can be captured, edited, and placed in a script file, which can be used to configure other switches through a Telnet connection. When using Telnet to configure a new switch, paste the configuration commands from the script file at the command line prompt of the switch. The active configuration can also be saved or loaded via FTP/TFTP, as described on [page 227](#).

copy running-config tftp

Saving the Active Switch Configuration

When the `copy running-config tftp` command is used, the switch's active configuration commands (as displayed using `show running-config`) will be uploaded to the specified script configuration file on the TFTP server. To start the switch configuration upload, at the prompt, enter:

```
Router(config)# copy running-config tftp
```

NOTE – The output file is formatted with line-breaks but no carriage returns—the file cannot be viewed with editors that require carriage returns (such as Microsoft Notepad).

NOTE – If the TFTP server is running SunOS or the Solaris operating system, the specified configuration file must exist prior to executing the `copy running-config tftp` command and must be writable (set with proper permission, and not locked by any application). The contents of the specified file will be replaced with the current configuration data.

copy tftp running-config

Restoring the Active Switch Configuration

When the `copy tftp running-config` command is used, the active configuration will be replaced with the commands found in the specified configuration file. The file can contain a full switch configuration or a partial switch configuration.

To start the switch configuration download, at the prompt, enter:

```
Router(config)# copy tftp running-config
```


CHAPTER 5

Operations Commands

Operations commands generally affect switch performance immediately, but do not alter permanent switch configurations. For example, you can use Operations commands to immediately disable a port (without the need to apply or save the change), with the understanding that when the switch is reset, the port returns to its normally configured operation.

These commands enable you to alter switch operational characteristics without affecting switch configuration.

Table 5-1 General Operations commands

Command Syntax and Usage

access user administrator-password

access user operator-password

access user user-password

Allows you to change the password. You need to enter the current password in use for validation.

Command Mode: config

clear logging

Clears all Syslog messages.

Command Mode: priv-exec

ntp send

Allows the user to send requests to the NTP server.

Command Mode: priv-exec

Operations-Level Port Options

Operations-level port options are used for temporarily disabling or enabling a port, and for re-setting the port.

Table 5-2 Operations-Level Port options

Command Syntax and Usage

no interface port *<port-identifier>* **shutdown**

Temporarily enables the port. The port will be returned to its configured operation mode when the switch is reset.

Command Mode: priv-exec

interface port *<port-identifier>* **shutdown**

Temporarily disables the port. The port will be returned to its configured operation mode when the switch is reset.

Command Mode: priv-exec

show interfaces port *<port-identifier>* **operation**

Displays the current settings for the port.

Command Mode: priv-exec

Operations-Level Port 802.1x Options

Operations-level port 802.1x options are used to temporarily set 802.1x parameters for a port.

Table 5-3 Operations-Level Port options

Command Syntax and Usage

interface port *<port-identifier>* **dot1x init**

Re-initializes the 802.1x access-control parameters for the port. The following actions take place, depending on the 802.1x port configuration:

- **force unauth** - the port is placed in unauthorized state, and traffic is blocked.
- **auto** - the port is placed in unauthorized state, then authentication is initiated.
- **force auth** - the port is placed in authorized state, and authentication is not required.

Command Mode: priv-exec

interface port { *<port-identifier>* } **dot1x re-authenticate**

Re-authenticates the supplicant (client) attached to the port. This command only applies if the port's 802.1x mode is configured as auto.

Command Mode: priv-exec

Operations-Level VRRP Options

Table 5-4 Virtual Router Redundancy Operations options

Command Syntax and Usage

router vrrp backup *<router number>*

Forces the specified master virtual router on this switch into backup mode. This is generally used for passing master control back to a preferred switch once the preferred switch has been returned to service after a failure. When this command is executed, the current master gives up control and initiates a new election by temporarily advertising its own priority level as 0 (lowest). After the new election, the virtual router forced into backup mode by this command will resume master control in the following cases:

- This switch owns the virtual router (the IP addresses of the virtual router and its IP interface are the same)
- This switch's virtual router has a higher priority and preemption is enabled.
- There are no other virtual routers available to take master control.

Command Mode: priv-exec

Operations-Level BGP Options

Table 5-5 IP BGP Operations options

Command Syntax and Usage

router bgp start *<peer number>*

Starts the peer session.

Command Mode: priv-exec

router bgp stop *<peer number>*

Stops the peer session.

Command Mode: priv-exec

show ip bgp state

Displays the current BGP operational state.

Command Mode: priv-exec



CHAPTER 6

Boot Options

To use the Boot Options commands, you must be logged in to the switch as the administrator. The Boot Options commands provide options for:

- Selecting a switch software image to be used when the switch is next reset
- Selecting a configuration block to be used when the switch is next reset
- Downloading or uploading a new software image to the switch via FTP/TFTP

In addition to the Boot commands, you can use a Web browser or SNMP to work with switch image and configuration files. To use SNMP, refer to “Working with Switch Images and Configuration Files” in the (Alteon OS CLI) *Command Reference*.

The boot options are discussed in the following sections.

Scheduled Reboot of the Switch

This feature allows the switch administrator to schedule a reboot to occur at a particular time in future. This feature is particularly helpful if the user needs to perform switch upgrades during off-peak hours. You can set the reboot time, cancel a previously scheduled reboot, and check the time of the current reboot schedule.

Scheduled Reboot Commands

Table 6-1 Scheduled Reboot commands

Command Syntax and Usage

boot schedule <time value>

Configures the switch reset time.

Command Mode: config

no boot schedule

Cancels the switch reset time.

Command Mode: config

show boot

Displays the current switch reboot schedule.

Command Mode: All except User EXEC

Updating the Switch Software Image

The switch software image is the executable code running on the GbE Switch Module. A version of the image ships with the switch, and comes pre-installed on the device. As new versions of the image are released, you can upgrade the software running on your switch. To get the latest version of software available for your GbE Switch Module, go to:

<http://www.ibm.com/pc/support>

Click on software updates. Use the **show boot** command to determine the current software version.

Upgrading the software image on your switch requires the following:

- Loading the new image onto a FTP or TFTP server on your network
- Transferring the new image from the FTP or TFTP server to your switch
- Selecting the new software image to be loaded into switch memory the next time the switch is reset

Loading New Software to Your Switch

The switch can store up to two different software images, called `image1` and `image2`, as well as boot software, called `boot`. When you load new software, you must specify where it should be placed: either into `image1`, `image2`, or `boot`.

For example, if your active image is currently loaded into `image1`, you would probably load the new image software into `image2`. This lets you test the new software and reload the original active image (stored in `image1`), if needed.

To load a new software image to your switch, you need the following:

- The image or boot software loaded on a FTP/TFTP server on your network
- The hostname or IP address of the FTP/TFTP server
- The name of the new software image or boot file

NOTE – The DNS parameters must be configured if specifying hostnames.

When the above requirements are met, use the following procedure to download the new software to your switch.

1. **In Privileged EXEC mode, enter the following command:**

```
Router# copy tftp <image1|image2|boot-image>
```

or

```
Router# copy ftp <image1|image2|boot-image>
```

2. **Enter the hostname or IP address of the FTP or TFTP server.**

```
Address or name of remote host: <name or IP address>
```

3. **Enter the name of the new software file on the server.**

```
Source file name: <filename>
```

The exact form of the name will vary by server. However, the file location is normally relative to the FTP or TFTP directory (usually `/tftpboot`).

4. **Enter your username and password for the server, if applicable.**

```
User name: <username> or <Enter>
```

5. **The system prompts you to confirm your request.**

You should next select a software image to run, as described below.

Selecting a Software Image to Run

You can select which software image (image1 or image2) you want to run in switch memory for the next reboot.

1. **In Global Configuration mode, enter:**

```
Router(config)# boot image {image1|image2}
```

2. **Enter the name of the image you want the switch to use upon the next boot.**

The system informs you of which image set to be loaded at the next reset:

```
Next boot will use switch software image1 instead of image2.
```

Uploading a Software Image from Your Switch

You can upload a software image from the switch to a FTP or TFTP server.

1. In Privileged EXEC mode, enter:

```
Router# copy <image1|image2|boot-image> tftp
```

or

```
Router# copy <image1|image2|boot-image> ftp
```

2. Enter the name or the IP address of the FTP or TFTP server:

```
Address or name of remote host: <name or IP address>
```

3. Enter the name of the file into which the image will be uploaded on the FTP or TFTP server:

```
Destination file name: <filename>
```

4. Enter your username and password for the server, if applicable.

```
User name: <username> or <Enter>
```

5. The system then requests confirmation of what you have entered. To have the file uploaded, enter Y.

```
image2 currently contains Software Version 1.2.0
that was downloaded at 0:23:39 Thu Jan 1, 2005.
Upload will transfer image2 (2788535 bytes) to file "image1"
on FTP/TFTP server 1.90.90.95.
Confirm upload operation (y/n) ? y
```

Selecting a Configuration Block

When you make configuration changes to the GbE Switch Module, you must save the changes so that they are retained beyond the next time the switch is reset. When you perform a save operation (`copy running-config startup-config`), your new configuration changes are placed in the *active* configuration block. The previous configuration is copied into the *backup* configuration block.

There is also a *factory* configuration block. This holds the default configuration set by the factory when your GbE Switch Module was manufactured. Under certain circumstances, it may be desirable to reset the switch configuration to the default. This can be useful when a custom-configured GbE Switch Module is moved to a network environment where it will be re configured for a different purpose.

Use the following procedure to set which configuration block you want the switch to load the next time it is reset:

1. **In Global Configuration mode, enter:**

```
Router (config)# boot configuration-block {active|backup|factory}
```

Resetting the Switch

You can reset the switch to make your software image file and configuration block changes occur.

NOTE – Resetting the switch causes the Spanning Tree Group to restart. This process can be lengthy, depending on the topology of your network.

NOTE – Resetting the switch causes the date and time to revert to default values.

Use the following commands and to reenter the current date and time:

```
>>Router (config)# system date <yyyy><mm><dd>
```

```
>>Router (config)# system time <hh><mm><ss>
```

In Privileged EXEC mode, enter:

```
>> Router# reload
```

You are prompted to confirm your request.

```
Reset will use software "image2" and the active config block.
>> Note that this will RESTART the Spanning Tree,
>> which will likely cause an interruption in network service.
Confirm reload (y/n) ?
```

Accessing the Alteon OS CLI

To access the Alteon OS CLI, enter the following command from the NNCLI:

```
Router(config)# boot cli-mode aos
```

The default command-line interface for the GbESM is the Alteon OS CLI. To access the NNCLI, enter the following command and reset the GbESM:

```
Main# boot/mode nncli
```


CHAPTER 7

Maintenance Commands

The maintenance commands are used to manage dump information and forward database information. They also include debugging commands to help with troubleshooting.

Dump information contains internal switch state data that is written to flash memory on the GbE Switch Module after any one of the following occurs:

- The switch administrator forces a switch *panic*. The **debug panic** command causes the switch to dump state information to flash memory, and then causes the switch to reboot.
- The watchdog timer forces a switch reset. The purpose of the watchdog timer is to reboot the switch if the switch software freezes.
- The switch detects a hardware or software problem that requires a reboot.

To use the maintenance commands, you must be logged in to the switch as the administrator.

Table 7-1 Maintenance Command Options

Command Syntax and Usage

show flash-dump-uuencode

Displays dump information in uuencoded format.

Command mode: All except User EXEC

For details, see [page 247](#).

copy flash-dump tftp

Saves the system dump information via TFTP.

Command mode: All except User EXEC

For details, see [page 248](#).

copy flash-dump ftp

Saves the system dump information via FTP.

Command mode: All except User EXEC

clear flash-dump

Clears dump information from flash memory.

Command mode: All except User EXEC

Table 7-1 Maintenance Command Options

Command Syntax and Usage

debug panic

Dumps MP information to FLASH and reboots.

Command mode: All except User EXEC

For details, see [page 249](#).

show tech-support

Dumps all GbE Switch Module information, statistics, and configuration. You can log the output (tsdmp) into a file.

Command mode: All except User EXEC

copy tech-support tftp

Redirects the technical support dump (tsdmp) to an external TFTP server.

Command mode: All except User EXEC

copy tech-support ftp

Redirects the technical support dump (tsdmp) to an external FTP server.

Command mode: All except User EXEC

System Maintenance Commands

System maintenance commands are reserved for use by IBM Service Support. The options are used to perform system debugging.

Table 7-2 System Maintenance Command Options

Command Syntax and Usage

debug debug-flags

This command sets the flags that are used for debugging purposes by service support group.

Command mode: All except User EXEC

Forwarding Database Commands

The Forwarding Database commands can be used to view information and to delete a MAC address from the forwarding database or to clear the entire forwarding database. This is helpful in identifying problems associated with MAC address learning and packet forwarding decisions.

Table 7-3 FDB Manipulation Command Options

Command Syntax and Usage

show mac-address-table address {<mac-address>}

Displays a single database entry by its MAC address. You are prompted to enter the MAC address of the device. Enter the MAC address using the `xx:xx:xx:xx:xx:xx` format (such as `08:00:20:12:34:56`) or `xxxxxxxxxxxx` format (such as `080020123456`).

Command mode: All except User EXEC

show mac-address-table port {<port-identifier>}

Displays all FDB entries for a particular port.

Command mode: All except User EXEC

show mac-address-table vlan {<vlan-identifier>}

Displays all FDB entries on a single VLAN.

Command mode: All except User EXEC

show mac-address-table

Displays all entries in the Forwarding Database.

Command mode: All except User EXEC

no mac-address-table <mac-address> [**vlan** <vlan-instance>]

Removes a single FDB entry.

Command mode: All except User EXEC

clear mac-address-table

Clears the entire Forwarding Database from switch memory.

Command mode: All except User EXEC

Debugging Commands

The Miscellaneous Debug Commands display trace buffer information about events that can be helpful in understanding switch operation. You can view the following information using the debug commands:

- Events traced by the Management Processor (MP)
- Events traced to a buffer area when a reset occurs

If the switch resets for any reason, the MP trace buffer is saved into the snap trace buffer area. The output from these commands can be interpreted by IBM Service Support.

Table 7-4 Miscellaneous Debug Command Options

Command Syntax and Usage

debug mp-trace

Displays the Management Processor trace buffer. Header information similar to the following is shown:

```
MP trace buffer at 13:28:15 Fri May 25, 2001; mask: 0x2ffdf748
```

The buffer information is displayed after the header.

Command mode: All except User EXEC

debug mp-snap

Displays the Management Processor snap (or post-mortem) trace buffer. This buffer contains information traced at the time that a reset occurred.

Command mode: All except User EXEC

clear flash-config

Deletes all flash configuration blocks.

Command mode: config

ARP Cache Commands

Table 7-5 Address Resolution Protocol Command Options

Command Syntax and Usage

show ip arp find *<ip-address>*

Shows a single ARP entry by IP address.

Command mode: All except User EXEC

show ip arp interface *<port-instance>*

Shows ARP entries on a single port.

Command mode: All except User EXEC

show ip arp vlan *<vlan-instance>*

Shows ARP entries on a single VLAN.

Command mode: All except User EXEC

show ip arp reply

Shows the list of IP addresses which the switch will respond to for ARP requests.

Command mode: All except User EXEC

show ip arp

Shows all ARP entries.

Command mode: All except User EXEC

clear ip arp-cache

Clears the entire ARP list from switch memory.

Command mode: All except User EXEC

NOTE – To display all or a portion of ARP entries currently held in the switch, you can also refer to “ARP Information” on [page 60](#).

IP Route Manipulation Commands

Table 7-6 IP Route Manipulation Command Options

Command Syntax and Usage

show ip route address <ip-address>

Shows a single route by destination IP address.

Command mode: All except User EXEC

show ip route gateway <ip-address>

Shows routes to a default gateway.

Command mode: All except User EXEC

show ip route type {indirect|direct|local|broadcast|martian|multicast}

Shows routes of a single type.

Command mode: All except User EXEC

For a description of IP routing types, see [Table 2-23 on page 59](#)

show ip route tag {fixed|static|address|rip|ospf|bgp|broadcast|martian|multicast}

Shows routes of a single tag.

Command mode: All except User EXEC

For a description of IP routing tags, see [Table 2-24 on page 60](#)

show ip route interface <interface-instance>

Shows routes on a single interface.

Command mode: All except User EXEC

show ip route

Shows all routes.

Command mode: All except User EXEC

clear ip route

Clears the route table from switch memory.

Command mode: All except User EXEC

NOTE – To display all routes, you can also refer to “IP Routing Information” on page 57.

IGMP Group Information

Table 7-7 describes the IGMP Snooping maintenance commands.

Table 7-7 IGMP Multicast Group Command Options

Command Syntax and Usage

show ip igmp groups address <ip-address>

Displays a single IGMP multicast group by its IP address.

Command mode: All except User EXEC

show ip igmp groups vlan <vlan-instance>

Displays all IGMP multicast groups on a single VLAN.

Command mode: All except User EXEC

show ip igmp groups interface <port-instance>

Displays all IGMP multicast groups on a single port.

Command mode: All except User EXEC

show ip igmp groups trunk <trunk-id>

Displays all IGMP multicast groups on a single trunk group.

Command mode: All except User EXEC

show ip igmp groups

Displays information for all multicast groups.

Command mode: All except User EXEC

clear ip igmp snoop

Clears the IGMP group table.

Command mode: All except User EXEC

Uencode Flash Dump

Using this command, dump information is presented in uencoded format. This format makes it easy to capture the dump information as a file or a string of characters.

If you want to capture dump information to a file, set your communication software on your workstation to capture session data prior to issuing the **show flash-dump uencode** command. This will ensure that you do not lose any information. Once entered, the **show flash-dump uencode** command will cause approximately 23,300 lines of data to be displayed on your screen and copied into the file.

Using the **show flash-dump uuencode** command, dump information can be read multiple times. The command does not cause the information to be updated or cleared from flash memory.

NOTE – Dump information is not cleared automatically. In order for any subsequent dump information to be written to flash memory, you must manually clear the dump region. For more information on clearing the dump region, see [page 249](#).

To access dump information, enter:

```
Router# show flash-dump uuencode
```

The dump information is displayed on your screen and, if you have configured your communication software to do so, captured to a file. If the dump region is empty, the following appears:

```
No FLASH dump available.
```

TFTP or FTP System Dump Put

Use these commands to put (save) the system dump to a TFTP or FTP server.

NOTE – If the TFTP/FTP server is running SunOS or the Solaris operating system, the specified **copy flash-dump tftp** (or **ftp**) file must exist *prior* to executing the **copy flash-dump tftp** command (or **copy flash-dump ftp**), and must be writable (set with proper permission, and not locked by any application). The contents of the specified file will be replaced with the current dump data.

To save dump information via TFTP, enter:

```
Router# copy flash-dump tftp <server> <filename>
```

Where *server* is the TFTP server IP address or hostname, and *filename* is the target dump file.

To save dump information via FTP, enter:

```
Router# copy flash-dump ftp <server> <filename>
```

Where *server* is the FTP server IP address or hostname, and *filename* is the target dump file.

Clearing Dump Information

To clear dump information from flash memory, enter:

```
Router# clear flash-dump
```

The switch clears the dump region of flash memory and displays the following message:

```
FLASH dump region cleared.
```

If the flash dump region is already clear, the switch displays the following message:

```
FLASH dump region is already clear.
```

Panic Command

The **debug panic** command causes the switch to immediately dump state information to flash memory and automatically reboot.

To select panic, enter:

```
>> Router# debug panic  
A FLASH dump already exists.  
Confirm replacing existing dump and reboot [y/n]:
```

Enter **y** to confirm the command:

```
Confirm dump and reboot [y/n]: y
```

The following messages are displayed:

```
Starting system dump...done.  
  
Rebooted because of PANIC command.  
Booting complete 0:01:01 Thu Jul 1, 2006:  
Version 1.2.0 from FLASH image1, active config block.  
  
No POST errors (0xff).  
  
Production Mode.
```

Unscheduled System Dumps

If there is an unscheduled system dump to flash memory, the following message is displayed when you log on to the switch:

```
Note: A system dump exists in FLASH. The dump was saved
      at 13:43:22 Wednesday January 30, 2006. Use show flash-dump
      uuencode to
      extract the dump for analysis and clear flash-dump to
      clear the FLASH region. The region must be cleared
      before another dump can be saved.
```

Index

A

abbreviating commands (CLI)	20
access control	
user	143
ACL Port commands	149
ACL statistics	112
active configuration block	122, 238
active IP interface	212
active port	
VLAN	213
active switch configuration	
restoring	227
active switch, saving and loading configuration	227
addr	
IP route tag	60
administrator account	22
aging	
STP bridge option	165
STP information	47, 50
autonomous system filter action	184
autonomous system filter path	
action	184
as	184
aspath	184

B

backup configuration block	238
----------------------------------	-----

BGP

configuration	196
eBGP	196
filters, aggregation configuration	200
iBGP	196
in route	198
IP address, border router	197
IP route tag	60
keep-alive time	197
peer	196
peer configuration	197
redistribution configuration	199
remote autonomous system	197
router hops	198
BLOCKING (port state)	48
boot options menu	233
bootstrap protocol	206
Border Gateway Protocol	60
configuration	196
Border Gateway Protocol (BGP)	
operations-level options	232
BPDU. <i>See</i> Bridge Protocol Data Unit.	
bridge priority	47, 53
Bridge Protocol Data Unit (BPDU)	47, 53
STP transmission frequency	164
Bridge Spanning-Tree parameters	164
broadcast	
IP route tag	60
IP route type	59

C

capture dump information to a file	247
Cisco Ether Channel	167
CIST information	52
clear	
dump information	249
command (help)	19

commands		default gateway	
abbreviations.....	20	information	57
conventions used in this manual	12	interval, for health checks	177
shortcuts	20	default password.....	22
tab completion.....	20	delete	
commands, NNCLI		FDB entry	243
modes	16	direct (IP route type)	59
configuration		directed broadcasts	180
802.1x.....	153	DISABLED (port state).....	48
CIST.....	159	disconnect idle timeout	22
default gateway interval, for health checks	177	downloading software	234
default gateway IP address.....	177	dump	
dump command.....	226	configuration command	226
failover.....	171	maintenance	241
flow control	148	state information	249
IGMP.....	201	duplex mode	
IP static route	178	link status.....	23, 75
port link speed.....	147	dynamic routes	246
port mirroring.....	224		
port trunking	167	E	
RIP	185	EtherChannel	
save changes	122	as used with port trunking	167
SNMP	130		
switch IP address	176	F	
TACACS+.....	127	factory configuration block.....	238
VLAN default (PVID).....	146	failover	
VLAN IP interface.....	176	configuration	171
VLAN tagging	146	FDB statistics.....	92
VRRP	207	fixed	
configuration block		IP route tag	60
active	238	flag field.....	61
backup	238	flow control	23, 75
factory.....	238	configuring	148
selection	238	forwarding configuration	
configuration menu	121	IP forwarding configuration	180
configuring routing information protocol.....	185	forwarding database (FDB)	241
COS queue information	43	delete entry	243
cost		Forwarding Database Information	38
STP information	48, 51, 54	Forwarding Database Menu	242
STP port option	166	forwarding state (FWD)	40, 47, 53, 54
CPU statistics	111	fwd (STP bridge option).....	164
CPU utilization	111	FwdDel (forward delay), bridge port	47, 50, 53
D		G	
daylight savings time	129	GEA Port mapping	77
debugging	241	Greenwich	129
		Greenwich Mean Time (GMT)	129

H

health checks	
default gateway interval, retries	177
retry, number of failed health checks	177
hello	
STP information	47, 50, 53
help.....	19
hot-standby failover	211
hprompt	
system option	123
HTTPS	145

I

ICMP statistics	100
idle timeout	
overview.....	22
IEEE 802.1s.....	50
IEEE 802.1w.....	50
IEEE standards	
802.1d	47, 162
802.1s	158
802.1w	158
802.1x	44
IGMP statistics.....	104
image	
downloading	234
software, selecting	236
indirect (IP route type)	59
Information	
IGMP Information	72, 73
IGMP Multicast Router Information	247
Trunk Group Information.....	54
information	
802.1p	42
Information commands	23
interface statistics	105
IP address	
ARP information	61
configuring default gateway	177
IP forwarding	
directed broadcasts	180
IP forwarding information	57
IP Information.....	57, 71
IP interface	
active	212
configuring address.....	176
configuring VLANs	176

IP interfaces	59
information	57
IP route tag.....	60
priority increment value (ifs) for VRRP	215
IP network filter configuration	180
IP Route Manipulation	246
IP routing	
tag parameters	60
IP Static Route commands	178
IP statistics	95

L

LACP	169
Layer 2 commands.....	37
Layer 3 commands.....	57
LEARNING (port state)	47, 48, 53
link	
speed, configuring.....	147
Link Aggregation Control Protocol.....	169
link status.....	23
command	75
duplex mode.....	23, 75
port speed.....	23, 75
Link Status Information.....	75
linkt (SNMP option)	131
LISTENING (port state)	48
lmask (routing option).....	57
lnet (routing option)	57
local (IP route type)	59
log	
syslog messages	124

M

MAC (media access control) address ..	24, 34, 38, 61, 242
Maintenance Menu	241
Management Processor (MP)	243
display MAC address.....	24, 34
manual style conventions.....	12
martian	
IP route tag (filtered)	60
IP route type (filtered out)	59
mation	54
MaxAge (STP information)	47, 50, 53
MD5 cryptographic authentication	190
MD5 key.....	192
media access control. <i>See</i> MAC address.	

meter	
ACL	149
Miscellaneous Debug commands	243
monitor port.....	225
mp	
packet	109
MP. <i>See</i> Management Processor.	
multicast	
IP route type	59
Multiple Spanning Tree	
configuration.....	158
mxage (STP bridge option)	164

N

NNCLI commands	
modes	16
notice	123
NTP synchronization	129
NTP time zone	129

O

online help.....	19
Operations commands	229
operations-level BGP options	232
Operations-Level Port Options	230, 231
operations-level VRRP options.....	231
ospf	
area index	189
authentication key.....	192
cost of the selected path.....	191
cost value of the host.....	194
dead, declaring a silent router to be down	192
dead, health parameter of a hello packet	193
export.....	195
fixed routes.....	196
hello, authentication parameter of a hello packet....	

193

host entry configuration	194
host routes.....	188
interface.....	188
interface configuration	191
link state database	188
Not-So-Stubby Area.....	189
priority value of the switch interface	191
range number	188
route redistribution configuration	195
spf, shortest path first.....	190
stub area	189
summary range configuration	190
transit area	189
transit delay.....	192
type.....	189
virtual link	188
virtual link configuration.....	193
virtual neighbor, router ID.....	193
OSPF Database Information	67
OSPF General Information	66
OSPF Information	65
OSPF Information Route Codes	69

P

panic	
command.....	249
switch (and Maintenance Menu option)	241
parameters	
tag.....	60
type.....	59
Password	
user access control	143
password	
administrator account	22
default	22
user account	21
passwords	21
ping.....	19
poisoned reverse, as used with split horizon	186
Port configuration.....	146
port configuration	146
Port Menu	
configuration options.....	146
port mirroring	
configuration.....	224
Port number	75
port speed	23, 75

port states		save command.....	238
UNK (unknown).....	40	secret	
port trunking		radius server.....	126
description.....	167	Secure Shell.....	124
port trunking configuration.....	167	shortcuts (CLI).....	20
ports		snap traces	
disabling (temporarily).....	148	buffer.....	244
information.....	76	SNMP options.....	130
IP status.....	57	SNMP statistics.....	113
membership of the VLAN.....	38, 55	software	
priority.....	47, 53	image.....	234
VLAN ID.....	23, 76	image file and version.....	24, 35
preemption		spanning tree	
assuming VRRP master routing authority.....	209	configuration.....	162
prisrv		Spanning-Tree Protocol.....	54
primary radius server.....	126	bridge aging option.....	165
PVID (port VLAN ID).....	23, 76	bridge parameters.....	164
		bridge priority.....	47, 53
R		port cost option.....	166
read community string (SNMP option).....	131	root bridge.....	47, 53, 164
reboot.....	241, 249	switch reset effect.....	239
receive flow control.....	148	split horizon.....	186
reference ports.....	40	state (STP information).....	48, 51, 54
re-mark.....	150	static	
retries		IP route tag.....	60
radius server.....	126	static route	
retry		rem.....	178
health checks for default gateway.....	177	statics route	
rip		add.....	178
IP route tag.....	60	statistics	
RIP Information.....	71	management processor.....	109
RIP information.....	70	Statistics Menu.....	79
RIP. <i>See</i> Routing Information Protocol.		subnets	
route statistics.....	98	IP interface.....	176
router hops.....	198	switch	
routing information protocol		name and location.....	24, 34
configuration.....	185	resetting.....	239
Routing Information Protocol (RIP).....	60	system	
options.....	186	contact (SNMP option).....	130
poisoned reverse.....	186	date and time.....	24, 34
split horizon.....	186	information.....	34
version 1 parameters.....	185	location (SNMP option).....	130
RSTP information.....	49	System Information.....	24
		system options	
S		hprompt.....	123
save (global command).....	122	tport.....	142
		wport.....	142

T

tab completion (CLI)	20
TCP statistics	101, 110
Telnet	
configuring switches using	226
telnet	
radius server	126
text conventions	12
TFTP	235
PUT and GET commands	227
TFTP server	227
timeout	
radius server	126
timeouts	
idle connection	22
tnport	
system option	142
trace buffer	243
traceroute	19
transmit flow control	148
Trunk Group Information	54
trunk hash algorithm	168
type of area	
ospf	189
type parameters	59
typographic conventions, manual	12
tzone	129

U

UCB statistics	111
UDP statistics	103
unknown (UNK) port state	40
Unscheduled System Dump	250
upgrade, switch software	234
user access control configuration	143
user account	21
Uencode Flash Dump	247

V

virtual router	
description	207
master mode	212
tracking criteria	210
virtual router group configuration	210
virtual router group priority tracking	212
Virtual Router Redundancy Protocol (VRRP)	
authentication parameters for IP interfaces	213
operations-level options	231
priority tracking options	197, 200, 210
Virtual Router Redundancy Protocol configuration	207
virtual routers	
increasing priority level of	209
priority increment values (vrs) for VRRP	215
VLAN	
active port	213
configuration	173
VLAN tagging	
port configuration	146
port restrictions	174
VLANs	
ARP entry information	61
information	55
name	38, 55
port membership	38, 55
setting default number (PVID)	146
tagging	23, 76, 174
VLAN Number	55
VRRP	
interface configuration	213
master advertisements	208
tracking configuration	215
VRRP Information	73
VRRP master advertisements	
time interval	211
VRRP statistics	107

W

watchdog timer	241
weights	
setting virtual router priority values	215
wport	142